
INSTALLATION INSTRUCTIONS

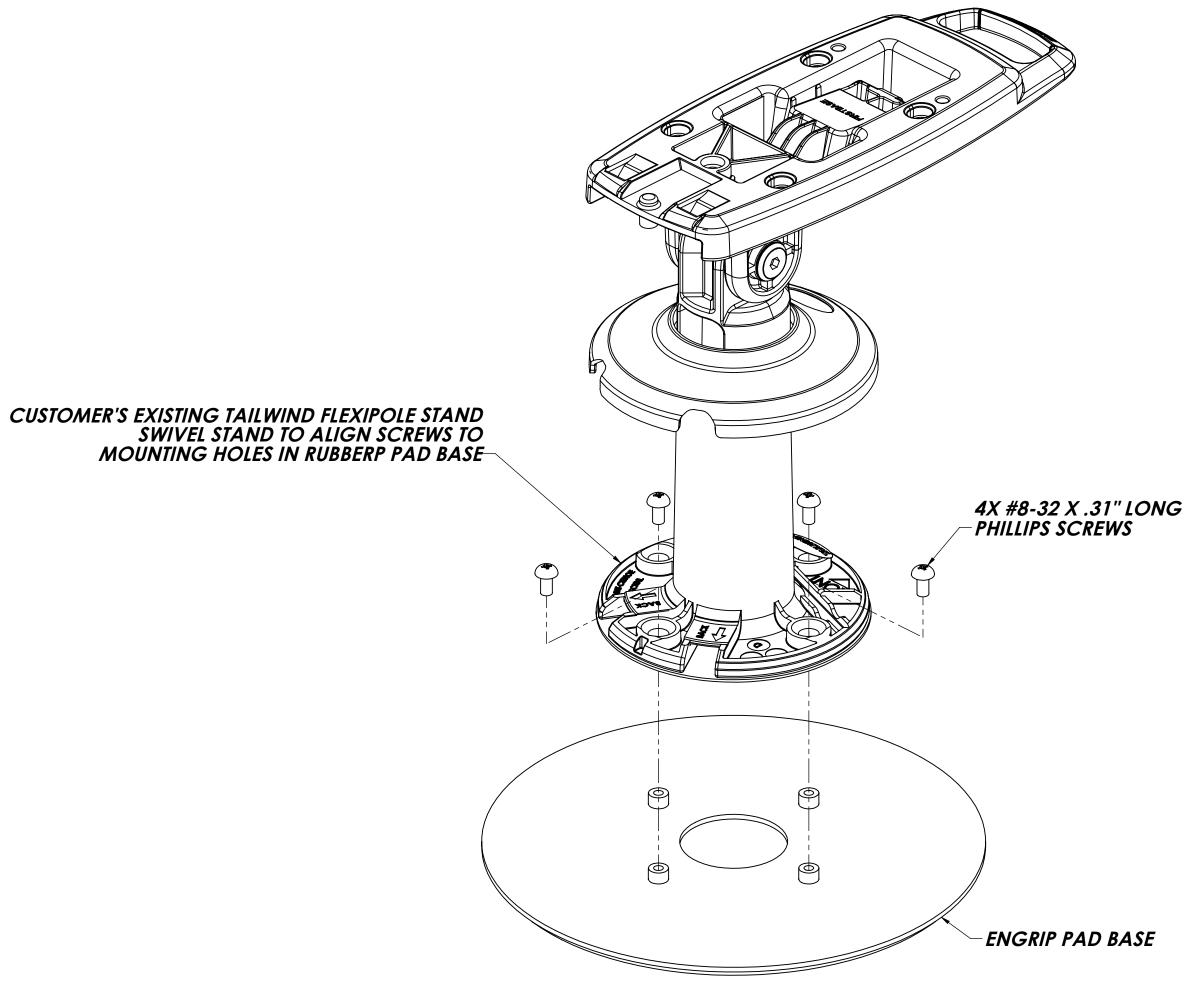

TOOLS LIST:

1. #2 PHILLIPS SCREW DRIVER

ASSEMBLY STEPS:

1. ASSEMBLE **ENGRIP PAD BASE** TO **CUSTOMER'S TAILWIND FLEXIPOLE STAND** USING **4X #8-32 X .31" LONG PHILLIPS SCREWS** AS SHOWN.

6

NOTE:

REFER TO 367-0731-NKIT FOR REMOVAL, RELOCATION OR CLEANING INSTRUCTIONS PRODUCT WARRANTY IS VOID IF THESE INSTRUCTIONS ARE NOT FOLLOWED!

11/23/20 JVT SY REV. DESCRIPTION DATE BY CHK'D DIMS. AND TOLERANCES PER ASME Y14.5 - 1994 DRAWN J. TERVEER UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: 11/23/2020 CUSTOMER INSTRUCTIONS, FRACTIONAL ± 1/32 7.00" DIAMETER METAL BASE, 2 PLC. DEC. ± .03 DO NOT SCALE DRAWING WITH RUBBER PAD, MOUNTS TO 3 PLC. DEC. ± .010 TAILWIND FLEXIPOLE STAND SEE NOTES THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF HAVIS AND REPRODUCTION IN PART OR IN WHOLE WITHOUT THE WRITTEN PERMISSION OF HAVIS IS PROHIBITED. SIZE DWG. NO. ANGULAR ± 0°30' 367-4834-RP SHEET 1 OF 1

3