

1) Open Windows Update and select View all optional updates


How to Find and Install Windows Optional Updates

To locate optional updates, follow these steps:

1. Right-click on the Windows **Start** button.
2. Click on **Settings**.
3. Go to **Update & Security**.
4. Navigate to the **Windows Update** tab in the left sidebar.
5. Click on the **View all optional updates** in the right-hand pane.



2) Select and download Exar Corporation Driver

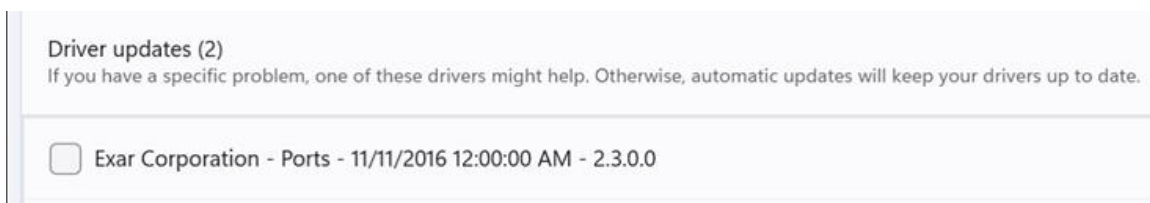

3) Once driver loads, you can confirm via Device Manager Ports (COM & LPT):

