

INSTALL INSTRUCTIONS C-VS-1000-IMP-1 2006-2009 CHEVROLET IMPALA


TOOLS REQUIRED:

Ratcheting wrench
Sockets - 7/16"

Screwdriver set
T-20 torx bit

HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART #</u>
6	1/4-20 x 3/4" Phillips machine screw	GSM33124
6	1/4" Flat washer	GSM31005
4	1/4-20 x 1/2" Hex head bolt	GSM33000
4	1/4-20 x 3/4" Hex head bolt	GSM33001
8	1/4" Serrated nut	GSM30005
2	#10 x 3/4" Phillips machine screw	GSM33119
2	#10 Flat washer	GSM31003
1	Transmission hump bracket	C-B43
2	Guide bracket	CM001706
1	Driver side under seat support bracket	CM001708
1	Passenger side under seat support bracket	CM001709
1	Vehicle specific under dash console housing	C-VS-1000-IMP-1-H
1	4.5" Length Trak mount extrusion	CM93055-8
1	Torx Screw Hardware Kit	C-HK-1

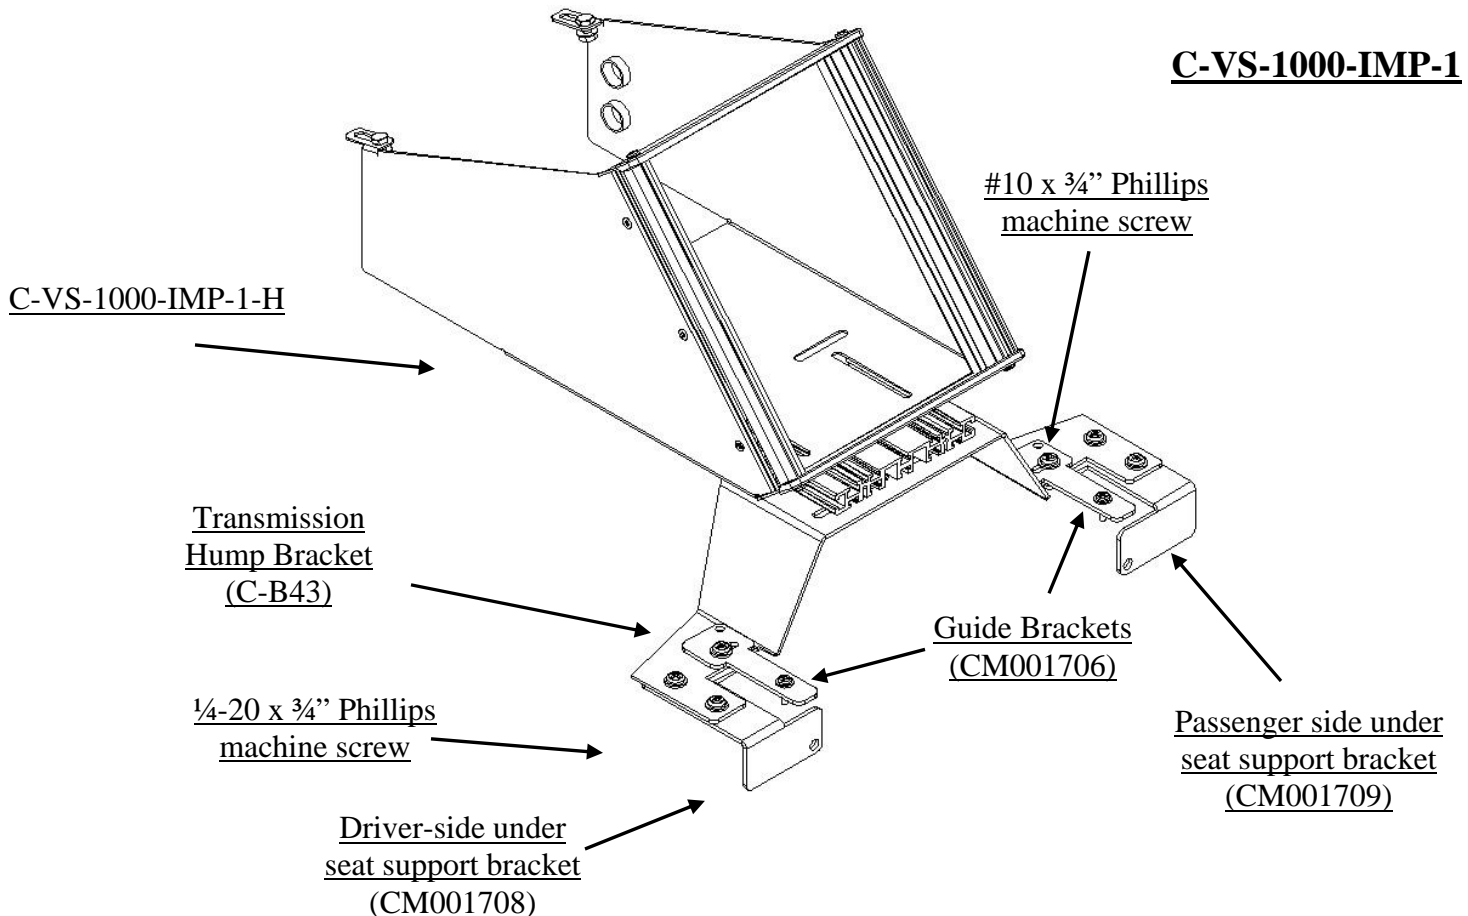

Always!

- Disconnect the vehicles' battery. Removing seat bolts on some vehicles may give the vehicles computer a false reading resulting in warning lights. This requires the vehicles' computer to be reset.
- Read all instructions before installing any Havis-Shields Equipment Corp products.
- Check for obstructions (Wire, brake lines, fuel tank, etc.) before drilling any holes!
- Use hardware provided with install kit
- For product support, visit the Install Instructions Section of our website at <http://havis.com/Installation/Installation.html>, email technicalsupport@havis.com or call 1-800-524-9900.



Cut a slit in the floor, next to the seat rail to allow Under seat support bracket to slide under seat rail



Slide under seat support brackets into position as shown



Loosely assemble Guide bracket by sliding into lower side of seat rail. Loosely attach #10 x 3/4" phillips machine screw and washer through seat rail hole to nutsert on Guide bracket.



Attach the 4.5" section of trak to the C-B43 transmission hump bracket using (4) 1/4-20 x 1/2" bolts and serrated nuts. Slide (2) 1/4-20 x 3/4" bolts into slots of trak for console mounting. *Note: Make sure wider slots are used for mounting console. Narrow slots are used 2 for hump bracket.*



Attach C-B43 to Under seat support brackets using (3 per side) 1/4-20 x 3/4" Phillips machine screws and flat washers



Remove the plastic trim panel containing the OEM lighter plugs. Slide (2) 1/4-20 x 3/4" Hex bolts into trak slots. Position console on top of 4.5" section of trak over hex bolts and attach 1/4" serrated nuts. Slide console tight to dash.



Attach forward section of console using tabs on console and existing holes on vehicle.



Attach using 1/4-20 x 3/4" Hex bolts and serrated nuts and tighten



Tighten the 10-32 x 3/4" Phillips machine screw that was loosely attached earlier



Finished look of C-VS-1000-IMP-1 console