

INSTALL INSTRUCTIONS C-VS-1200-GM

2003-2006 YUKON/TAHOE, AND YUKON XL/SUBURBAN SUV'S WITH BUCKET SEATS AND OEM FLOOR CONSOLE & 2003-2007 SIERRA/SILVERADO CLASSIC BODY STYLE PICKUPS

TOOLS REQUIRED:

Phillips screwdriver
Metric socket set
Standard socket set

Panel remover tool
Ratcheting wrench

INSTALLATION:

1. REMOVE NECESSARY TRIM PANELS:

- Remove large dash trim panel that surrounds the radio, climate controls, and speedometer.
- Remove the cup holder and lighter plug trim piece located on the OEM console.
- Remove the armrest/accessory pocket piece.

Note: After armrest/accessory pocket piece is unscrewed press forward and pull up to remove.




This is what you should see at this point.



These are the components that need to be removed for install.

2. MOUNT CONSOLE :

- Replace the large trim piece that surrounds radio and climate controls
- Slide the Havis-Shields Console into place. Front angle slides under large trim piece.
- The small “L” brackets at the bottom of the Havis-Shields Console should be loose until positioned correctly.
- Re-mount accessory pocket and armrest piece after Havis-Shields Console is in place. The three holes in the front previously used to mount this piece, will also go through the Havis-Shields Console.
- Mount the front of the Havis-Shields Console, through the “L” brackets and into the existing holes in the OEM console. Use the OEM screws.
- Tighten the “L” brackets to the Havis-Shields Console.

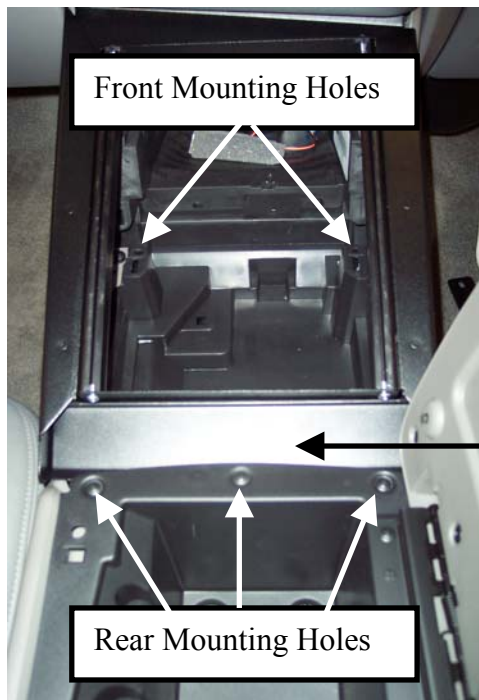

USE FACTORY SCREWS TO ATTACH THE “L” Brackets

THE REAR LIP OF CONSOLE IS PLACED UNDER THE ARM REST POCKET