
C-ADP-118 AND C-ADP-119 PEDESTAL MOUNT INSTALLATION INSTRUCTIONS

- ASSEMBLE THE PEDESTAL MOUNT SHELF TO THE PEDESTAL MOUNT BASE USING THE SUPPLIED HARDWARE (GSM31999 AND GSM30016-1) ACCORDING TO THE EXPLODED VIEW TO THE RIGHT.
- PLACE THE PEDESTAL MOUNT ASSEMBLY ONTO THE MOUNTING PLATFORM. ALIGNING THE PEDESTAL MOUNT BASE MOUNTING HOLES WITH THE HOLES IN THE MOUNTING PLATFORM. CONSOLE TOP AND HDM POLE MOUNTING OF C-MD-119 IS SHOWN BELOW. THE PEDESTAL MOUNT AND MOTION DEVICE CAN MOUNT TO ANY FLAT SURFACE USING A 2.125" SQUARE MOUNTING PATTERN.
- USING THE 1/4-20 HARDWARE PROVIDED WITH THE MOTION DEVICE, INSERT BOLTS THROUGH THE MOUNTING PLATFORM AND PEDESTAL MOUNT BASE INTO THE THREADED HOLES OF THE MD COG WHEEL BASE.
- ATTACH THE DESIRED DISPLAY MOTION DEVICE TO THE THE DISPLAY MOTION DEVICE.
- WITH THE DISPLAY MOUNTED, ADJUST THE HEIGHT OF THE LOOSENING THE THREE 1/4-20 NYLOCK NUTS ON THE BACK OF THE PEDESTAL MOUNT ASSEMBLY. ONCE DESIRED HEIGHT IS ACHIEVED, RETIGHTEN THE HARDWARE TO COMPLETE THE

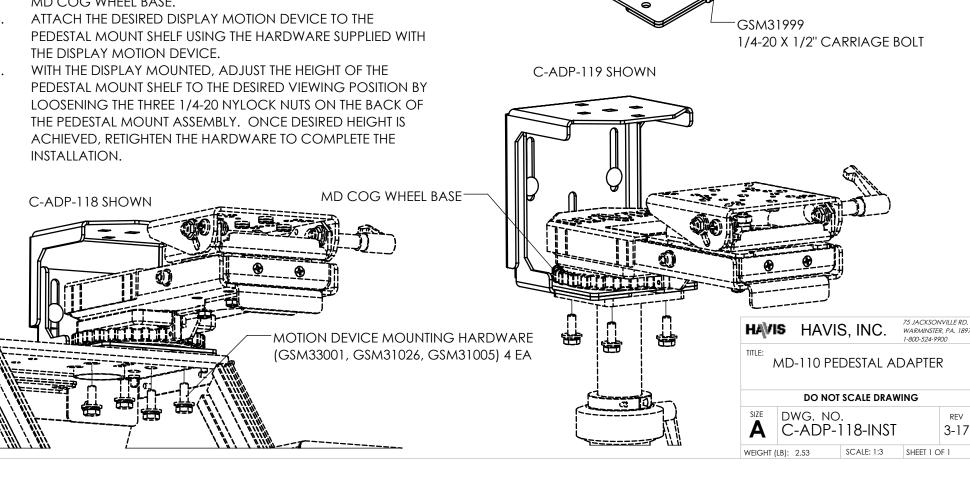

C-ADP-118 SHOWN

GSM30016-1

1/4-20 NYLOCK NUT

PEDESTAL MOUNT SHELF

PEDESTAL MOUNT BASE