INSTALL INSTRUCTIONS
C-DMM-2004 Dash Monitor Mount
2015-2020 Dodge Charger Police Package Vehicle with Standard Interior and with Interior Upgrade Package

---

Notes:

1. *The C-DMM-2000 series Dash Monitor Mount brackets are specifically designed to work with Havis, Inc, model # TSD-101 Touch Screen Display.*
2. *The display mount bracket includes a VESA 75 hole pattern that can also be used for some light weight tablet docking station applications. Acceptable positioning must be determined by end user.*
3. *The C-DMM-2004 will work with all Havis, Inc. consoles made for the Dodge Charger.*

TOOLS REQUIRED: (some tools not needed for all vehicle installations)
- Socket set - metric & standard
- Phillips screwdriver
- Drill & drill bits
- Trim removal tools
- Tape measure
- Pencil / Marker

MOUNT BRACKET PARTS and HARDWARE:
*Installation parts with * come loose in hardware kit bag. Other parts are preassembled*

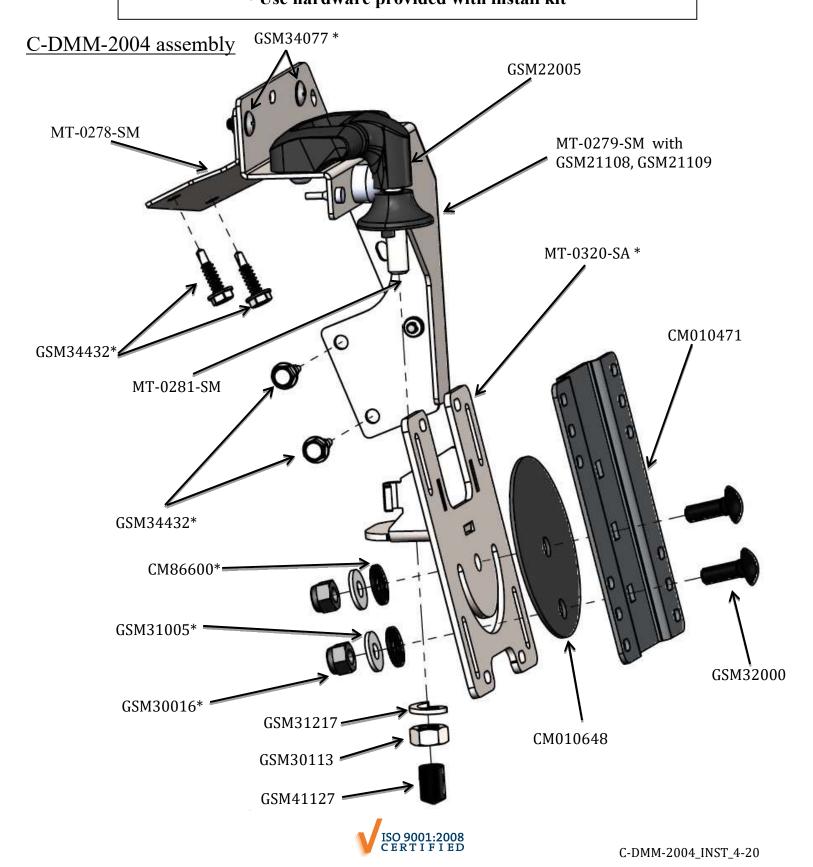| QTY:	DESCRIPTION:	PART #:
1	Charger display mount bracket	MT-0279-SM
1	Charger side support bracket	MT-0281-SM
1	Charger upper support bracket	MT-0278-SM
1	Pivot / display mount bracket	MT-0269-SA *
1	Tilt swivel hinge	GSM22005
1	PVC washer	CM010648
1	VESA rotator plate	CM010471
2	1/4" x 3/4" Carriage bolts	GSM32000
2	1/4" Nylock nut	GSM30016
2	1/4" Flat washer	GSM31005
2	Nylon 1/16" spacer washer	CM86600
1	M8 hex nut SS	GSM30113
1	M8 lock washer SS	GSM31217
6	#10 x 3/4" Self tapping screw	GSM34432 *
6	8-32 x .312" Phillips truss head machine screw	GSM34077 *
1	Vinyl cap (.50" high x .312 - .375 id)	GSM41127
2	Pull through bumper (3mm head)	GSM21109
2	Push in bumper (10mm head)	GSM21108
2	M5 x 10mm Thread forming screw	GSM33774

ISO 9001:2008
CERTIFIED

HAVIS
Productivity in motion

ALWAYS!
• Read all instructions before installing any Havis, Inc products.
• Use hardware provided with install kit

C-DMM-2004 assembly

GSM34077 *

GSM22005

MT-0278-SM

MT-0279-SM with
GSM21108, GSM21109

MT-0320-SA *

CM010471

GSM34432*

MT-0281-SM

GSM34432*

CM86600*

GSM31005*

GSM30016*

GSM31217

GSM30113

GSM32000

CM010648

GSM41127

ISO 9001:2008
CERTIFIED

View of Charger dash before removal

Gently pry along the edges of the dash to release the clips.

Remove dash bezel. The vents may stay in the dash upon removal.

Reseat the vents in their appropriate locations.

Hold C-DMM-2004 bracket assembly up to inside lip on dash the determine approximate mounting location.

Mark holes to be drilled with a paint marker.

ISO 9001:2008
CERTIFIED

C-DMM-2004_INST_4-20

HAVIS
Productivity in motion

Havis, Inc.
75 Jacksonville Road
Warminster, PA 18974
T 800-524-9900 F 215-957-0729
www.havis.com

Verify your marks before drilling

Use 1/8" drill bit and carefully drill your pilot holes.

Install the bracket assembly using four (4) 10 x 3/4" Self tapping screws.

Unscrew the display mount frame bracket and set aside

Carefully re-install dash bezel

Re-install previously removed frame bracket

Connect harnesses to the back of the TSD-101 display.
It is important to also double wire tie the harnesses to provide sturdy strain relief for the plugs.
USB connection from remote Docking station must plug into USB plug closest to front of display.

Attach pivot / display mount bracket to display with M4 x 0.7 x 10mm Phillips head machine screws, lock washers and flat washers. Display mount hardware is included with TSD-101 hardware kit.

Attach bracket with display to the tilt swivel hinge with M8 hex nut and lock washer. Tighten nut and attach vinyl cap on M8 bolt threads.

Wire tie / strain relief the harnesses to main mount bracket.
__Leave slack for full display movement__

Refer to TSD-101 owner's manual for power and computer connection details.

Installation of C-DMM-2004 with TSD-101 complete.

C-DMM-2004_INST_4-20