

INSTALL INSTRUCTIONS

C-DMM-2014 Dash Monitor Mount

2015-2020 Chevrolet Tahoe & Suburban (PPV or Retail)

Notes:

1. *The C-DMM-2000 series Dash Monitor Mount brackets are specifically designed to work with Havis, Inc, model # TSD-101 Touch Screen Display.*
2. *The display mount bracket includes a VESA 75 hole pattern that can also be used for some light weight tablet docking station applications under 5 lbs. Acceptable positioning must be determined by end user.*

TOOLS REQUIRED: *(some tools are not needed for all vehicle installations)*

- Socket set - metric & standard • Drill & drill bits • Tape measure
- Phillips screwdriver • Trim removal tools • Pencil / Marker

MOUNT BRACKET PARTS and HARDWARE:


Installation parts will * come loose in hardware kit bag. Other parts are preassembled

QTY:	DESCRIPTION:	PART #:
1	Main dash mount bracket	CM009404
1	Pivot / display mount bracket	MT-0320-SA
1	Tilt swivel hinge	GSM22005
1	VESA rotator plate	CM010471
1	PVC washer	CM010648
1	Driver side support bracket	CM009452 *
1	Passenger side support bracket	CM008998 *
2	1/4" x 3/4" Carriage bolts	GSM32000
2	Nylon 1/16" spacer washer	CM86600
2	1/4" Nylock nut	GSM30016
2	1/4" Flat washer	GSM31005
4	10-32 x 1/2" Machine screw	GSM33118 *
4	10-32 Keps nut	GSM30028 *
1	M8 hex nut SS	GSM30113
1	M8 lock washer SS	GSM31217
3	Machine Screw 10-32 x 1/2"	GSM33118
3	#10 Flat washer	GSM31003
1	Vinyl cap (.50" high x .312 - .375 id)	GSM41127
2	M5 x 10mm Thread forming screw	GSM33774
2	Pull through bumper (3mm head)	GSM21109
2	Push in bumper (10mm head)	GSM21108

ALWAYS!

- Read all instructions before installing any Havis, Inc products.
- Use hardware provided with install kit

C-DMM-2014 assembly

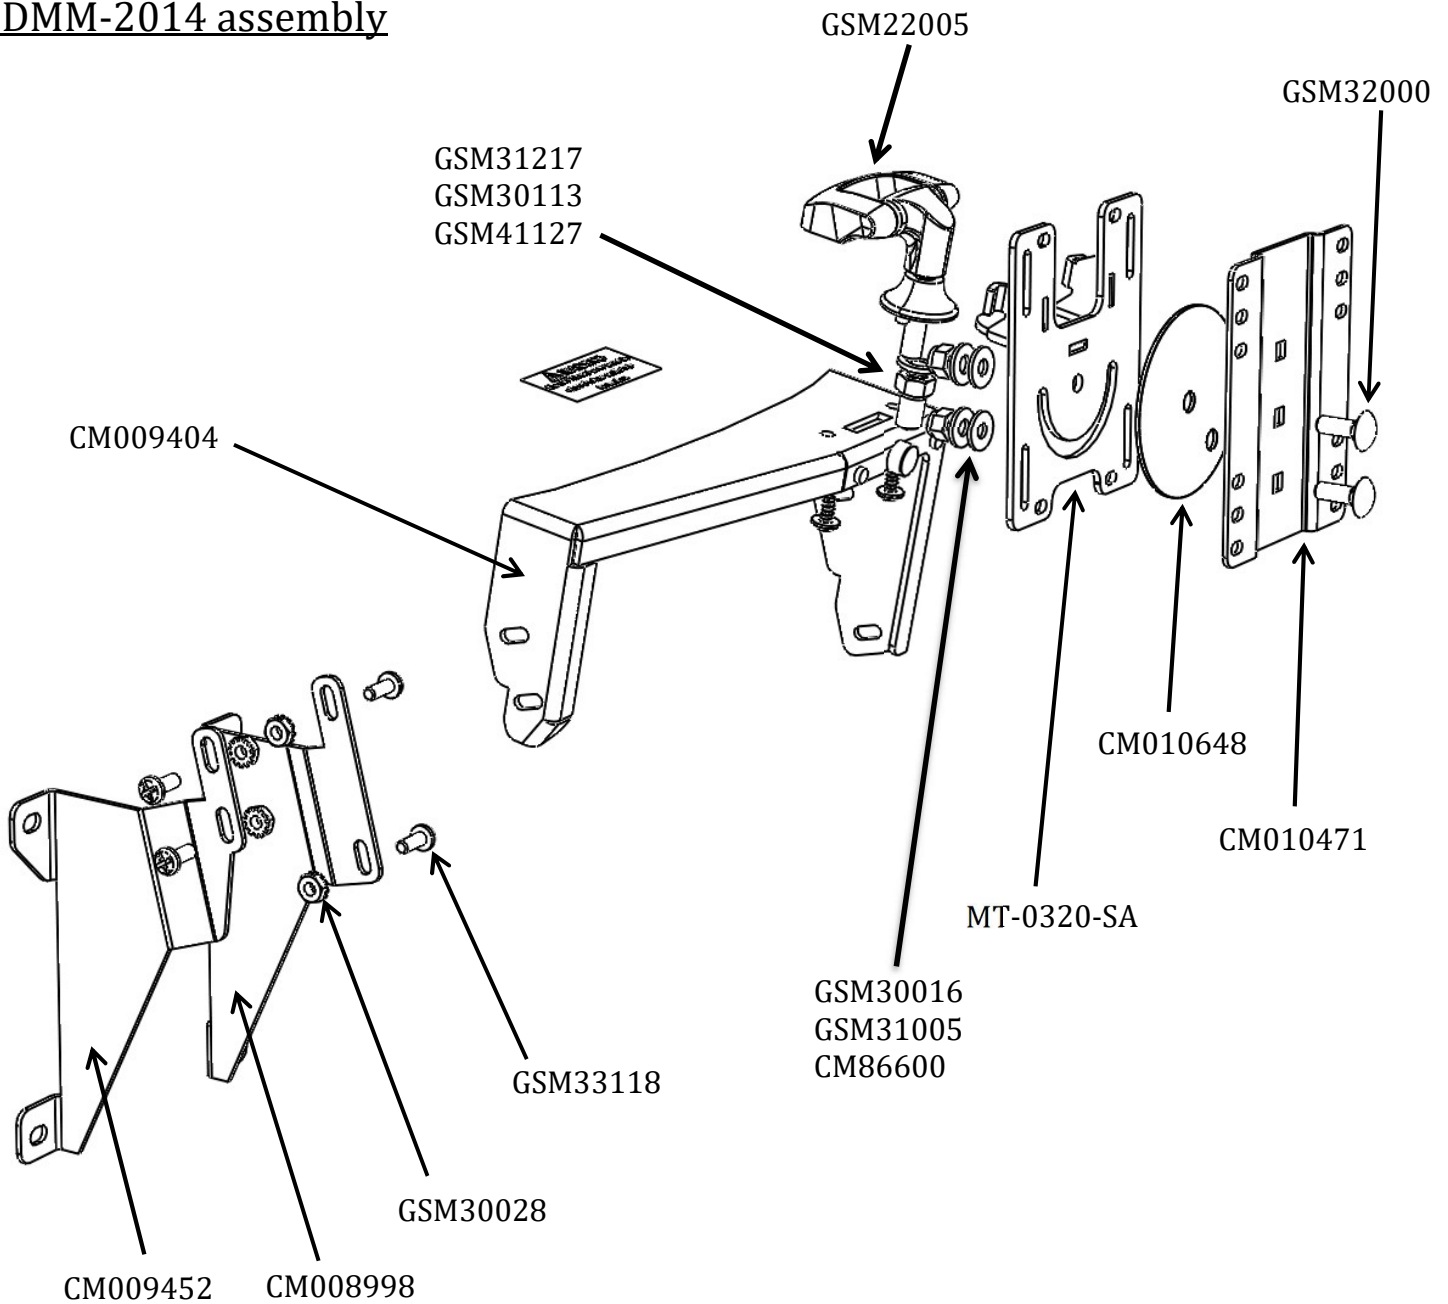



OEM Dash Prior to installation



Pull back the driver side lower dash panel to gain access and remove side trim screw (7mm socket)



Remove rubber cover in lower accessory pocket to gain access and remove two (2) lower dash panel screws. (7mm socket)



Pull lower dash panel towards you to remove.



Remove driver side upper dash panel.



Insert a flat blade panel removal tool and remove the panel above the glove box.




Carefully remove (unsnap) center trim bezel around touch screen and climate controls



Remove three (3) screws from the vent housing and remove the housing. Repeat for passenger side. (7mm socket)



On the 2017 and older Tahoe, (2) plastic tabs will need to be trimmed. This can be done with a simple snip from a pair of diagonal cut pliers

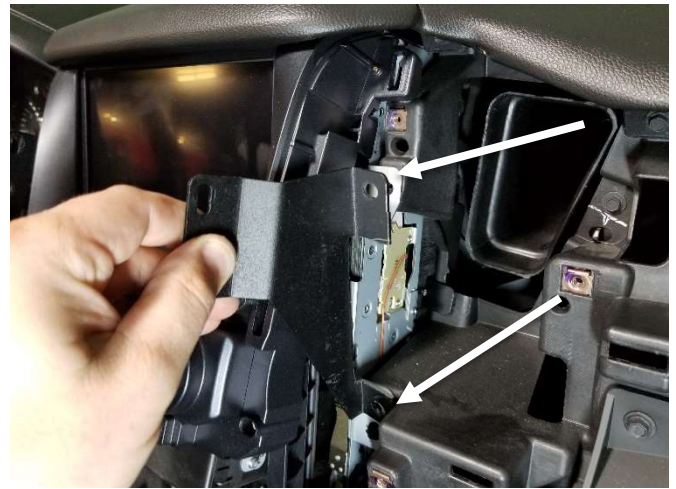

Remove two (2) screws on passenger side next to the OEM screen. Install side support bracket using OEM hardware.



Loosely place the center trim bezel up to the dash and mark the area around the upper side brackets.



Carefully notch trim bezel accordingly and reinstall back into dash. Reinstall all vents and dash trim.
File or Dremel tool works well for notching plastic.



Place main DMM-2014 bracket up to dash and secure to side support brackets using 10-32 screws and keps nuts.



Repeat process for passenger side.



Connect harnesses to the back of the TSD-101 display. It is important to also double wire tie the harnesses to provide sturdy strain relief for the plugs.
USB connection from remote Docking station must plug into USB plug closest to front of display.



Attach pivot / display mount bracket to display with M4 x 0.7 x 10mm Phillips head machine screws, lock washers and flat washers. Display mount hardware is included with TSD-101 hardware kit



Attach pivot bracket with display to the tilt swivel hinge with M8 hex nut and lock washer. Tighten nut and attach vinyl cap on M8 bolt threads.



Refer to TSD-101 owner's manual for power and computer connection details.
Bracket and display mount complete.