
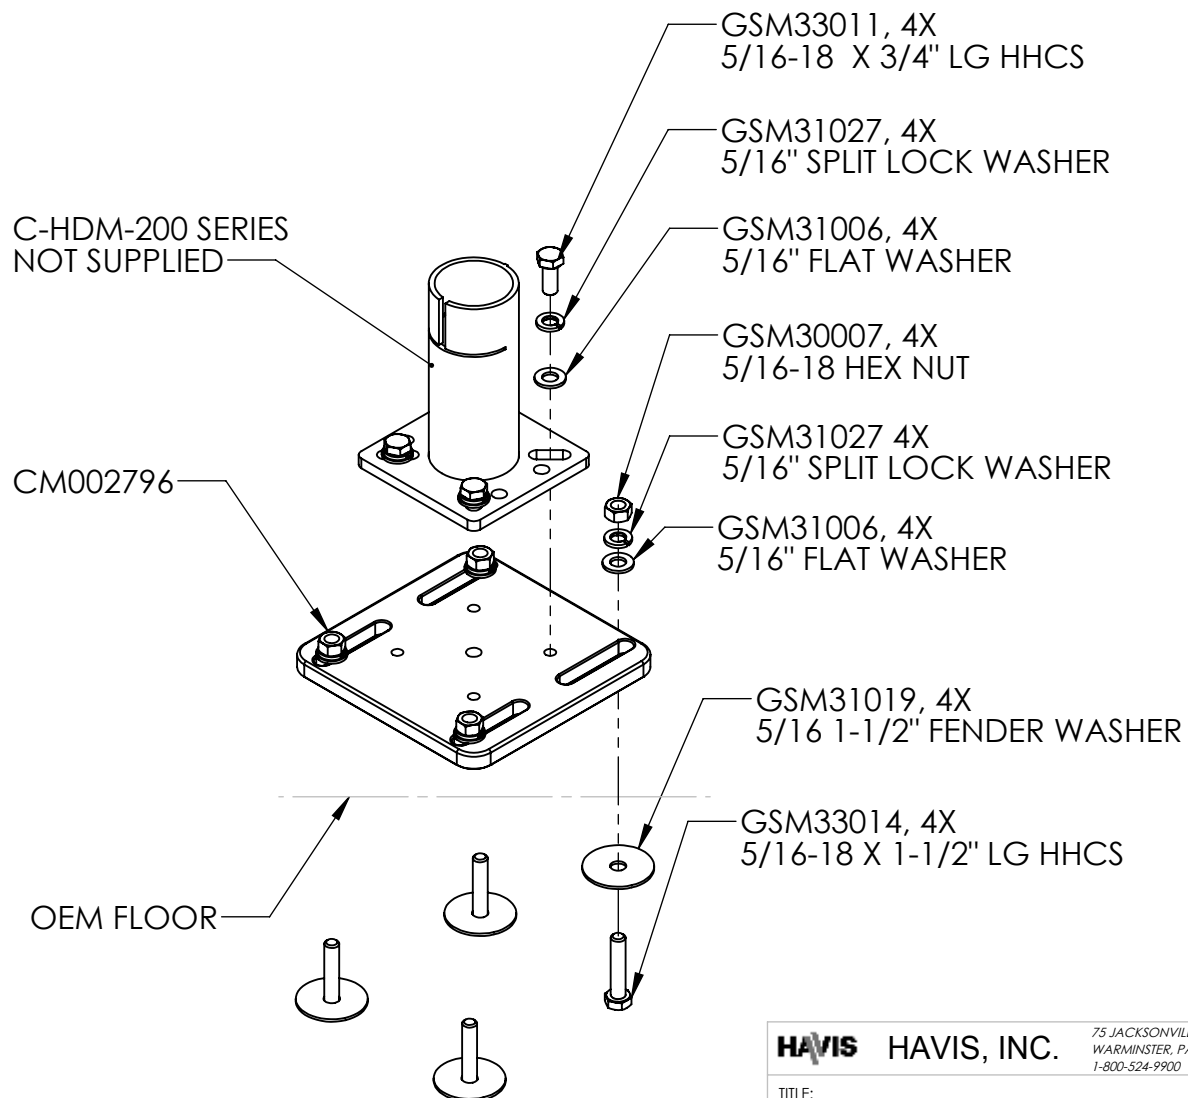


INSTALLATION INSTRUCTIONS UNIVERSAL MOUNTING TO FLOOR

1. PLACE THE BASE IN THE DESIRED LOCATION.
2. MARK AND DRILL (4) BASE HOLES.
NOTE: BE SURE THERE IS NOTHING THAT CAN BE DAMAGED BY THE DRILLING OPERATION.
3. SECURE THE MOUNT TO THE FLOOR OF THE VEHICLE WITH SUPPLIED HARDWARE.
NOTE: SOME APPLICATIONS WILL REQUIRE CUSTOMER SUPPLIED HARDWARE
4. ATTACH C-HDM-200 SERIES POLE TO CM002796 USING GSM33011, GSM31027, GSM31006
5. FULLY TIGHTEN ALL HARDWARE
6. FOLLOW GENERAL INSTRUCTIONS FOR POLE AND UPPER MOUNT PARTS.
7. 1/4" HARDWARE PROVIDED IF MOUNTING TO A HAVIS C-TMW-XXX.

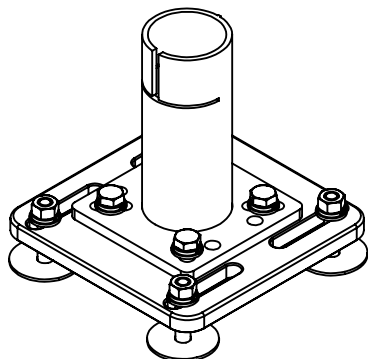

PROJECT #	REV.	DESCRIPTION
PT1785	10-14	RELEASED TO PRODUCTION
PT1785	12-14	REMOVED TRAK INFORMATION REPLACED WITH OEM FLOOR INFORMATION

HAVIS HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: C-HDM-114 INSTALLATION INSTRUCTIONS		
DO NOT SCALE DRAWING		
SIZE A	DWG. NO. C-HDM-114-INST	REV 12-14
WEIGHT (LB): 1.84	SCALE: 1:8	SHEET 1 OF 1