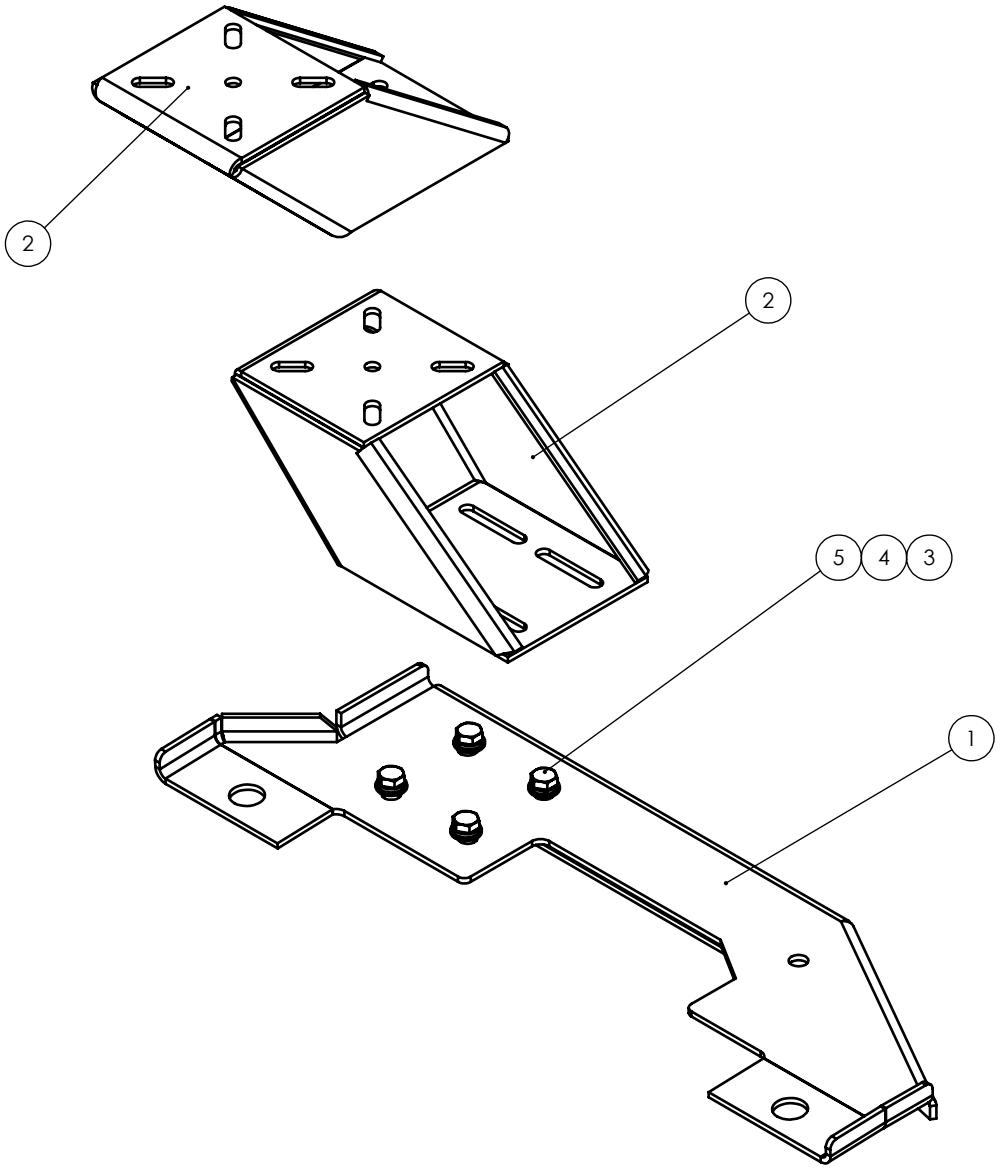

INSTALLATION INSTRUCTIONS

1. REMOVE PASSENGER SIDE FRONT SEAT BOLTS (13mm SOCKET).
2. SLIDE BASE PLATE IN BETWEEN FLOOR AND SEAT BRACKETS.
3. REINSTALL OEM SEAT BOLTS AND TIGHTEN TO VEHICLE MANUFACTURED TORQUE SPECIFICATIONS
4. ATTACH 1ST LOWER OFFSET TO BASEPLATE WITH 5/16" BOLTS, LOCK WASHERS AND FLAT WASHERS ANGLE TOWARDS CENTER OF VEHICLE.
5. ATTACH 2ND LOWER OFFSET TO 1ST LOWER OFFSET WITH 5/16" BOLTS, LOCKWASHERS, FLAT WASHERS AND NUTS. ANGLE REARWARD.
6. FOLLOW GENERAL INSTRUCTIONS FOR POLE AND UPPER MOUNT PARTS.

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	10-003392	BRKT FORD TAURUS HDM BASE
2	2	10-002400	BRACKET, MOUNT, 45° 3.5" LOWER OFFSET BASE W/SLOTS
3	36	GSM31006	WASHER, 5/16" FLAT, SAE ZP
4	20	GSM31027	WASHER, 5/16" LOCK, ZP
5	4	GSM33011	SCREW, 5/16-18 X 3/4"
6	16	GSM33012	SCREW 5/16-18 X 1 HHCS ZP
7	16	GSM30007	NUT 5/16-18 HEX ZP

HAVIS HAVIS, INC.
75 JACKSONVILLE RD.
WARMINSTER, PA. 18974
1-800-524-9900

TITLE: FORD INSE HDM BASE ASSY

DO NOT SCALE DRAWING

SIZE	DWG. NO.	REV
A	C-HDM-141-INST	11-14

WEIGHT (LB): 11.60	SCALE: 1:8	SHEET 1 OF 1