


INSTALLATION INSTRUCTIONS

- 1. REMOVE INBOARD SEAT BOLTS FROM BOTH FRONT SEATS.
- 2. SLIDE BRACKETS IN BETWEEN FLOOR AND SEAT BRACKETS AND LOOSELY REINSTALL OEM HARDWARE.
- 3. NOTE. DEPENDING ON THE EQUIPMENT BEING MOUNTED IT MAYBE EASIER TO ATTACH CM008869 TO THE OTHER EQUIPMENT BEFORE MOUNTING ONTO THE RESPECTIVE CM008747 BRACKETS.
- 4. POSITION CM008869 ONTO BRACKETS AND INSTALL 1/4" HARDWARE.
- 5. INSTALL CONSOLE, POLE MOUNT OR OTHER EQUIPMENT PER THE EQUIPMENT INSTRUCTIONS.
- 6. ENSURE THAT ALL HARDWARE IS TIGHTENED, AND THAT OEM SEAT BOLTS ARE TIGHT TO VEHICLE MANUFACTURER'S SPECIFICATION BEFORE DRIVING VEHICLE.

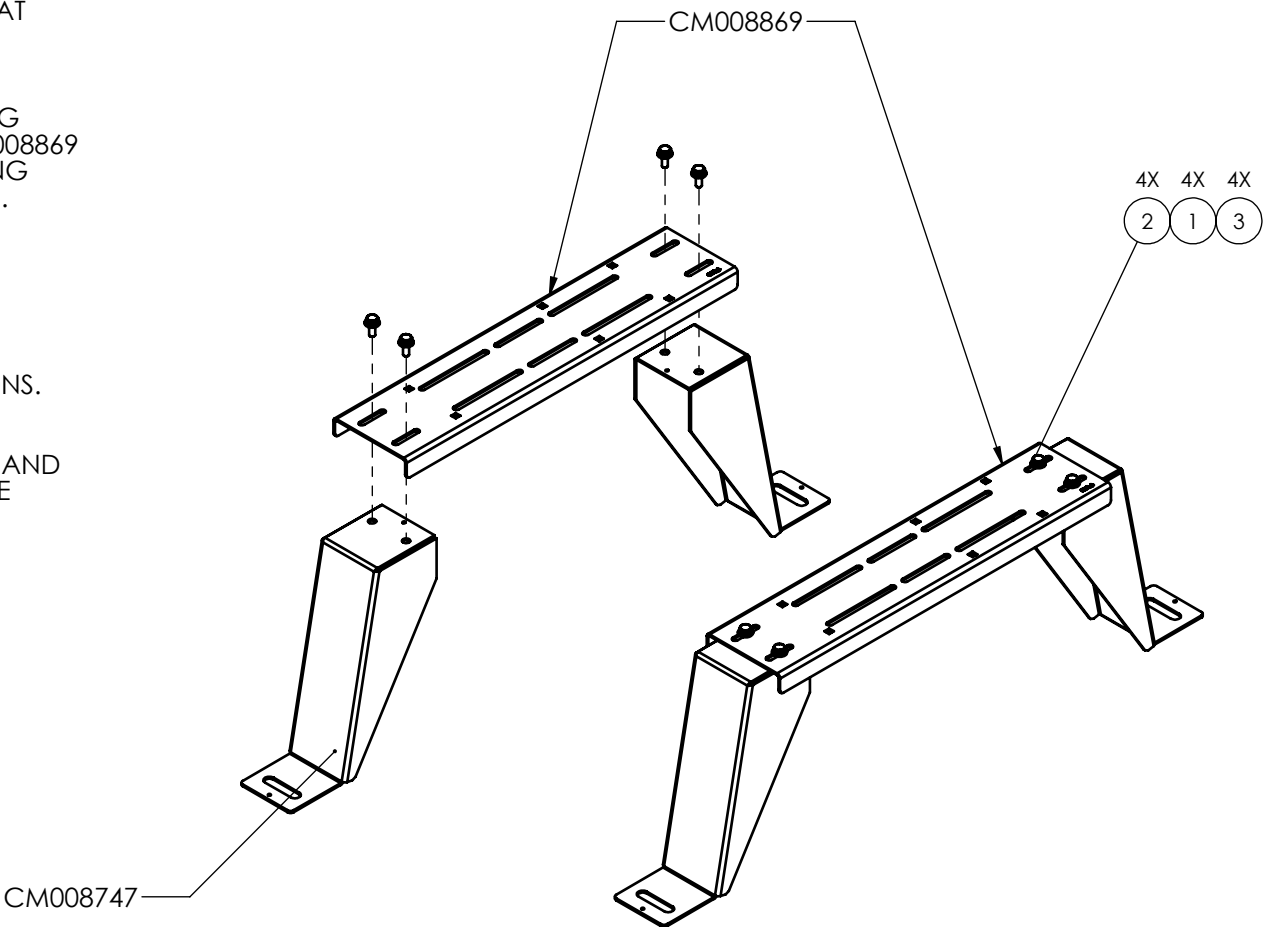

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	8	GSM31005	WASHER, 1/4 FLAT ZP, BLACK
2	8	GSM31026	WASHER 1/4 LOCK ZP BLK
3	8	GSM33001	SCREW 1/4-20 x 3/4" HHCS ZP BLK

HAVIS

HAVIS, INC.

75 JACKSONVILLE RD.
WARMINSTER, PA. 18974
1-800-524-9900

TITLE:
INSTALLATION INSTRUCTIONS, C-
TMW-IN1-01

DO NOT SCALE DRAWING

SIZE
A

DWG. NO.
C-M-41-INST

REV
11-18

WEIGHT (LB): 18.36

SCALE: 1:8

SHEET 1 OF 1