

INSTALLATION INSTRUCTIONS:

1. EXPOSE ADHESIVE BACK ON 4 ⑨ PADS AND PLACE ON BASE IN SHOWN LOCATIONS CENTERED OVER THE SMALLEST HOLES. AVOID PLACING PADS ON CUTOUTS OR NEAR BOLT HEADS FOR MOUNTING.

2. EXPOSE ADHESIVE BACK ON 2 REMAINING PADS AND PLACE ON TOP BRACKET IN SHOWN LOCATIONS. PLACE PADS CENTERED ON HOLE CUTOUTS. NOTE THAT THE PADS ARE ADHERED TO THE SIDE WITH THE FLANGES FACING INWARD.


3. INSTALL DESIRED MOUNTING HARDWARE WITH SCREW HEAD UNDERNEATH PRINTER.

4. MOUNT THE BASE TO THE DESIRED PRODUCT.

5. IF STRAIN RELIEF OF CABLES IS DESIRED, INSERT CABLE TIES INTO DESIRED HOLES.

6. INSERT THE PRINTER ON THE BASE.

7. ATTACH THE TOP BRACKET WITH 4X ⑦ 10-32X3/8" SCREWS.

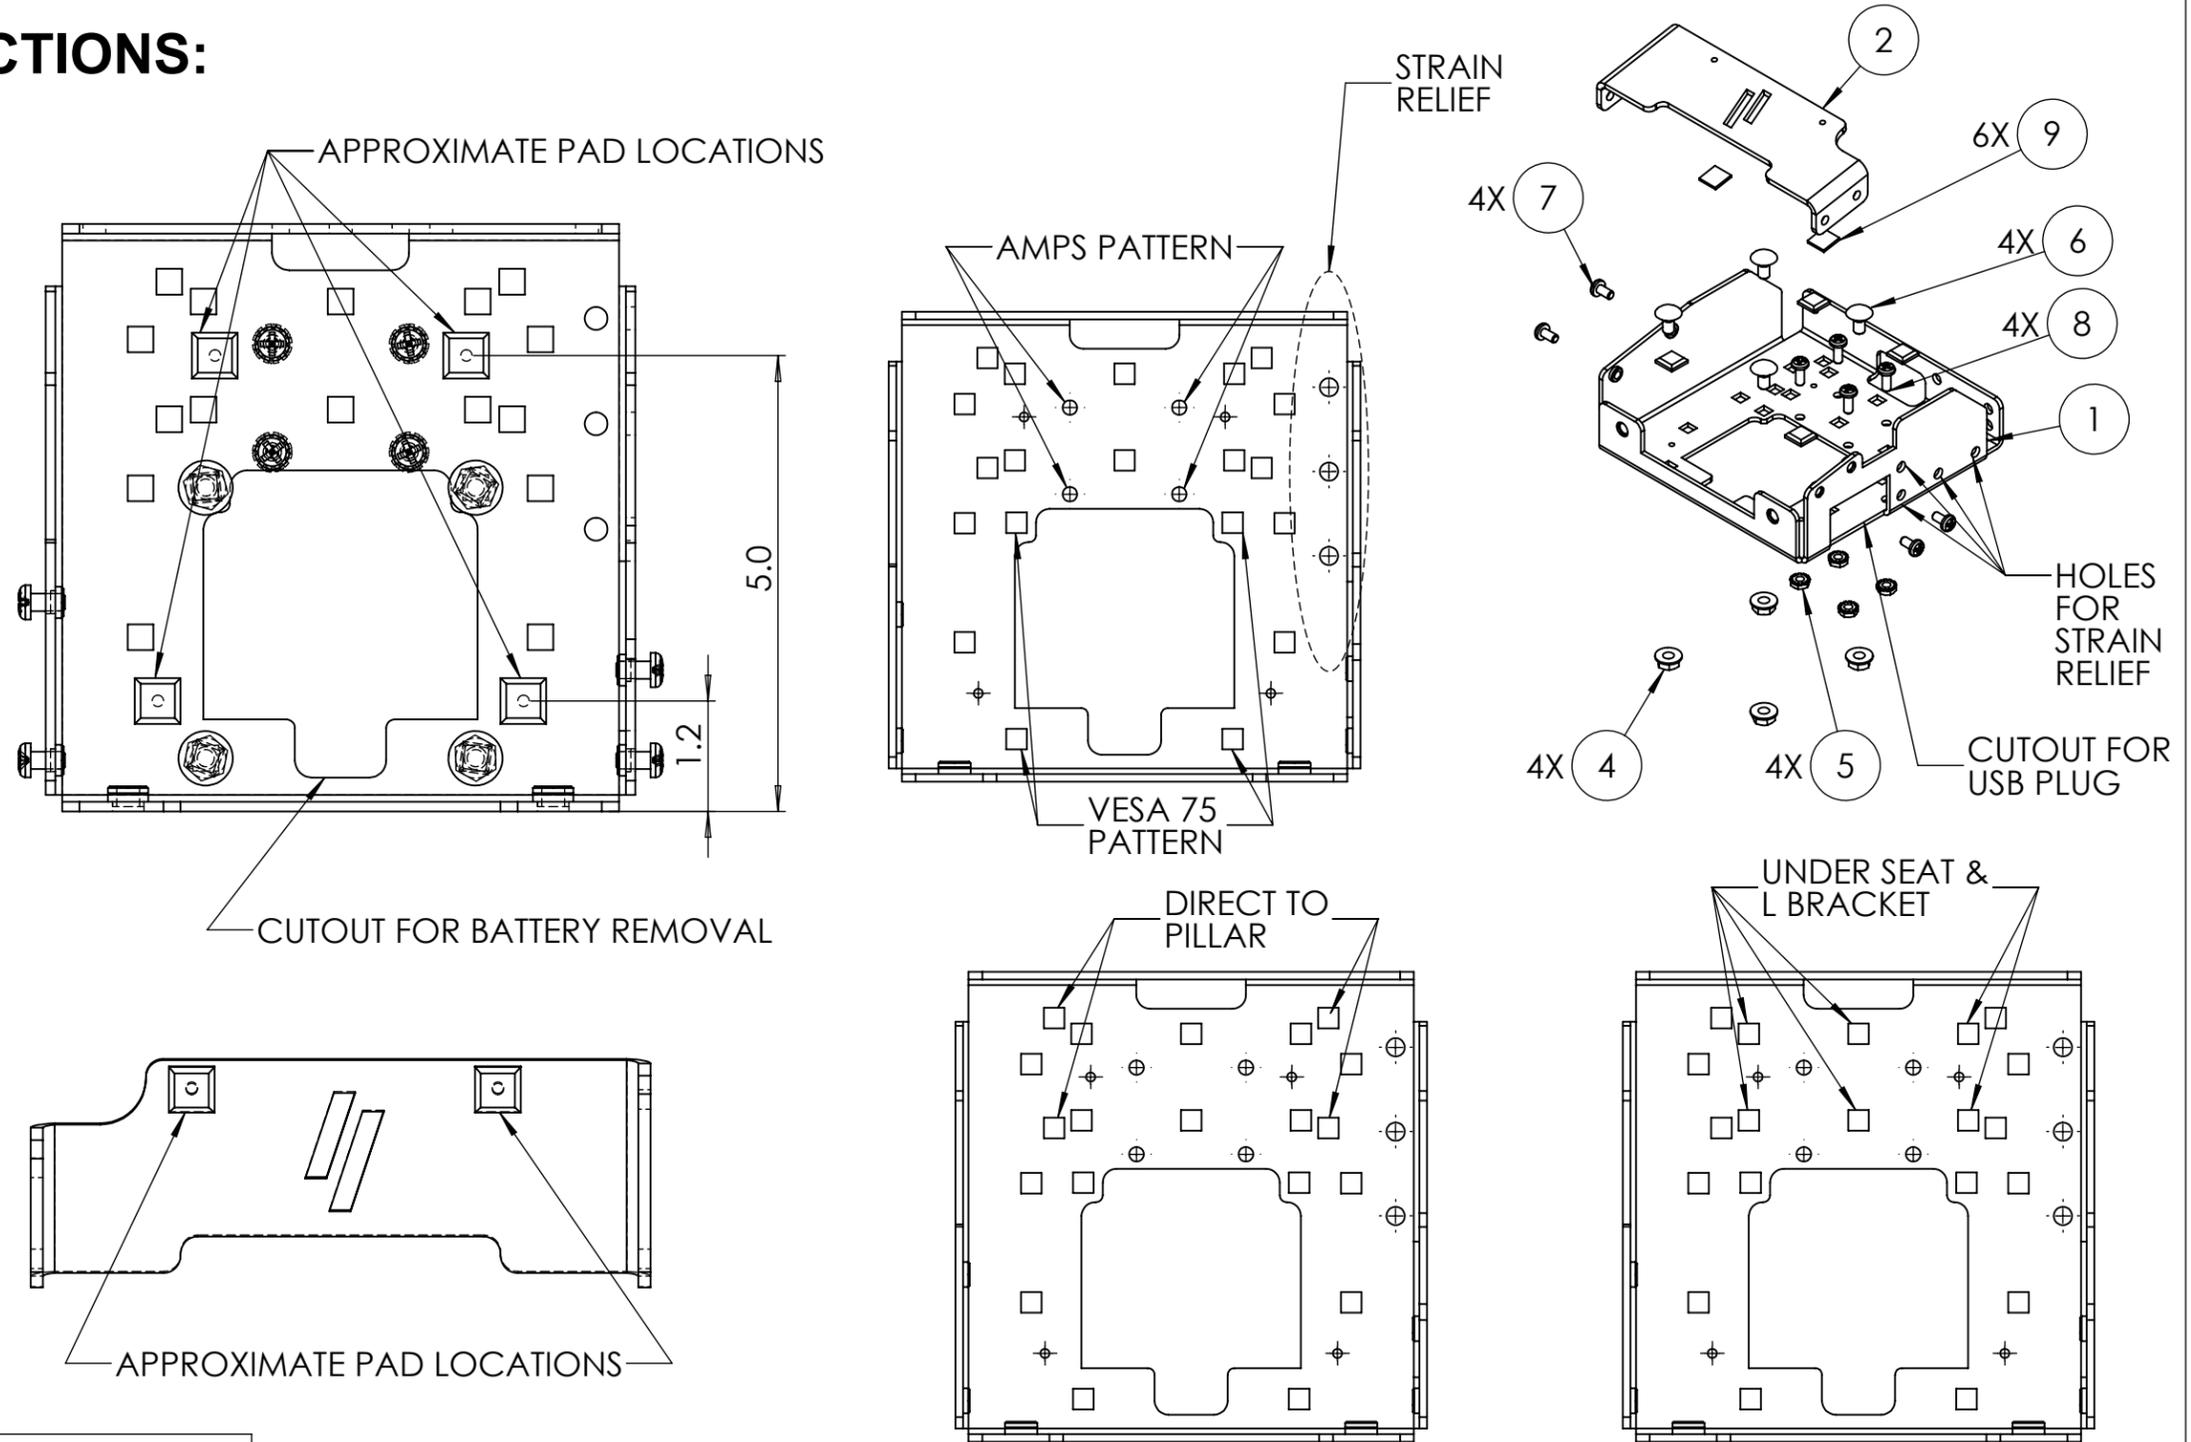

LINE	QTY.	ITEM NUMBER	DESCRIPTION
1	1	25623	BRKT, BASE, ZEBRA PRINTER MOUNT
2	1	25624	BRACKET, TOP, ZEBRA PRINTER MOUNT
3	1	25602	INSTRUCTIONS, ZEBRA FORKLIFT MOUNT
4	4	10613	NUT 1/4-20 HEX FLANGE SERRATED ZP, BLK
5	4	16017	NUT 10-32 KEPS ZP, BLK
6	4	16222	BOLT 1/4-20 X 1/2 CARRIAGE ZP BLK
7	4	16398	SCREW 10-32 X 3/8 PPHMS ZP
8	4	16399	SCREW, 10-32 X 1/2 PPHMS, ZP
9	6	20346	RUBBER FEET W/ PSA




C-PM-130 INSTRUCTIONS

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.



DRAWING NO. 10-011999	
PRODUCT DESCRIPTION C-PM-130 INSTRUCTION SHEET	
 1-800-524-9900 WWW.HAVIS.COM	REV. DATE 1-3-2022

INSTALLATION INSTRUCTIONS:

1. REFER TO STEPS 1 & 2 ON C-PM-128 SHEET FOR PAD INSTALL.
2. EXPOSE ADHESIVE BACK ON 2X (5) LARGE PADS AND PLACE AT END OF L BRACKET AS SHOWN IN VIEW ON SHEET.
3. ATTACH PRINTER BRACKET TO L BRACKET WITH 4X (9) 1/4-20X1/2" CARRIAGE BOLTS AND 4X (6) NUTS. NOTE THAT THE PRINTER CAN FACE IN 4 DIRECTIONS - 2 DIRECTIONS SHOWN HERE. PRINTER CAN ALSO BE MOUNTED AT SEVERAL DISTANCES FROM THE SEAT.
4. ATTACH L BRACKET TO UNDER SEAT MOUNT WITH 2X (10) 5/16-18X3/4" BOLTS, 2X (8) WASHERS, AND 2X (7) NUTS.
5. IF STRAIN RELIEF OF CABLES IS DESIRED, INSERT CABLE TIES INTO DESIRED HOLES.
6. INSERT THE PRINTER ON THE BASE.
7. ATTACH THE TOP BRACKET WITH 4X (11) 10-32X3/8" SCREWS.

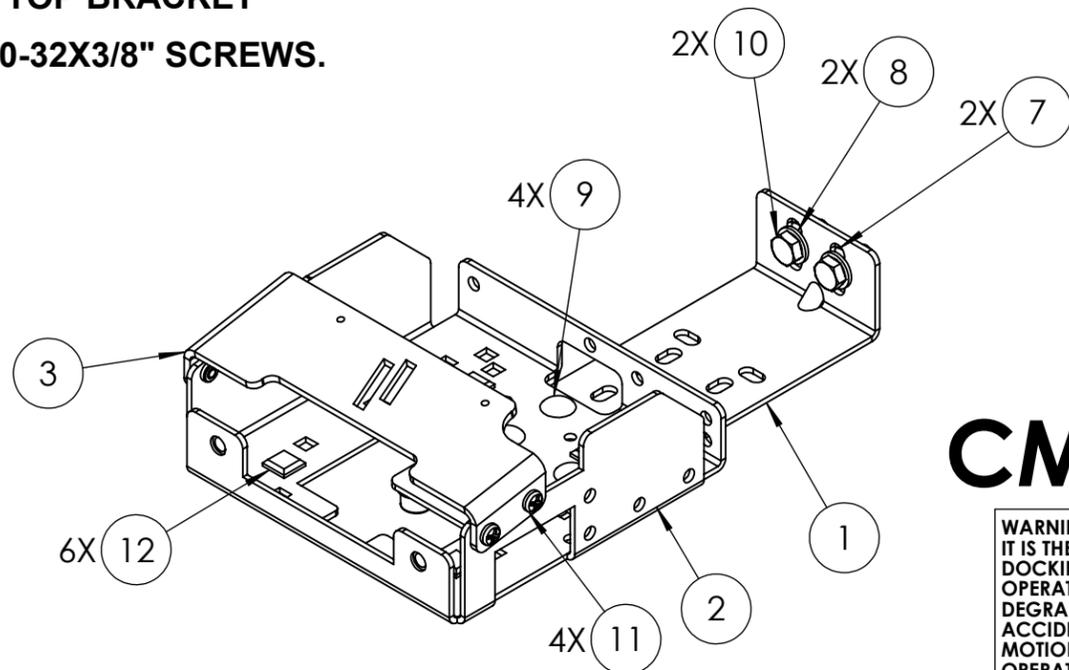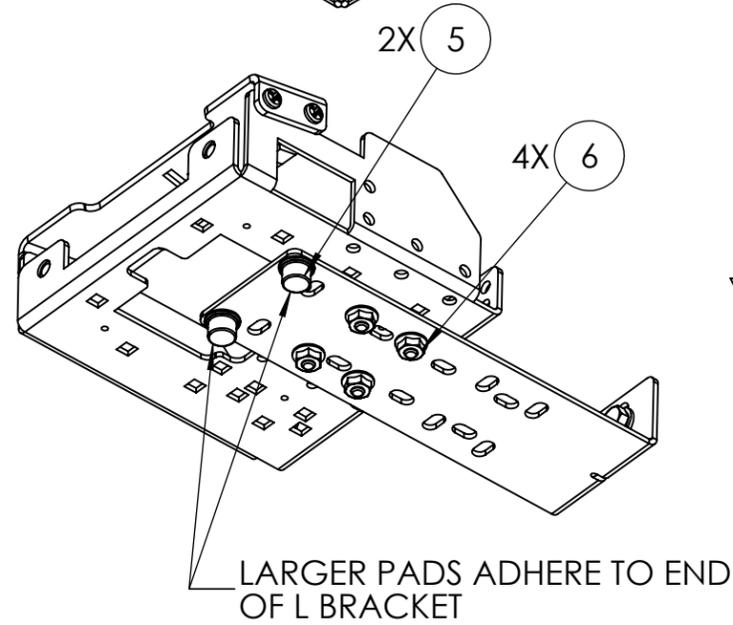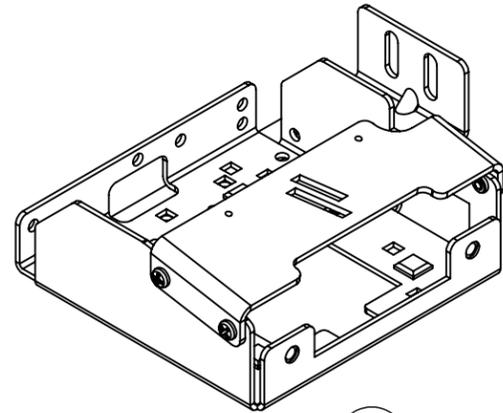

LINE	QTY.	ITEM NUMBER	DESCRIPTION
1	1	22908	BRKT, RUGGEDJET 4200 UNDER SEAT
2	1	25623	BRKT, BASE, ZEBRA PRINTER MOUNT
3	1	25624	BRACKET, TOP, ZEBRA PRINTER MOUNT
4	1	25602	INSTRUCTIONS, ZEBRA FORKLIFT MOUNT
5	2	15985	BUMPER 21/32" OD 13/32" HIGH BLACK ADHESIVE BACKED
6	4	10613	NUT 1/4-20 HEX FLANGE SERRATED ZP, BLK
7	2	10614	NUT 5/16-18 HEX FLANGE SERRATED ZINC, BLK
8	2	16123	WASHER, 5/16" FLAT, SAE ZP
9	4	16222	BOLT 1/4-20 X 1/2 CARRIAGE ZP BLK
10	2	16335	SCREW, 5/16-18 X 3/4"
11	4	16398	SCREW 10-32 X 3/8 PPHMS ZP
12	6	20346	RUBBER FEET W/ PSA

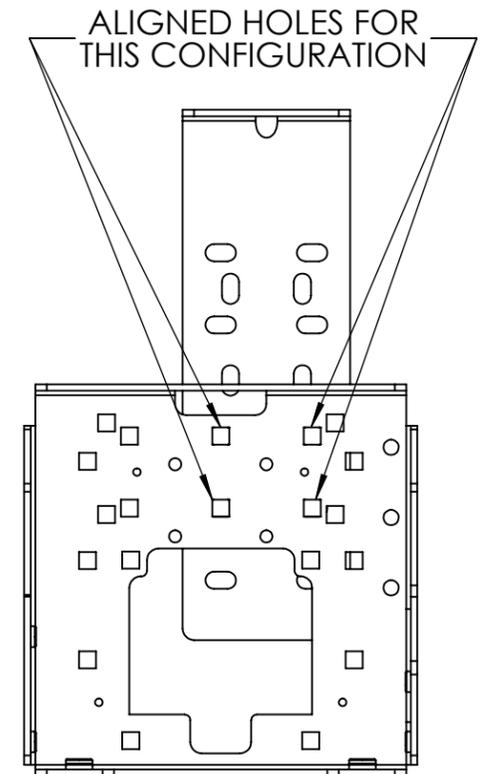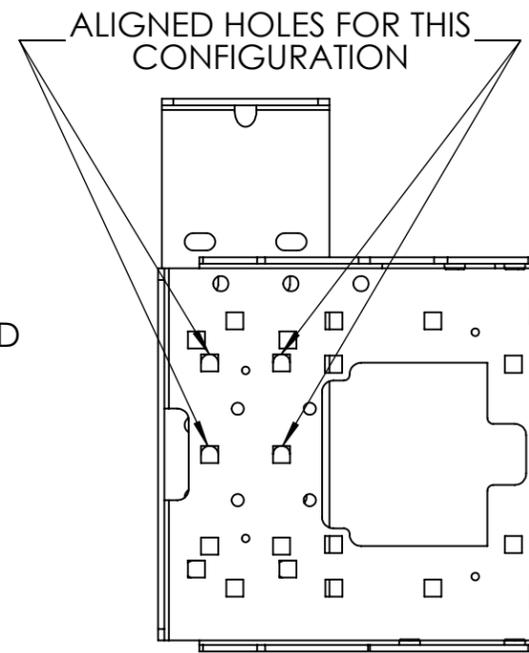



CM01194 INSTRUCTIONS

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

DRAWING NO. 10-011999	
PRODUCT DESCRIPTION C-PM-130 INSTRUCTION SHEET	
 1-800-524-9900 WWW.HAVIS.COM	REV. DATE 1-3-2022

INSTALLATION INSTRUCTIONS:

1. LIFT THE SEAT AND ENGINE COVER.
2. LOCATE HARDWARE FOR SEAT RAIL. LOOSEN THE HARDWARE ON THE SIDE YOU ARE NOT MOUNTING THE PRINTER MOUNT AND FULLY REMOVE THE SIDE YOU ARE.
3. LIFT SEAT BASE OFF OF ENGINE COVER.
4. SLIDE BASE UNDER THE SEAT RAIL. TIGHTEN ALL SEAT HARDWARE AND CLOSE ENGINE COVER.
5. FOLLOW STEPS ON SHEET FOR CM011194, UNDER SEAT MOUNT ADD-ON ONLY.

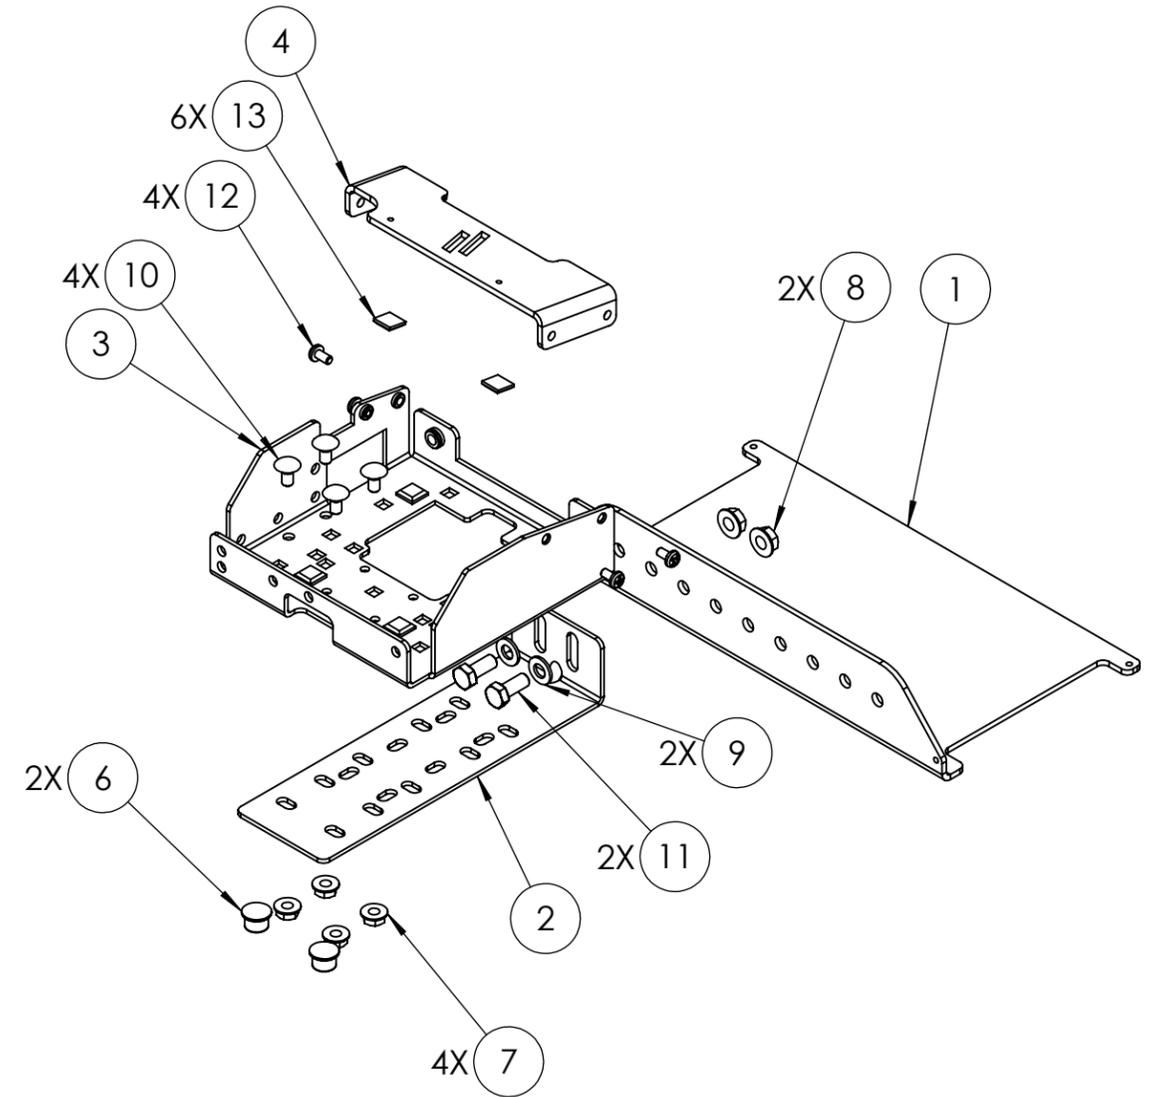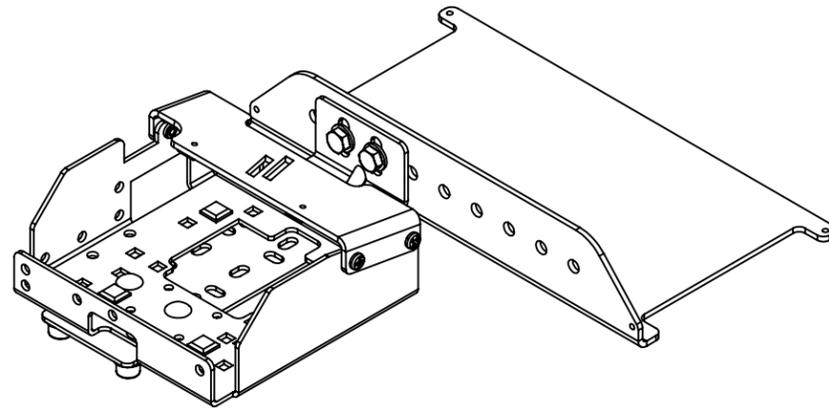

LINE	QTY.	ITEM NUMBER	DESCRIPTION
1	1	12973	BRKT, FORKLIFT, FAM BASE
2	1	22908	BRKT, RUGGEDJET 4200 UNDER SEAT
3	1	25623	BRKT, BASE, ZEBRA PRINTER MOUNT
4	1	25624	BRACKET, TOP, ZEBRA PRINTER MOUNT
5	1	25602	INSTRUCTIONS, ZEBRA FORKLIFT MOUNT
6	2	15985	BUMPER 21/32" OD 13/32" HIGH BLACK ADHESIVE BACKED
7	4	16013	NUT 1/4-20 HEX FLANGE SERRATED ZP, BLK
8	2	16014	NUT 5/16-18 HEX FLANGE SERRATED ZINC, BLK
9	2	16123	WASHER, 5/16" FLAT, SAE ZP
10	4	16222	BOLT 1/4-20 X 1/2 CARRIAGE ZP BLK
11	2	16335	SCREW, 5/16-18 X 3/4"
12	4	16398	SCREW 10-32 X 3/8 PPHMS ZP
13	6	20346	RUBBER FEET W/ PSA

MH-3005 INSTRUCTIONS

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

DRAWING NO. 10-011999	
PRODUCT DESCRIPTION C-PM-130 INSTRUCTION SHEET	
 1-800-524-9900 WWW.HAVIS.COM	REV. DATE 1-3-2022

INSTALLATION INSTRUCTIONS:

1. REFER TO STEPS 1 & 2 ON C-PM-130 SHEET FOR PAD INSTALL.

2. THE PRINTER MOUNT CAN BE INSTALLED IN NUMEROUS ORIENTATIONS BOTH DIRECTLY ONTO THE PILLAR AND ONTO THE PROVIDED L BRACKET. PLEASE FIRST CONSIDER THE IDEAL LOCATION, SPACING, AND ORIENTATION BEFORE MOUNTING.

3. FOUR 1/4-20 X 2-1/4" AND FOUR 1/4-20 X 4" BOLTS HAVE BEEN PROVIDED. USE THE APPROPRIATE LENGTH BOLT FOR THE PILLAR THICKNESS.

4. IF THE PRINTER MOUNT IS DIRECTLY MOUNTED TO THE PILLAR, USE BOTH 13281 PLATES. THE THICK PLATES CAN CLAMP TIGHTER TO THE PILLAR. THE PRINTER MOUNT SHOULD NOT BE USED FOR CLAMPING DIRECTLY TO THE PILLAR. ATTACH THE TWO PLATES AND PRINTER MOUNT BEFORE INSTALLING THE PRINTER.



5. IF THE PRINTER MOUNT IS MOUNTED TO THE L BRACKET, THE L BRACKET SHOULD BE ATTACHED TO THE PILLAR BEFORE THE PRINTER MOUNT IS ATTACHED.

6. IF STRAIN RELIEF OF CABLES IS DESIRED, INSERT CABLE TIES INTO DESIRED HOLES.

7. INSERT THE PRINTER ON THE BASE.

8. ATTACH THE TOP BRACKET WITH 4X 10 10-32X3/8" SCREWS. IF THE PILLAR OBSTRUCTS INSTALLING ONE OF THE FOUR SCREWS, DISCARD LAST SCREW.

LINE	QTY.	ITEM NUMBER	DESCRIPTION
1	2	13281	PLATE, ARKON FORKLIFT MOUNTING
2	1	22906	HOLDER, BARCODE SCANNER MOUNT
3	1	25623	BRKT, BASE, ZEBRA PRINTER MOUNT
4	1	25624	BRACKET, TOP, ZEBRA PRINTER MOUNT
5	1	25602	INSTRUCTIONS, ZEBRA FORKLIFT MOUNT
6	8	16013	NUT 1/4-20 HEX FLANGE SERRATED ZP, BLK
7	4	16222	BOLT 1/4-20 X 1/2 CARRIAGE ZP BLK
8	4	16226	HRDW,SCRW,1/4-20x2-1/4 ,RHSNCS,ZINC
9	4	16234	BOLT 1/4-20 X 4 CARRIAGE ZP
10	4	16398	SCREW 10-32 X 3/8 PPHMS ZP
11	6	20346	RUBBER FEET W/ PSA

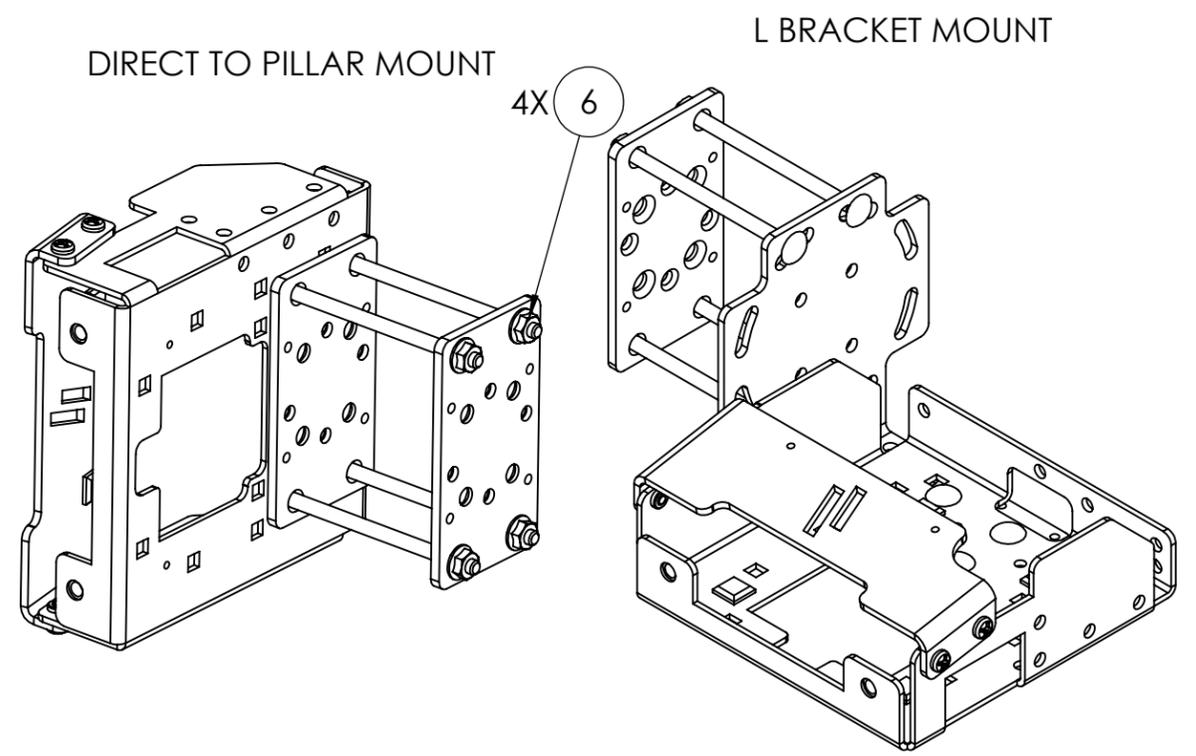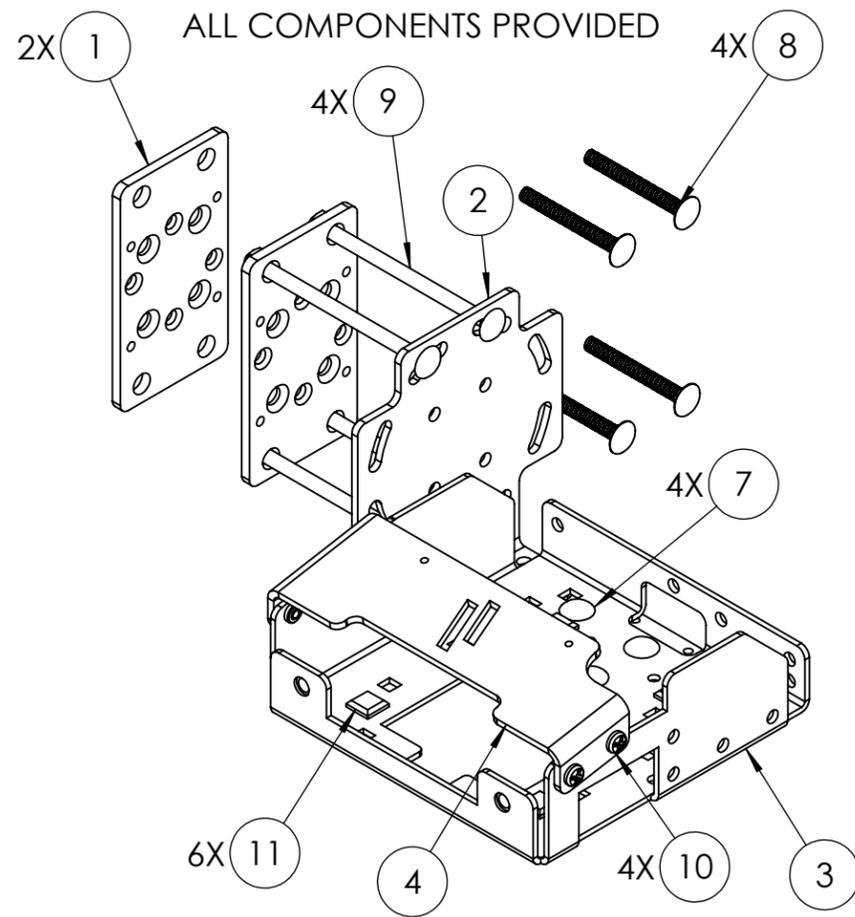

MH-3006 INSTRUCTIONS

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

DRAWING NO. 10-011999	
PRODUCT DESCRIPTION C-PM-130 INSTRUCTION SHEET	
 1-800-524-9900 WWW.HAVIS.COM	REV. DATE 1-3-2022

INSTALLATION INSTRUCTIONS:

1. REFER TO STEPS 1 & 2 ON C-PM-130 SHEET FOR PAD INSTALL.

2. ATTACH THE MD-408 TO A 13281 PLATE WITH 4X (10) 10-32X3/4" FLAT HEAD SCREWS AND NUTS WITH THE FLAT HEAD OF THE SCREW MATING TO THE COUNTERSUNK SIDE OF THE PLATE.

3. ATTACH THE MD-408 WITH PLATE TO THE PILLAR WITH THE

SECOND 13281 PLATE, 4X (9)

3/8-16X4" BOLTS, 8X (7)

WASHERS, 4X (8) SPLIT RING

WASHERS, AND 4X (5) NUTS.

4. ATTACH THE MD-408 TO THE

PRINTER MOUNT WITH 4X (12)


10-32X1/2" BUTTON HEAD SCREWS AND NUTS.

5. IF STRAIN RELIEF OF CABLES IS DESIRED, INSERT CABLE TIES INTO DESIRED HOLES.


6. INSERT THE PRINTER ON THE BASE.

7. ATTACH THE TOP BRACKET

WITH 4X (11) 10-32X3/8" SCREWS.

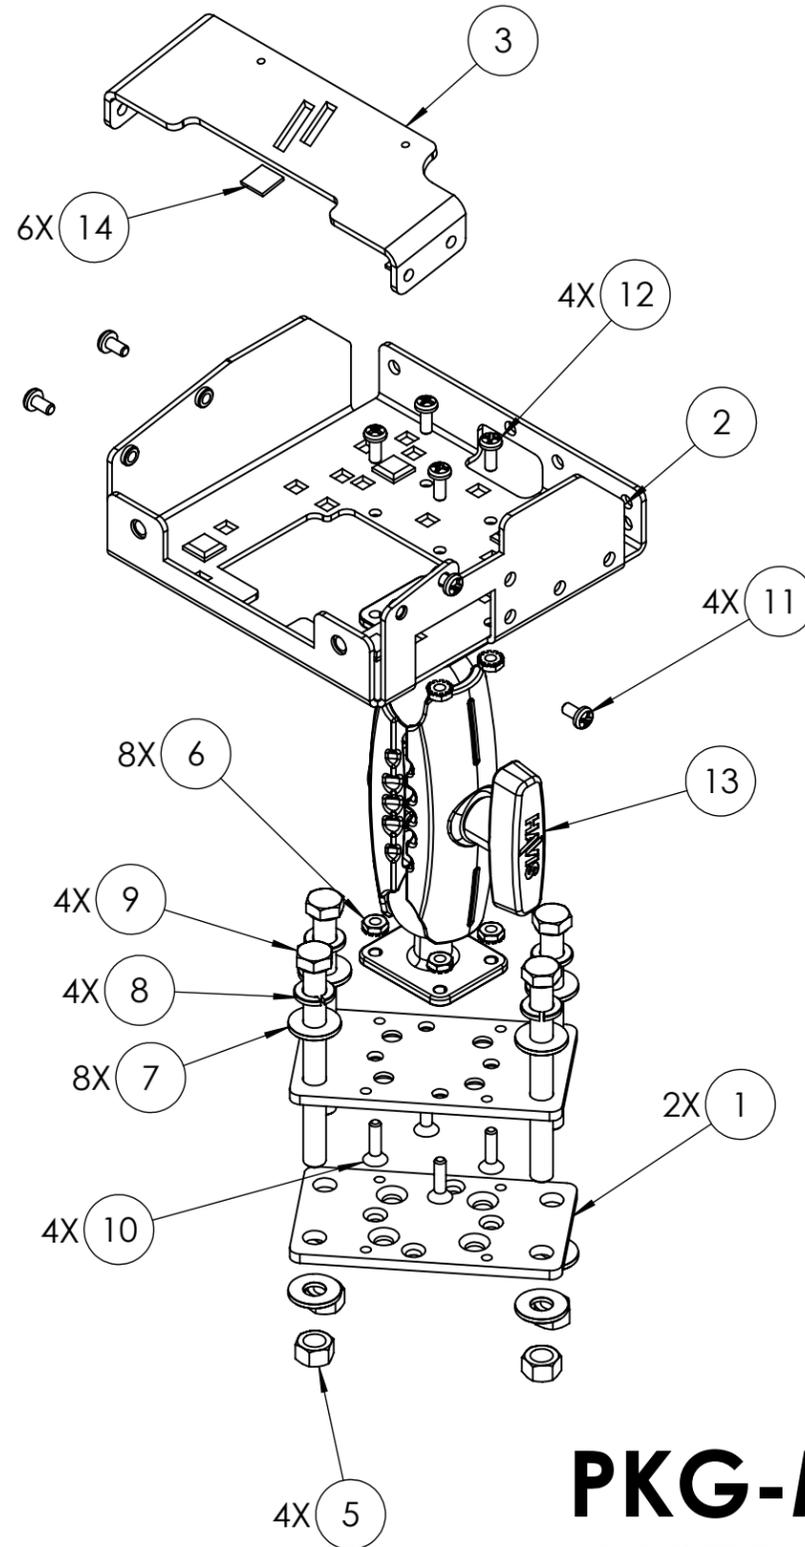

LINE	QTY.	ITEM NUMBER	DESCRIPTION
1	2	13281	PLATE, ARKON FORKLIFT MOUNTING
2	1	25623	BRKT, BASE, ZEBRA PRINTER MOUNT
3	1	25624	BRACKET, TOP, ZEBRA PRINTER MOUNT
4	1	25602	INSTRUCTIONS, ZEBRA FORKLIFT MOUNT
5	4	16001	NUT 3/8-16 HEX ZP
6	8	16017	NUT 10-32 KEPS ZP, BLK
7	8	16127	HRDW, WSHR, FLT, 3/8 USS ZP
8	4	16144	WASHER 3/8 LOCK ZP
9	4	16349	SCREW 3/8-16 X 4 HHCS ZP
10	4	16364	SCREW, #10-32 X 3/4 PPHMS ZP
11	4	16398	SCREW 10-32 X 3/8 PPHMS ZP
12	4	16399	SCREW, 10-32 X 1/2 PPHMS, ZP
13	1	19147	LIGHT DUTY PILLAR MOUNT
14	6	20346	RUBBER FEET W/ PSA

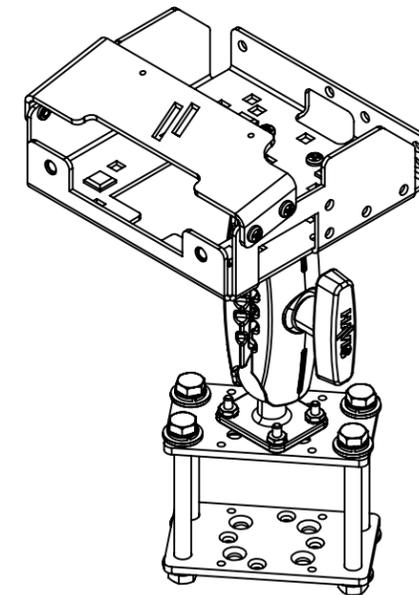

PKG-MH-3006 INSTRUCTIONS

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

DRAWING NO.	10-011999
PRODUCT DESCRIPTION	C-PM-130 INSTRUCTION SHEET

HAVIS


1-800-524-9900
WWW.HAVIS.COM

REV. DATE
1-3-2022




INSTALLATION INSTRUCTIONS:

1. REFER TO STEPS 1 & 2 ON C-PM-130 SHEET FOR PAD INSTALL.
2. C-ARPB-148 CONTAINS TWO SUBASSEMBLIES AND A HARDWARE KIT. THE PRINTER MOUNT SUBASSEMBLY CAN BE INSTALLED WITH OR WITHOUT THE ARMPAD SUBASSEMBLY AND PRINTER INSTALLED. FOR THESE INSTRUCTIONS, THE SUBASSEMBLIES ARE ASSEMBLED THEN MOUNTED TO THE CONSOLE.
3. IF STRAIN RELIEF OF CABLES IS DESIRED, INSERT CABLE TIES INTO DESIRED HOLES.
4. ATTACH THE TOP BRACKET WITH 4X (26) 10-32X3/8" SCREWS.
5. ATTACH THE ARMPAD SUBASSEMBLY WITH 2X (27) 1/4-20X1/2" SCREWS AND 2X (18) WASHERS.
6. ATTACH THE ENTIRE ASSEMBLY TO THE CONSOLE WITH FOUR 1/4-20X1/2" SCREWS, WASHERS, AND LOCK WASHERS.

ARMPAD SUBASSEMBLY

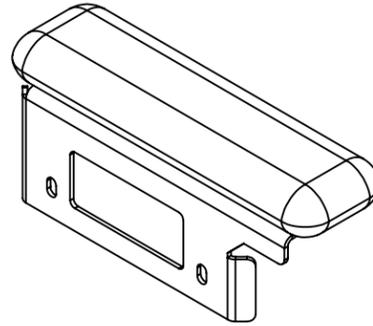

PRINTER MOUNT SUBASSEMBLY

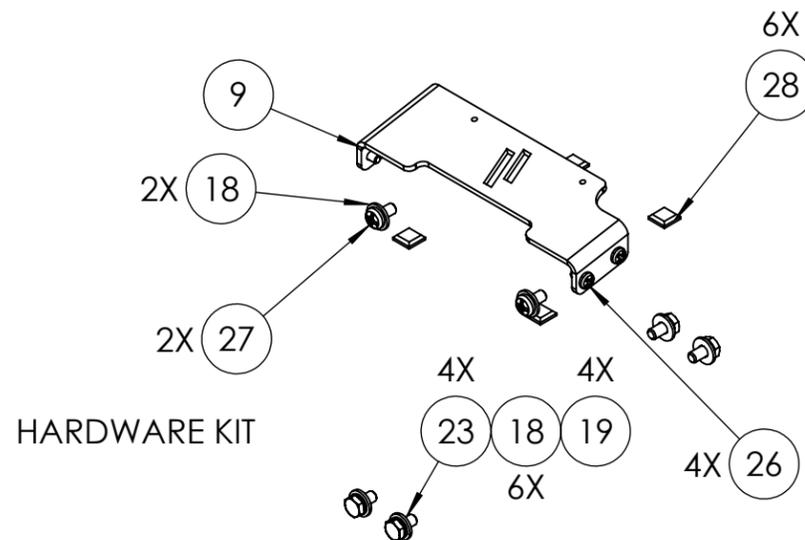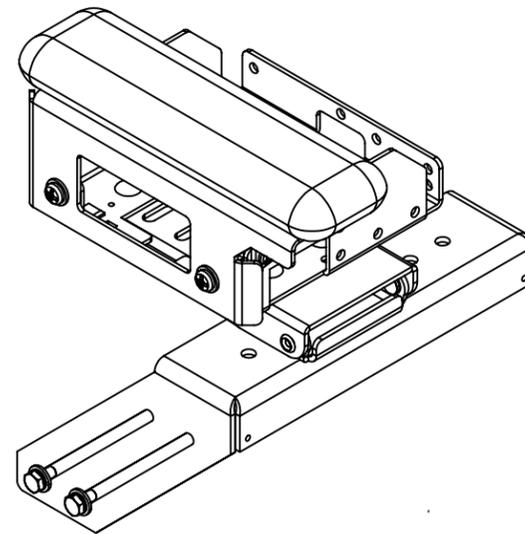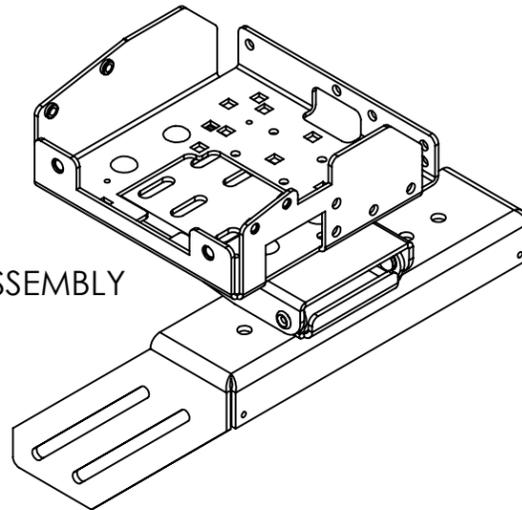

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

LINE	QTY.	ITEM NUMBER	DESCRIPTION
1	1	20352	ARM REST SPACER PLATE
2	1	11356	BRACKET, MOUNT, ARMREST BASE, CONS
3	1	23186	ARMREST UPPER SWIVEL, RIVETED
4	2	23889	RIVET, ARMREST
5	1	23708	ARMREST BASE SWIVEL, RIVETED, CLOSEOUT FLANGE
6	1	24034	INSTRUCTIONS, BROTHER FORKLIFT MOUNT
7	1	24406	BRKT, ARMREST ADAPTER
8	1	25623	BRKT, BASE, ZEBRA PRINTER MOUNT
9	1	25624	BRACKET, TOP, ZEBRA PRINTER MOUNT
10	1	13659	SMALL ARMREST ASSEMBLY
11	2	13691	RUBBER BUMPER
12	2	15783	HRDW,BMPR, DOME,TOP,21/32DIA,21/64h,BLK,
13	1	15835	GREASE, TRIBOGEL, LUBRICANT (NOT SHOWN)
14	2	15959	Saint-Gobain F17-23793x Flanged Bushing, T050CG
15	1	15999	NUT 5/16-18 HEX ZP
16	1	16010	NUT 5/16-18 NYLOCK ZP, BLK
17	4	16013	NUT 1/4-20 HEX FLANGE SERRATED ZP, BLK
18	8	16122	WASHER, 1/4 FLAT ZP, BLACK
19	6	16142	WASHER 1/4 LOCK ZP BLK
20	2	16159	WASHER 5/16 X 1 1/2 FENDER SS
21	2	16170	WASHER, 5/16" BELLEVILLE SS
22	4	16222	BOLT 1/4-20 X 1/2 CARRIAGE ZP BLK
23	4	16325	SCREW 1/4-20 X 1/2 HHCS, BLK, ZP, GRD 5
24	2	16326	SCREW 1/4-20 x 3/4" HHCS ZP BLK
25	1	16337	SCREW 5/16-18 X 1 1/4 HHCS ZP
26	4	16398	SCREW 10-32 X 3/8 PPHMS ZP
27	2	16403	SCREW 1/4-20 X 1/2 PPHMS BLK
28	6	20346	RUBBER FEET W/ PSA


C-ARPB-148 INSTRUCTIONS

DRAWING NO. 10-011999	
PRODUCT DESCRIPTION C-PM-130 INSTRUCTION SHEET	
HAVIS 1-800-524-9900 WWW.HAVIS.COM	REV. DATE 1-3-2022



INSTALLATION INSTRUCTIONS:

1. REFER TO STEPS 1 & 2 ON C-PM-130 SHEET FOR PAD INSTALL.
2. C-ARPB-145 & C-ARPB-147 CONTAIN TWO RUBBER BUMPERS. ATTACH BUMPERS TO BACK OF PRINTER MOUNT HOLES. BUMPERS WILL MAKE CONTACT WITH CONSOLE WHEN BIN IS FULLY OPENED.
3. ATTACH PRINTER MOUNT TO FLAT BRACKET OR BIN USING FOUR 1/4-20X1/2" CARRIAGE BOLTS AND FOUR 1/4-20 NUTS. BACK OF PRINTER CUTOUT SHOULD ALIGN WITH CUTOUT IN FLAT BRACKET OR BIN LID.
4. IF STRAIN RELIEF OF CABLES IS DESIRED, INSERT CABLE TIES INTO DESIRED HOLES. CABLES CAN ROUTE THROUGH CUOUT IN FLAT BRACKET OR BIN LID.
5. INSERT THE PRINTER ON THE BASE. IF THE USB PLUG IS USED, THEN REMOVE THE PRINTER'S RUBBER PLUG AND INSERT IT THROUGH THE SIDE CUTOUT BEFORE FULLY SEATING THE PRINTER.
6. ATTACH THE TOP BRACKET WITH FOUR 10-32X3/8" SCREWS.
7. ATTACH THE ARMPAD SUBASSEMBLY WITH TWO 1/4-20X1/2" SCREWS AND TWO WASHERS. FOR THE TALL ARM PADS, BEFORE FULLY TIGHTENING SCREWS, PRESS DOWN ON ARM PAD IN ORDER TO FULLY ENGAGE RUBBER BUMPERS.
8. ATTACH THE ENTIRE ASSEMBLY TO THE CONSOLE WITH FOUR TORX SCREWS.


C-ARPB-141

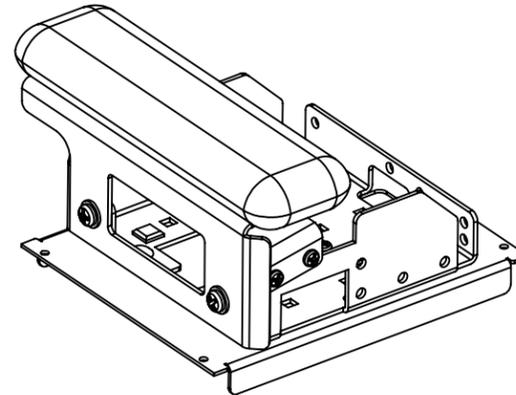

C-ARPB-143

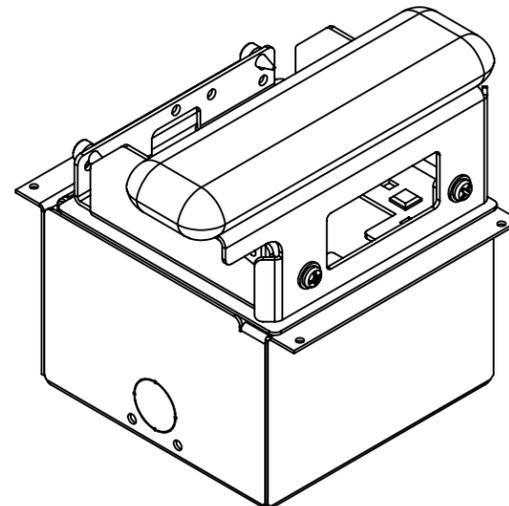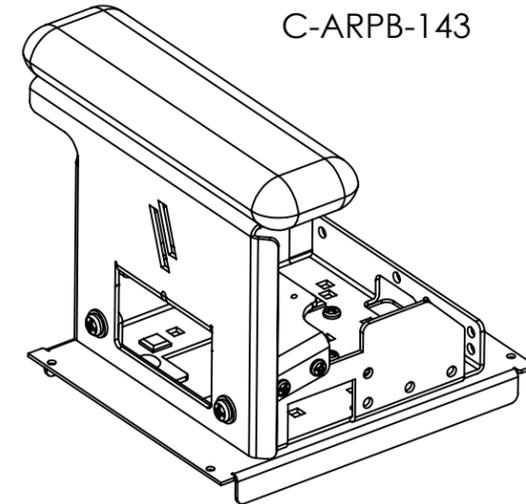

C-ARPB-145

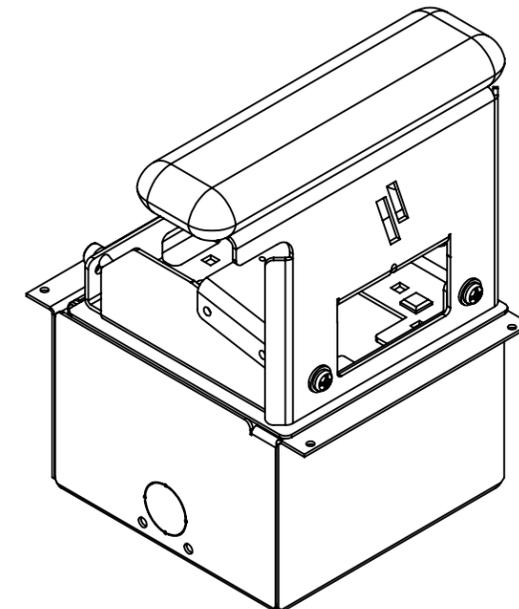

C-ARPB-147

C-ARPB-141,143,145,147 INSTRUCTIONS

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

DRAWING NO. 10-011999	
PRODUCT DESCRIPTION C-PM-130 INSTRUCTION SHEET	
 1-800-524-9900 WWW.HAVIS.COM	REV. DATE 1-3-2022