REV.	DESCRIPTION
06-17	RELEASE TO PRODUCTION
01-19	10-009431-19 WAS 10-002432-19

INSTALLATION INSTRUCTIONS

1. REMOVE INBOARD SEAT BOLTS FROM BOTH FRONT SEATS.
2. SLIDE BRACKETS IN BETWEEN FLOOR AND SEAT BRACKETS AND LOOSELY REINSTALL OEM HARDWARE.
3. POSITION CROSS BRACES ONTO BRACKETS AND INSTALL 1/4" HARDWARE.
4. SLIDE (8) 1/4-20 BOLTS INTO LOWER SLOTS IN TRACK, ALIGN BOLTS WITH CROSS BRACES AND SET TRAK DOWN ONTO CROSS BRACES.
5. ALIGN TRAK IN DESIRED LOCATION AND SECURE ALL HARDWARE.
6. BEFORE INSTALLING END CAPS, SLIDE (4) 1/4-20 BOLTS (OR HARDWARE TO MOUNT OTHER EQUIPMENT)INTO UPPER SLOTS IN TRAK.
7. INSTALL CONSOLE, POLE MOUNT OR OTHER EQUIPMENT PER THE EQUIPMENT INSTRUCTIONS.
8. REMOVE LINERS FROM ADHESIVE TAPES AND INSTALL END CAPS ONTO TRAK.
9. ENSURE THAT ALL HARDWARE IS TIGHTENED, AND THAT OEM SEAT BOLTS ARE TIGHT TO VEHICLE MANUFACTURER'S SPECIFICATION BEFORE DRIVING VEHICLE.

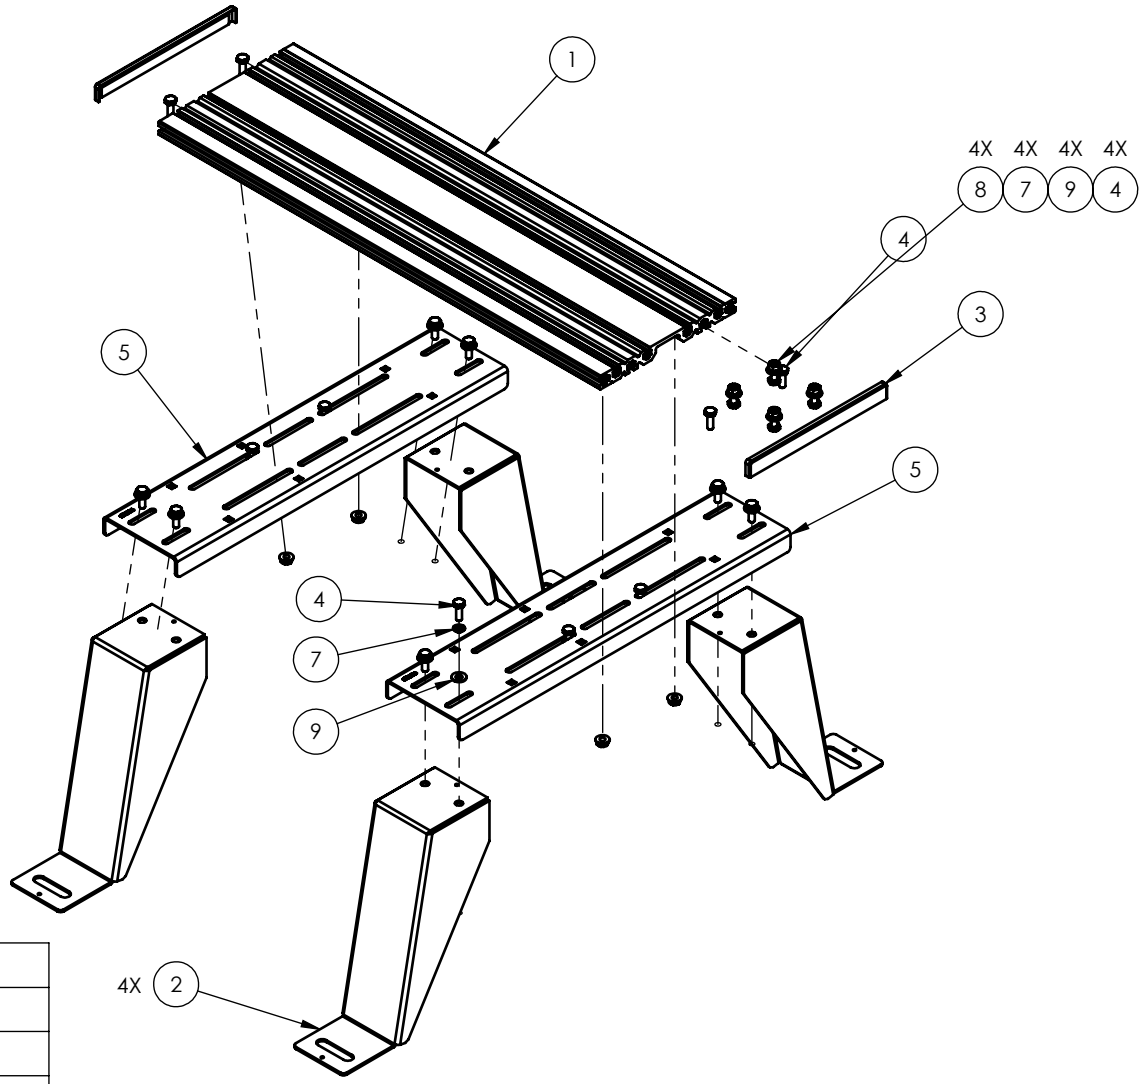

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	10-009431-19	8" WIDE TRAK MOUNT 26" LONG
2	4	10-008747	HUMP BRKT LEG INTERNATIONAL TRUCK
3	2	30-002527A	KIT, TRAK MOUNT GASKET AND END CAP
4	18	GSM33001	SCREW 1/4-20 x 3/4" HHCS ZP BLK
5	2	HS93227	BRACKET HUMP RAIL
6	8	GSM30023	NUT 1/4-20 HEX FLANGE SERRATED ZP, BLK
7	12	GSM31026	WASHER 1/4 LOCK ZP BLK
8	4	GSM30005	NUT 1/4-20 HEX BLK, ZINC, GRD 5
9	12	GSM31005	WASHER, 1/4 FLAT ZP, BLACK

HAVIS HAVIS, INC. 75 JACKSONVILLE RD, WARMINSTER, PA. 18974 1-800-524-9900

TITLE: INSTALLATION INSTRUCTIONS, C-TMW-IN1-01

DO NOT SCALE DRAWING

SIZE	DWG. NO.	REV
A	C-TMW-IN1-01-INST	01-19

WEIGHT (LB): 26.29 | SCALE: 1:8 | SHEET 1 OF 1