

## INSTALL INSTRUCTIONS C-TMW-RAM-01 TUNNEL MOUNT

**2013-2020 Dodge Ram 1500 Special Service police pickup truck with no center seat  
2003-2020 Dodge Ram Retail pickup truck 1500, 2500 & 3500 (DS Classic and Newer DT  
trim levels) with 40/20/40 seats (center /20/ section must be removed)  
2007-2020 Ram 4500, 5500 Chassis Cab truck**

**\*\*\* RE: Dodge Ram 1500 Special Services Police Truck\*\*\***

If installing a Tunnel Mount into this vehicle, you must order the following Dodge seat brackets and

### Important Notes:

- Center /20/ seat section must be removed

If installing console into a Dodge Ram 1500 Special Service Police Truck,  
You have two mounting bracket options that must be purchased separately.

These brackets are sold separately because many customers have a Retail truck and remove the center seat. When the seat is removed, the OEM brackets are already in vehicle.

**Floor Mount bracket option 1 (sold separately):** (as of 2/21/14) see images below

Purchase Havis, Inc. optional floor brackets and hardware kit # **C-B66**.

**C-B66** kit includes the following:

- 1 - CM006056 (driver side forward bracket)
- 1 - CM006057 (driver side rear bracket)
- 1 - CM006058 (passenger side forward bracket)
- 1 - CM006059 (passenger side rear bracket)
- 2 - GSM33195 (10/32 x 3/4 PPHMS)
- 2 - GSM31003 (#10 flat washer)
- 2 - GSM33001 (1/4 x 3/4 HHCS)
- 2 - GSM31005 (1/4 flat washer)
- 2 - GSM33745 (M8 x 35mm floor bolt)
- 2 - GSM31007 (3/8 flat washer)

### **Floor Mount bracket option 2:**

Purchase OEM center seat brackets and hardware from a Dodge parts supplier.

Part numbers as follows:

- 1 - 68050607-AA (driver side forward bracket)
- 1 - 68050608-AA (driver side rear bracket)
- 1 - 68050605-AA (passenger side bracket)
- 1 - 68050606-AA (passenger side bracket)
- 2 - 6508117-AA (floor bolt)
- 4 - 5139638-AB (nut)

See Related Product information document (C-VS-0814-RAM-1\_RD\_3-14-12)

On web site product page for OEM part numbers with photos

**NOTE: Additional 1/4" hardware provided to install C-HDM-200 Series poles to C-TMW Series**

**TOOLS REQUIRED:**

Ratcheting Wrench  
Metric Socket Set


Standard Socket Set  
Tape Measure and pencil

**HARDWARE:**


<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART #</u>
16	1/4" x 3/4" Hex head bolt	GSM33001
8	1/4" Serrated nut	GSM30023
12	1/4" Flat washer	GSM31005
8	1/4" Split lock washer	GSM31026
8	1/4" Regular nut	GSM30005

**Always!**


- Read all instructions before installing any Havis, Inc. products.
- Use only hardware provided with install kit.

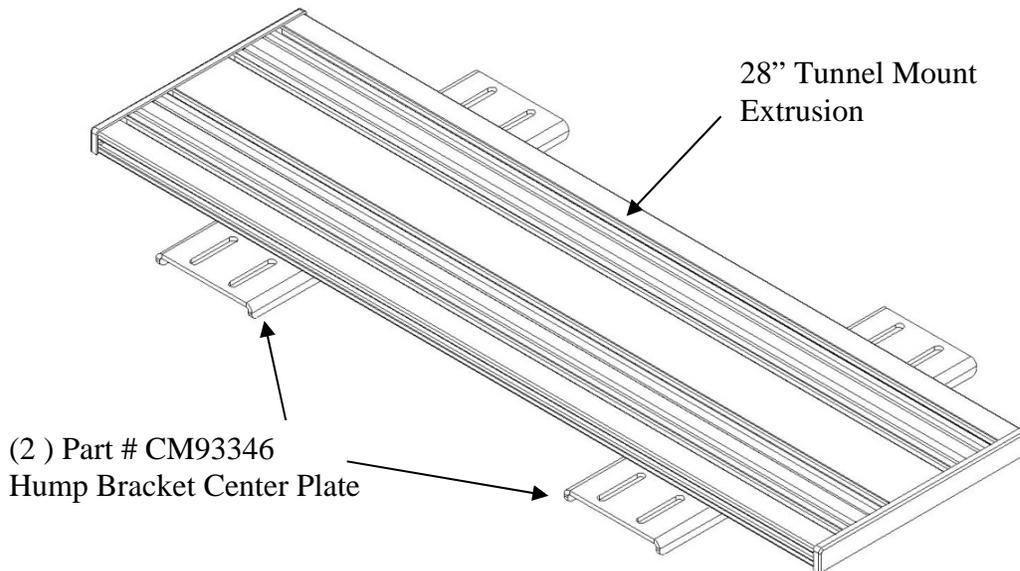


CM006056  
Driver side front bracket with  
GSM33745 bolt and  
GSM31007 flat washer

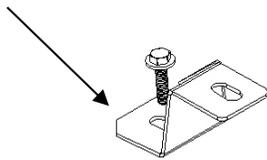


CM006058  
Passenger side front bracket with  
GSM33195 machine screws and  
GSM31003 flat washers



Optional  
C-B66  
Mount Kit

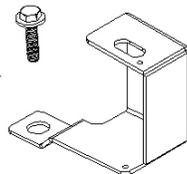

CM006057  
Driver side rear bracket with  
GSM33745 bolt and  
GSM31007 flat washer

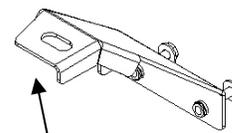

CM006059  
Passenger side rear bracket  
with GSM33001 bolts and  
GSM31005 flat washers



Remove OEM center seat pad section. This shows the standard 2011 Dodge OEM seat brackets. Older trucks have slightly different brackets, but mounting works the same.



Make sure you leave the OEM center seat brackets in place. Small tabs on driver side brackets will have to be bent down.



Attach hump bracket center plates onto the OEM seat brackets with  $\frac{1}{4}$ " x  $\frac{3}{4}$ " hex head bolts, flat washers. Lock washers and nuts.



Attach Tunnel Extrusion to center plates with  $\frac{1}{4}$ " x  $\frac{3}{4}$ " hex head bolts and serrated nuts. Note: The head of the bolt slides into the bottom of Tunnel.



Determine position of the console housing and attach it to the Tunnel Mount with  $\frac{1}{4}$ " hardware provided with console Hardware Kit.



Sample of console housing with C-HDM-209 and Docking Station Computer mount in position. It is now ready to complete wiring and control head installation.



**Optional CM006057**  
driver side rear bracket with  
GSM33745 (M8 x 35mm bolt) and  
GSM31007 (3/8 flat washer)  
**(included in C-B66 kit)**



**Optional CM006056**  
driver side forward bracket with  
GSM33745 (M8 x 35mm bolt) and  
GSM31007 (3/8 flat washer)  
**(included in C-B66 kit)**



**Optional CM006058**  
passenger side forward bracket with  
GSM33195 (10/32 x 3/4 screws) and  
GSM31003 (#10 flat washers)  
**(included in C-B66 kit)**



**Optional CM006059**  
passenger side rear bracket with  
GSM33001 (1/4 x 3/4 screws) and  
GSM31005 (1/4 flat washers)  
**(included in C-B66 kit)**