

INSTALL INSTRUCTIONS

C-TSM-INUT-D

2013-2019 Ford Interceptor Utility

Will not work in Interceptor Utilities with OEM Optional Rear HVAC

CM008279 Requires Optima Series 34 Battery

Will not work with option 63V

TOOLS REQUIRED:

Drill and drill bits

Socket set

Air Saw or cutting tool

Marker or pencil

HARDWARE:

C-TSM-INUT-D

<u>QTY:</u>	<u>PART #</u>	<u>DESCRIPTION:</u>
4	GSM33185	#10 x 3/4" Sheet metal screw
14	GSM30027	8-32 Keps nut
14	GSM33110	8-32 x 1/2" Screw

CM008279 Battery Tray

<u>QTY:</u>	<u>PART #</u>	<u>DESCRIPTION:</u>
1	CM007798	Lower battery mounting bracket
1	CM007799	Upper battery mounting tray
1	CM007843	Battery hold down
2	GSM20400	1/4 x 9 1/4" J bolt
2	GSM30023	1/4" Serrated nut
14	GSM30027	8-32 Keps nut
2	GSM30201	M6 nut
2	GSM31015	1/4" x 1 1/4" Fender washer
14	GSM33110	8-32 x 1/2" Screw
5	GSM33185	#10 x 3/4" Sheet metal screw


Always!

- Read all instructions before installing any Havis, Inc. products.
- **Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!**
 - Use hardware provided with install kit

Equipment tray
CM008215
(Optional)

Battery tray
CM008279
(Optional)

C-TSM-INUT-D

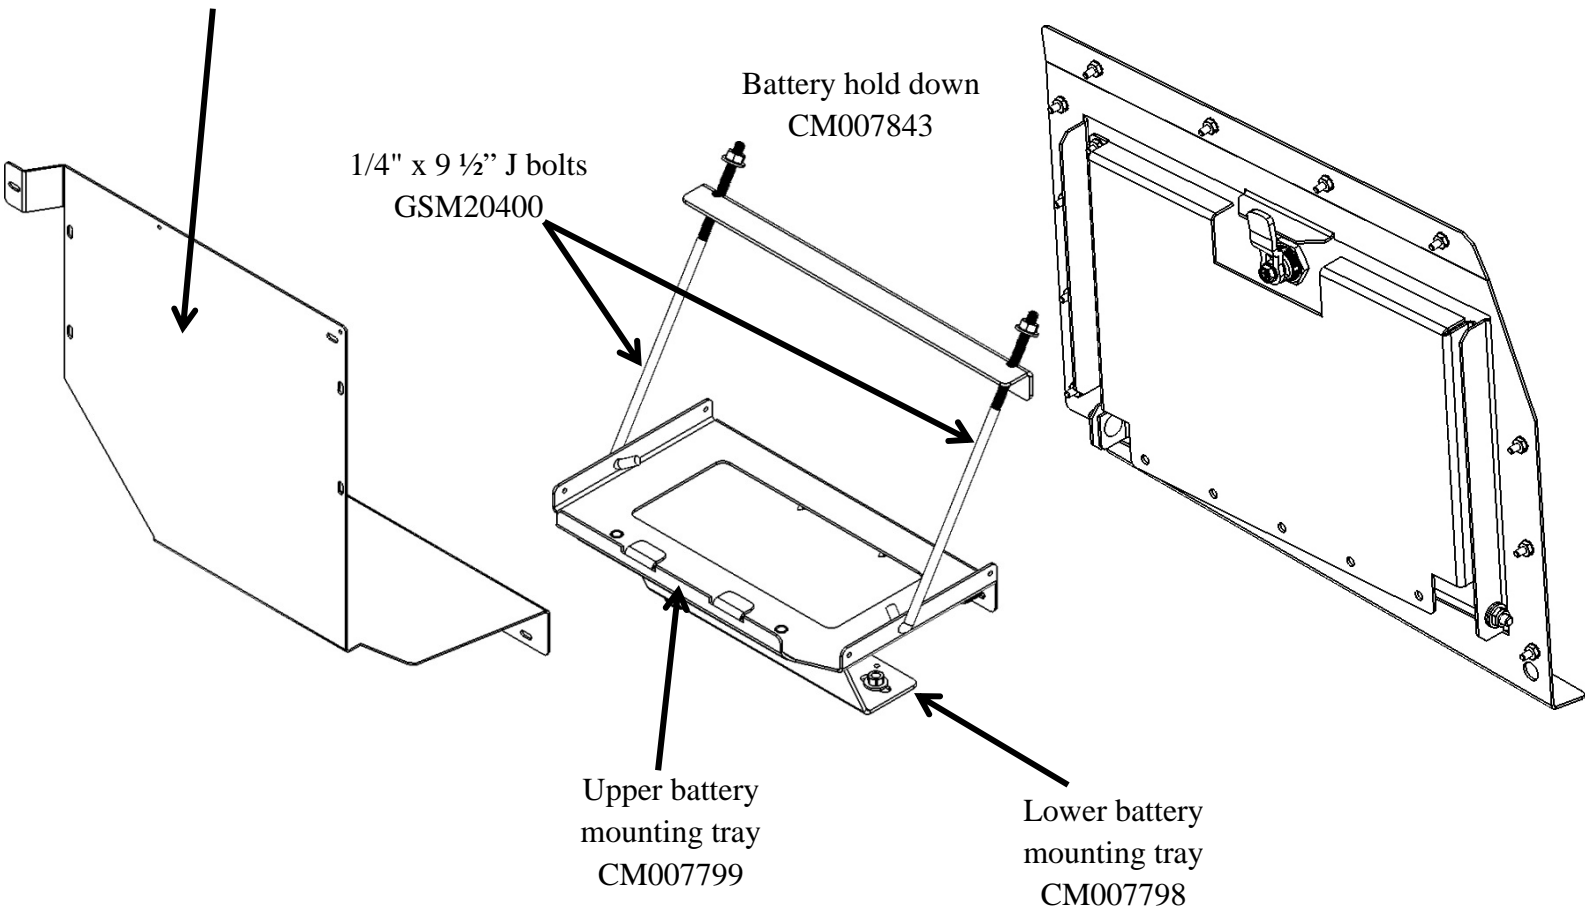

Instructions for installing the C-TSM-INUT-D



Carefully remove rear side trim panel from the vehicle.



Lay door frame over previously removed panel and trace opening on the panel with a paint marker. Cut along the paint line completely.



Drill and attach the door frame to the panel using fourteen (14) 8-32 x 1/2" screws and keps nuts.

Instructions for installing the CM008279 Battery tray



Place the two (2) fender washers onto the OEM studs. Place the battery tray assembly onto the studs.




Attach battery tray to studs with two (2) 1/4" washers (GSM31015) and two (2) M6 nuts (GSM30201).



Drill the sheet metal in the pinch weld area. Remove the inner panel to allow access to all the holes in the battery tray. Attach the tray using four (4) sheet metal screws.



Re-install panel back into car.

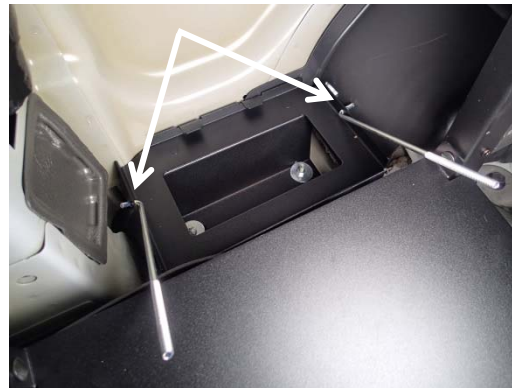

Install two (2) J bolts into the battery tray through opening in door.




Carefully place battery onto the tray and add the battery hold down to the J bolts and connect cables.

Tighten all hardware


Instructions for installing the CM008215 Equipment tray



View of compartment with panel removed.

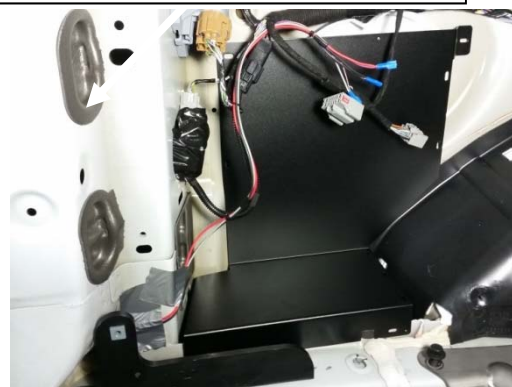

Install optional equipment tray into compartment using four (4) #10 x 3/4" sheet metal screws. Mount and wire equipment as desired.

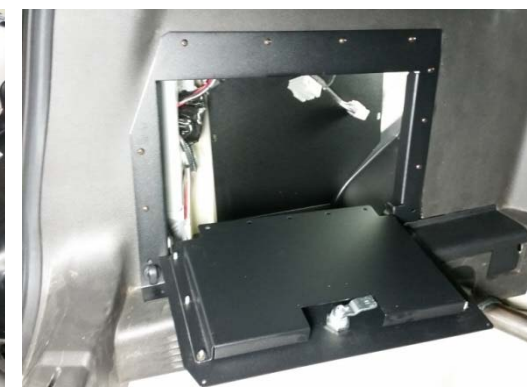

Installation of compartment is now complete. Mount and wire equipment to door if desired.