


PROJECT #	REV.	DESCRIPTION
1843	6-15	RELEASED TO PRODUCTION

## INSTALLATION INSTRUCTIONS

1. C-UMM-102 HAS A HANDLE SUPPLIED IN THE HARDWARE KIT. IF THE HANDLE IS TO BE USED REPLACE THE NYLOCK NUT WITH THE SUPPLIED HANDLE ON THE DESIRED JOINT.
2. THERE ARE TWO PRINCIPAL WAYS TO MOUNT THE C-UMM-102. FOR SINGLE POINT MOUNTING
  1. USE CUSTOMER SUPPLIED HARDWARE THROUGH THE CENTER HOLE.
  2. TO MOUNT USING THE THREE SCREWS A 1/4" HOLE PATTERN IS REQUIRED ON 1" CENTERS. THE MAJORITY OF HAVIS PRODUCTS HAVE THIS HOLE PATTERN. IF IT IS NOT AVAILABLE DRILL HOLES AS REQUIRED. THEN ATTACH THE HARDWARE USING THE DIAGRAM TO THE RIGHT AS A GUIDE.
3. TO MOUNT A COMPUTER OR MONITOR WITH A VESA HOLE PATTERN TO THE C-UMM-102. LINE IT UP WITH THE HOLES AND ATTACH USING THE HARDWARE PROVIDED WITH THE COMPUTER OR MONITOR MOUNT.
4. IF THE COMPUTER OR MONITOR DOES NOT HAVE A VESA HOLE PATTERN AN ADAPTER WILL BE REQUIRED (SEE C-MM-200 SELECTION). ATTACH THE ADAPTER TO THE COMPUTER OR MONITOR THEN THE ADAPTER TO THE C-UMM-102 WITH THE 4X 1/4-20 SERRATED NUTS PROVIDED.
5. SELF ADHESIVE RUBBER BUMPERS RM25062 ARE PROVIDED TO PREVENT DAMAGE TO OTHER EQUIPMENT WHEN OPERATING THE C-UMM-102. USE IF DESIRED.

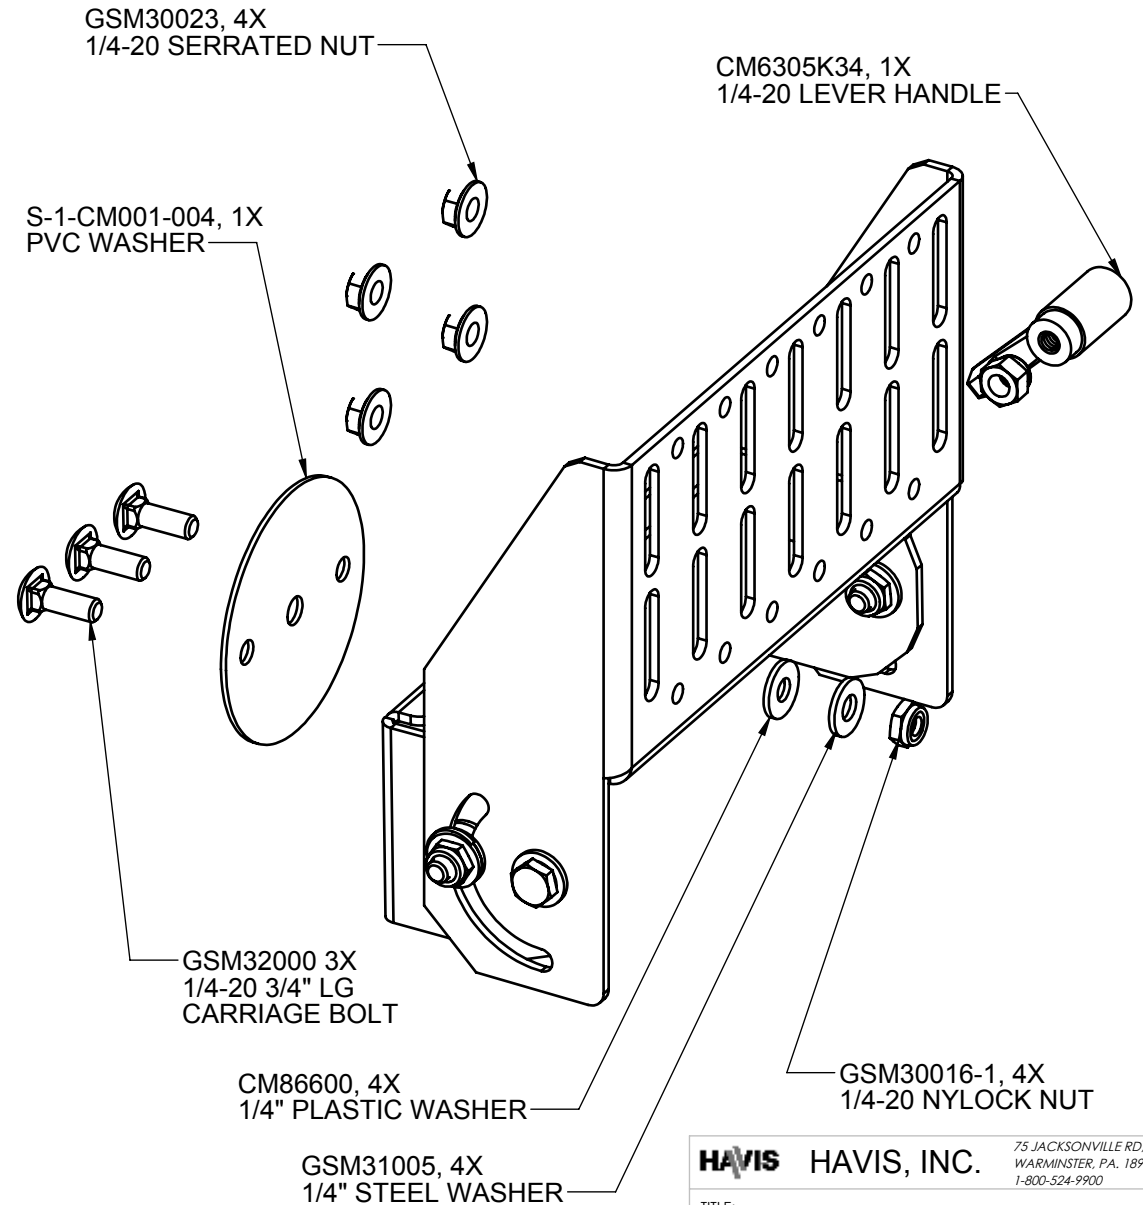

<b>HAVIS</b> HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: C-UMM-102 INSTALLATION INSTRUCTIONS		
<b>DO NOT SCALE DRAWING</b>		
SIZE <b>A</b>	DWG. NO. C-UMM-102-INST	REV 6-15
WEIGHT (LB): 2.595	SCALE: 1:12	SHEET 1 OF 1