

INSTALL INSTRUCTIONS C-VS-0812-TAH-1

2015-2020 Chevy Tahoe Police Pursuit Vehicle (PPV)

Vehicle Specific Console with 20" inches of Equipment mounting space

TOOLS REQUIRED:

Phillips Screw Driver	Standard Socket set	T-20 Torx Bit
Metric Socket set	Wire Cutters	Wire Crimping tool

INSTALLATION PARTS AND MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART#</u>
1	Main Console Housing	
1	Console housing main support bracket	CM007903
2	Floor bracket	CM006193
1	Driver side trim panel	CM008219
1	Passenger side trim panel	CM009196
1	Electrical accessory mounting plate	CM006415
1	Lower dash support bracket	CM006725
1	Lower bracket support extension	CM008737
2	1/2" Aluminum spacer for floor bracket (rear)	CM003200
2	3/4" Aluminum spacer for floor bracket (front)	CM003216
1	Diagonal support bracket	CM009198
1	Lighter plug wiring harness	CMC-E2
12	Barrel connectors	GSM20208
12	1/4" Serrated nut	GSM30023
2	10-32 Keps nut	GSM30028
4	#10 Flat washer	GSM31003
4	#10 Lock washer	GSM31025
2	1/4" Flat washer (black)	GSM31005
12	1/4" x 3/4" Carriage bolt	GSM32000
4	10-32 x 1/2" Machine screw	GSM33118
8	#8 x 3/8 Torx head sheet metal screws	CM86508
6	1/4" x 3/4" Hex bolt	GSM33001
4	3/8" Flat washer	GSM31149
4	10mm x 45mm Hex bolts (if floor is already threaded)	GSM33733
4	3/8 x 1.75" Hex bolt (if floor mount location is <u>not</u> threaded)	GSM33303
2	M6 x 1.0 x 20mm bolt	GSM33711
2	1/4" flat washer (silver)	GSM31000


Notes:

1. This console was designed for the Police Pursuit Tahoe. However it can be installed into a Retail Tahoe or Suburban by removing the OEM center console. When the OEM console is removed, you must order the lower center trim panel from Chevy. Consoles will not fit properly without OEM lower center trim. Chevy part number for instrument panel lower center trim #22885554 (Color – Black)
2. **OEM #22885554 was changed to #84565261 in 2019.**
3. The C-VS-0812-TAH-1 console provides mounting for the OEM Aux module, 12 volt and 110 volt sockets, but it does **NOT** have provisions for relocating the controls from the rear end of the OEM console.

Always!

- Read all instructions before installing any Havis, Inc. products.
- Use hardware provided with install kit

**C-VS-0812-TAH-1
Assembly**

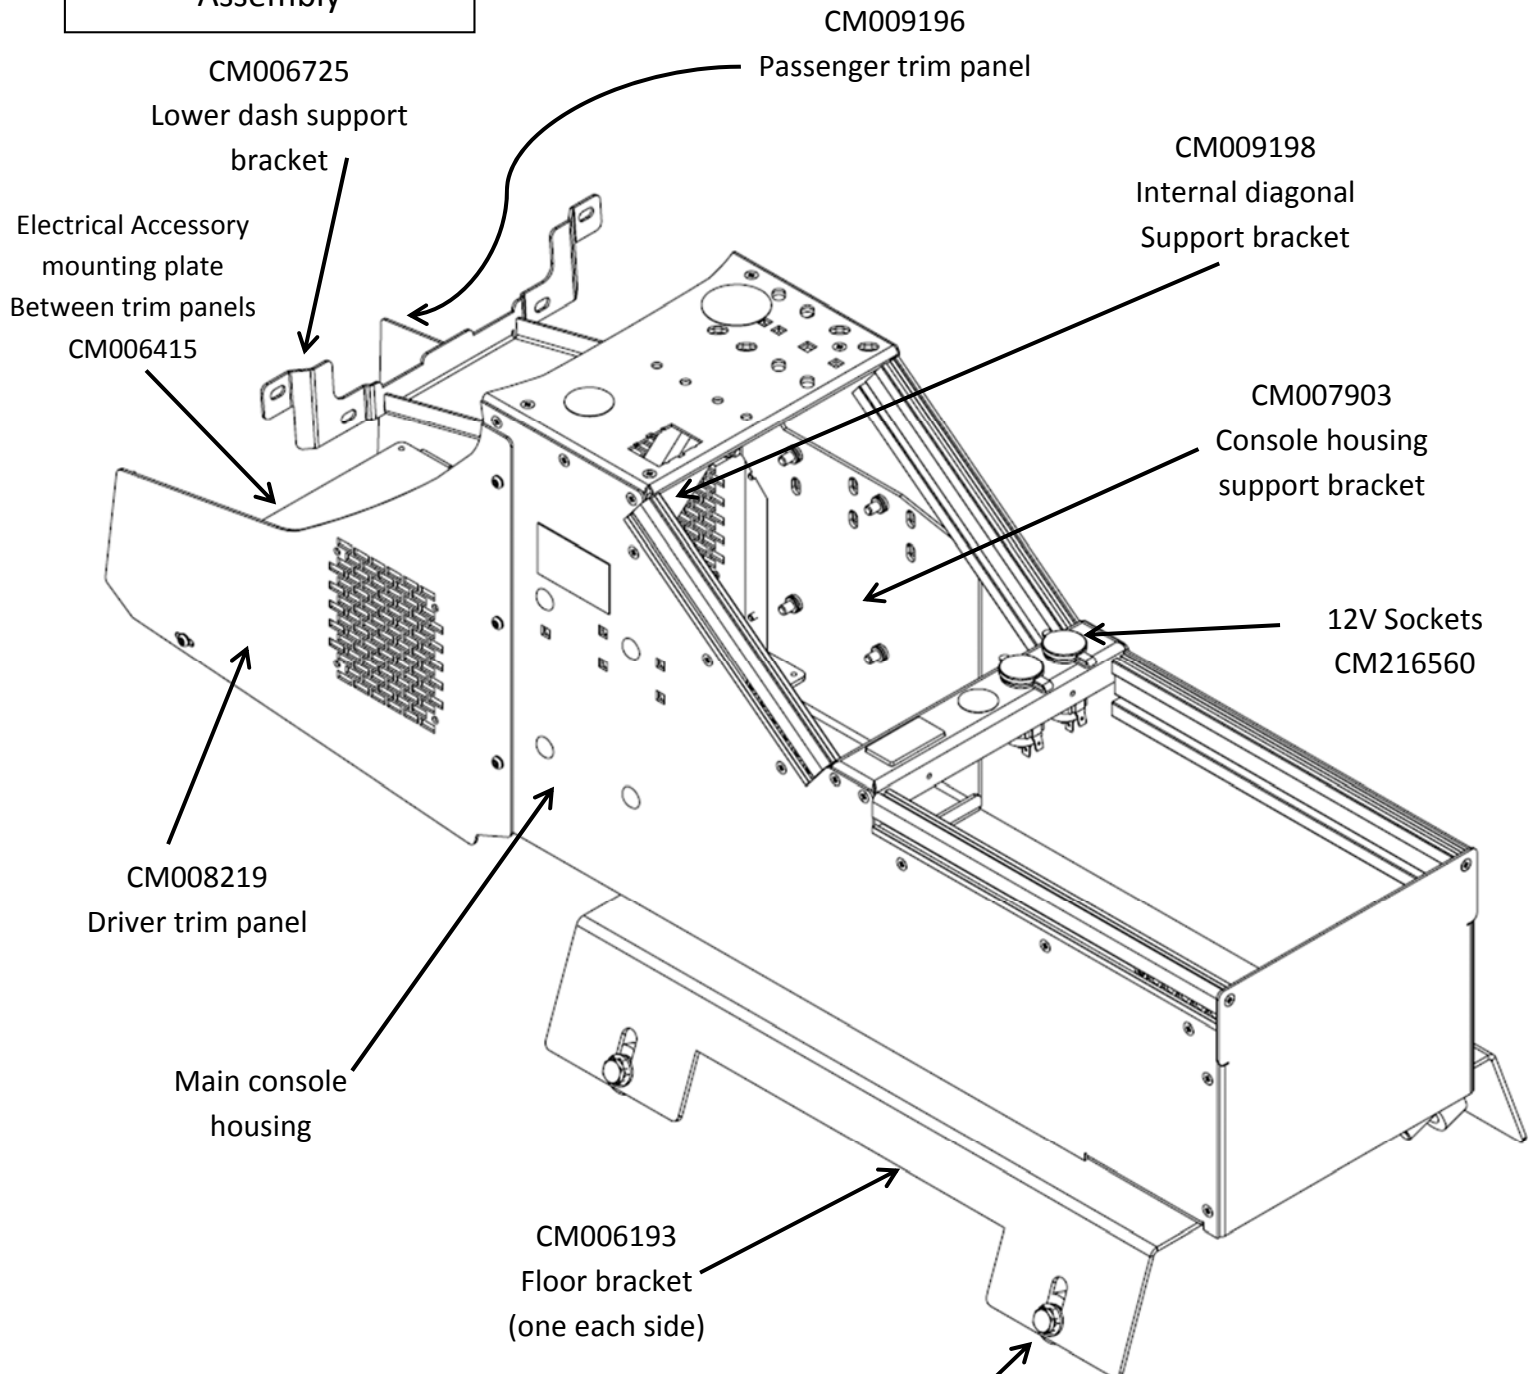

IMPORTANT NOTES:

Install CM006193 floor brackets to existing OEM mount points as follows.
Between bracket and hump, use 1/2" spacers at rear and 3/4" spacers at front.

RE: Police Pursuit Vehicle without center seat or OEM console.
Use 3/8" x 1.75" self-threading bolts and 3/8" flat washers and spacers.

RE: Retail Tahoe or PPV (code A95) with OEM center console or PPV with center seat.
Remove console or seat and use 10mm x 45mm bolts and 3/8" flat washers and spacers.



View of Tahoe transmission hump between front seats.



Install CM006193 hump brackets to existing OEM mount points. Use 10mm x 45mm bolts and 3/8" flat washers (Retail Tahoe) Or 3/8" x 1.75" self-threading bolts and washers for (Police Package) Between bracket and hump, use 1/2" spacers at rear and 3/4" spacers at front.



Pull back the driver side lower dash panel.




Remove rubber cover to gain access and remove two (2) lower dash panel screws. (7mm socket)



Pull lower dash panel towards you to remove. Disconnect power plugs.



Attach Lower Support Bracket (CM006725) to existing OEM threaded holes using two (2) M6 x1.0 x 20mm bolts.

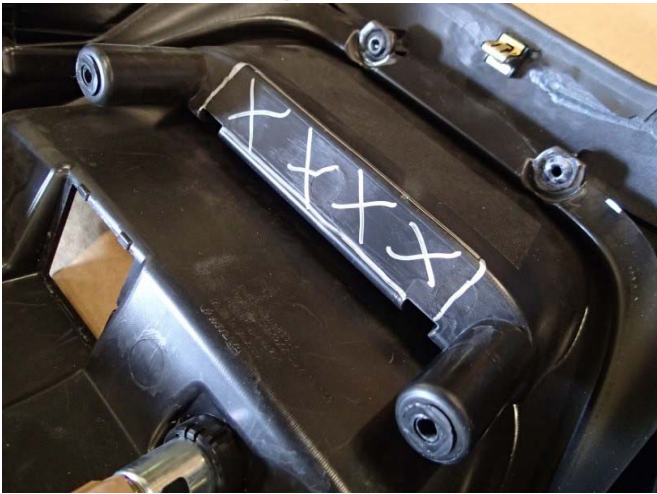

The lower dash accessory pocket must be modified to accommodate the lower bracket. Mark and cut as shown. (Air saw works well)



Once you've made your cut, clean and deburr the edges for a finished look.



Re-install the lower dash panels and all hardware.



Attach the lower dash support extension (CM008737) to the bracket using 10-32x1/2" screws and washers.




Place console in vehicle and slide up to dash.



Attach console to lower dash bracket extension using 10-32 x 1/2" screws, washers, and keps nuts.



Install factory aux module and 12 volt socket into top of console. You may need to extend the 12 volt socket wires to reach. Barrel connectors are supplied.

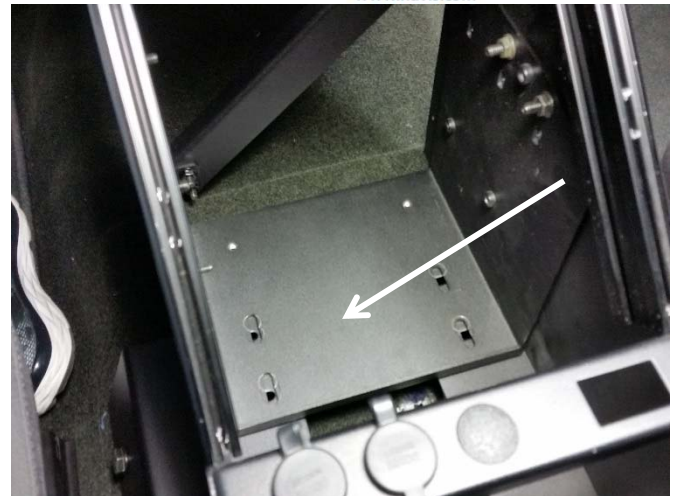

Line up "U" bracket with the floor bracket and install 1/4"x 3/4" carriage bolts and 1/4" nuts.



Repeat process for rear hardware.



Slide the electrical accessory mounting plate (CM005915) in through the side and into place. (forward mount tabs face down)



Loosely attach the electrical accessory mounting plate to the console "U" bracket with 1/4" x 3/4" Hex bolts and washers.



Attach driver side trim panel to console with four (4) #8 x 3/8 Torx head sheet metal screws.



Attach passenger side trim panel to console with four (4) #8 x 3/8 Torx head sheet metal screws.
Remove metal knockout for OEM 120 volt socket if mounting socket is desired.



Install OEM 120 volt socket in side panel if desired.

Note: This photo shows the OEM 120 volt socket mounted in the side trim. OEM wire ties and tape may need to be cut in order to have enough wire to extend to this location. Splicing four (4) wire extensions may also be required.

Wire for extensions must be supplied by the installer.



Install control heads and accessories.



DELL Latitude 14 with DS-DELL-401, C-MD-119, C-AP-0325, C-ARPB-114, C-CUP2-I and C-USB-1.



DS-DELL-602, C-HDM-305, C-UMM-101, C-KBM-201, C-KB-101, C-MD-204, C-AP-0325, C-ARPB-114, C-CUP2-I and C-USB-1.



Installation is now complete.