

INSTALL INSTRUCTIONS C-VS-2400-INUT-1

2013-2019 FORD INTERCEPTOR UTILITY

Fits Standard Interior and Optional Interior Upgrade (Code 65U)

Vehicle Specific Console

24” inches of Equipment mounting space

TOOLS REQUIRED:

Phillips Screw Driver	Standard Socket set	T-20 Torx Bit
Metric Socket set	Wire Cutters	Wire Crimping tool

INSTALLATION PARTS AND MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART#</u>
1	Main Console housing	
1	Front hump bracket (pre-attached to console housing)	CM005141
1	Rear mount bracket	CM004239
1	Front Top trim panel	CM005105
1	Driver side trim panel	CM004237
1	Passenger side trim panel	CM004236
4	12 volt socket	CM216560
1	Wire and fuse for two (2) 12 volt sockets	CMC-E2
1	Adaptor Plate for OEM Aux panel	CM005898
1	Rear adaptor	CM006701
2	7/8” hole plug	CM86430
10	#8 x 3/8 PHSMS Torx head screws	CM86508
4	Blue spade connector	GSM20224
8	1/4” Hex flange nut	GSM30023
2	Speed nut	GSM30199
12	1/4” Flat washer	GSM31005
1	“O” ring	GSM31331
1	1.875” (1- 7/8”) diameter O-Ring	GSM31335
6	1/4” x 3/4" Hex head bolt	GSM33001
4	1/4” x 1" Hex head bolt	GSM33002
4	#8 x 1/4 PPHMS (screws for Aux panel & rear adaptor)	GSM33178
2	6mm x 20mm HHCS	GSM33711
2	#10 x 3/4 PPHMS-SS	GSM34170
2	5/8”OD x 1/4"ID x 7/16” long spacer	GSM34602


ALWAYS!

- * Read all Instructions before installing any Havis, Inc. products.
- * Use Hardware included with install kit

C-VS-2400-INUT-1 (Assembly)

Adaptor plate for 2014 and newer Ford Retail Explorer and Interceptor Utility with 65U interior upgrade

Adapts the smaller (2014) OEM aux input panel to fit console forward plate. Adaptor plate with "O" ring and mount screws **included with consoles MFG after 9/1/13.** Retrofit / Adaptor kit can be purchased separately if needed. Part # **CM005919**
CM005919 kit includes – 1 – CM005898, 1 - GSM31335 and 2 - GSM33178

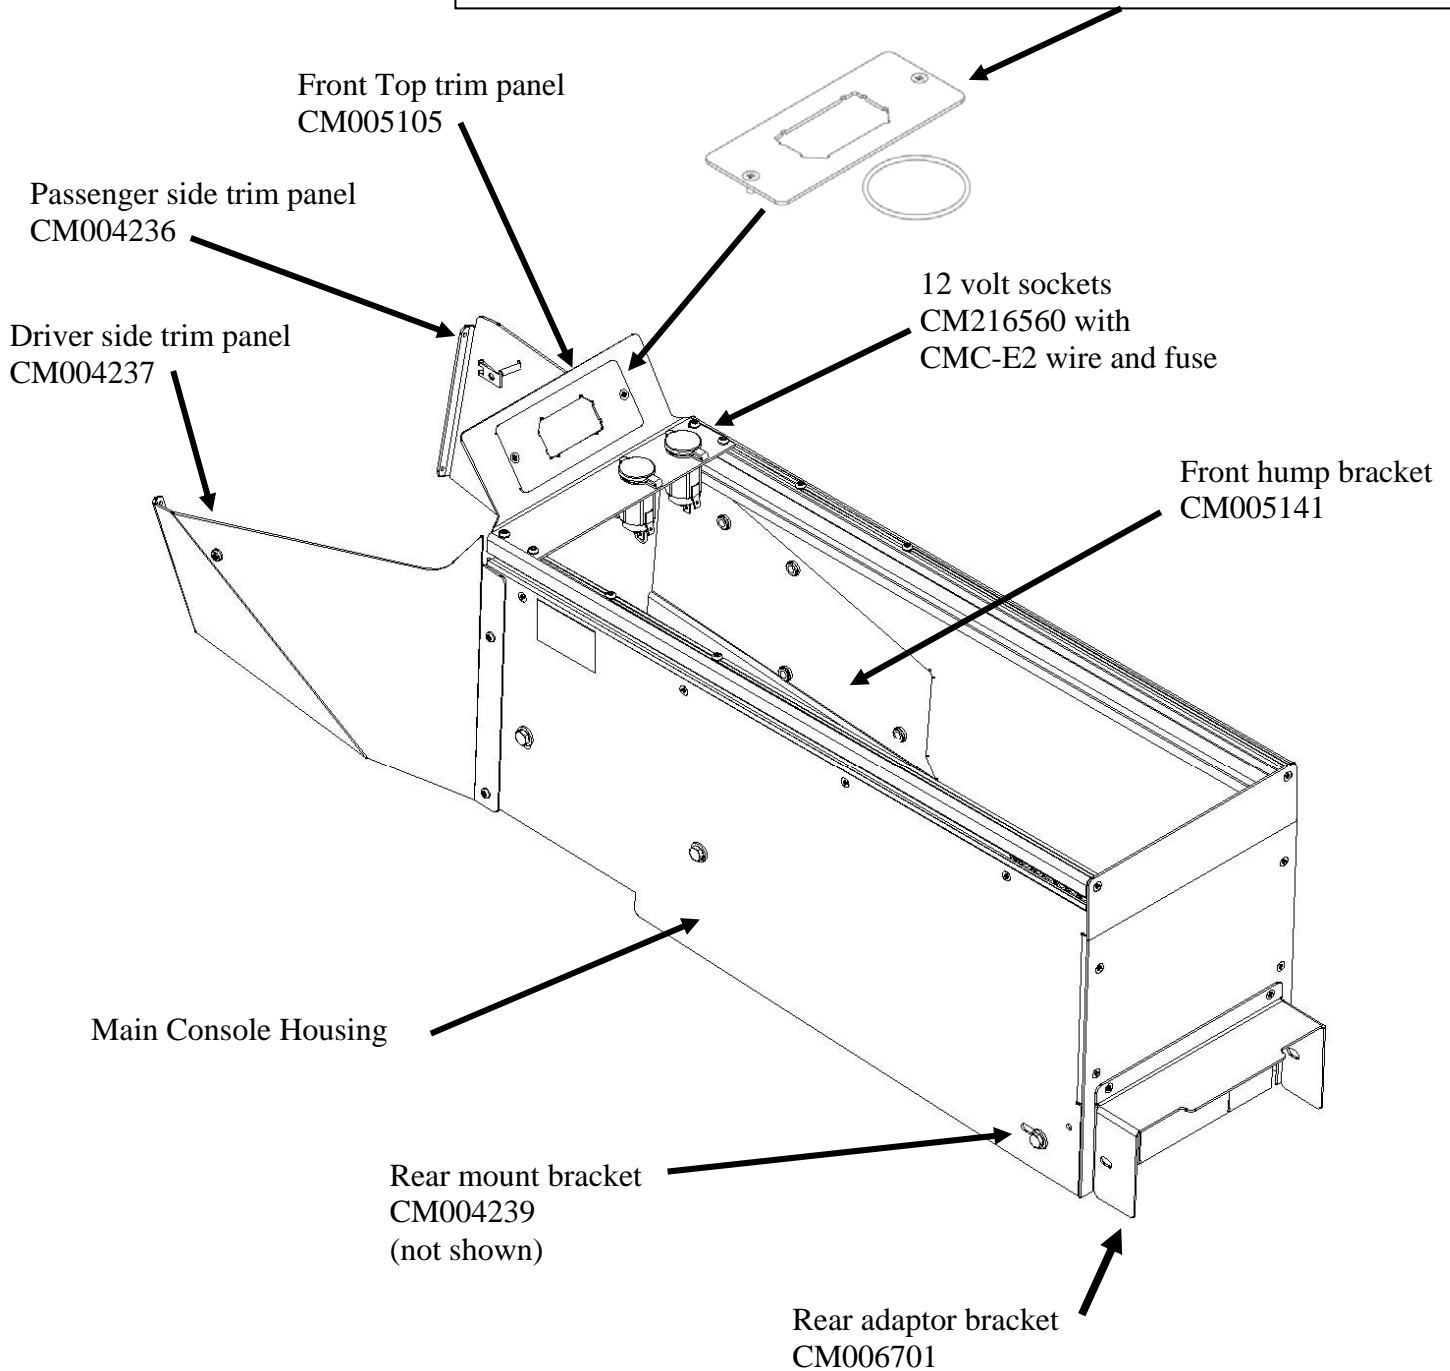


NOTE: The console is not long enough to connect to the optional OEM rear wire conduit without a rear adaptor. However there is a knockout for the optional OEM conduit located in the console end panel.


Consoles manufactured after 11/1/14 have a revised end panel (CM005876) and include a rear adaptor (CM006701) for connecting to the optional OEM wire conduit. This adaptor is not used if the vehicle does not have the conduit option.



View of center console included with OEM Interior upgrade 65U.

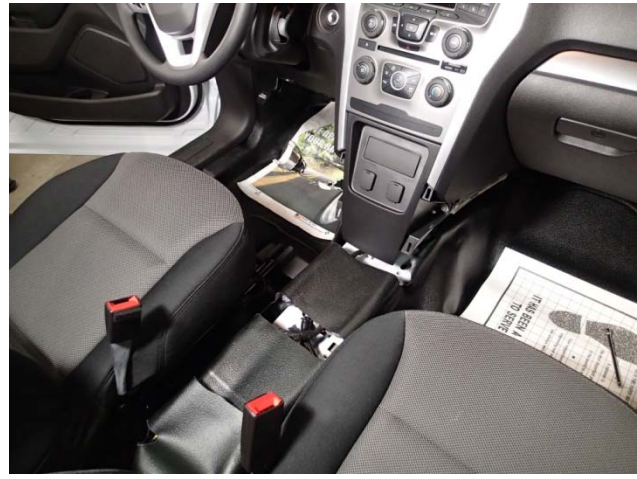

Remove OEM tunnel plate and lower dash trim included with Standard Interceptor Utility or center console included with Optional Interior upgrade.

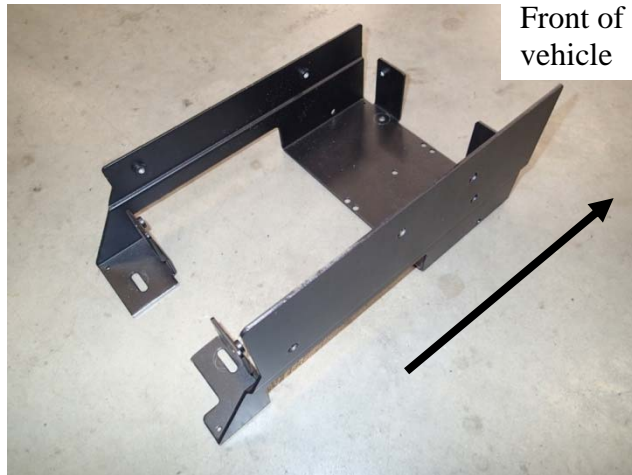

Front hump bracket CM005141



Carefully place and bolt front hump bracket to floor with previously removed OEM floor bolts. Wire harnesses go on top of bracket. **Note:** Rubber mat will need to be cut first.



Remove sensor from back of center lower dash trim.

Note: This sensor is not located on this trim panel on 2016 vehicles. Relocation is not required.




Mount sensor inside console as desired. (for 2013 -2015 vehicles only)



Sensor can be mounted on the underside of the rear mount bracket for the Interior upgrade 65U.

Harness may not be long enough for standard Utility.

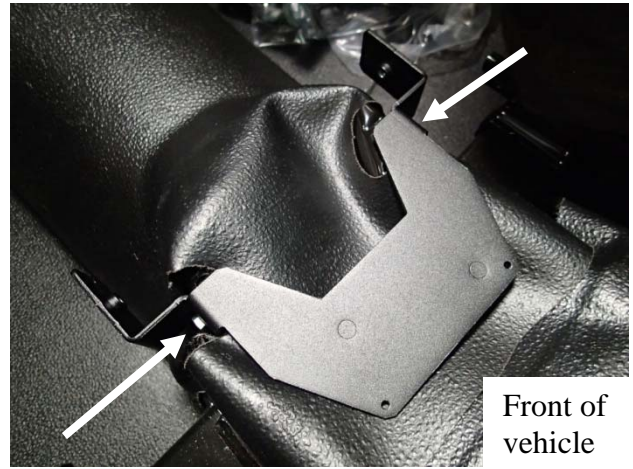

Attach rear bracket to existing OEM mounting flanges with 6mm x 20mm hex bolts.



Place console housing between seats and attach sides to floor brackets with 1/4" x 3/4" Hex bolts and flat washers. (three each side)




Attach top forward panel to console with 8 x 3/8" Torx screws.
Install 12 volt sockets and wiring.




Temporarily attach side trim to console with 8 x 3/8" Torx screws and drill 1/8" hole into plastic dash panel located behind forward hole.



Remove side trim panel and place supplied speed nut onto drilled location. This provides a sturdy mount for trim panel screw. (follow same procedure on both sides)

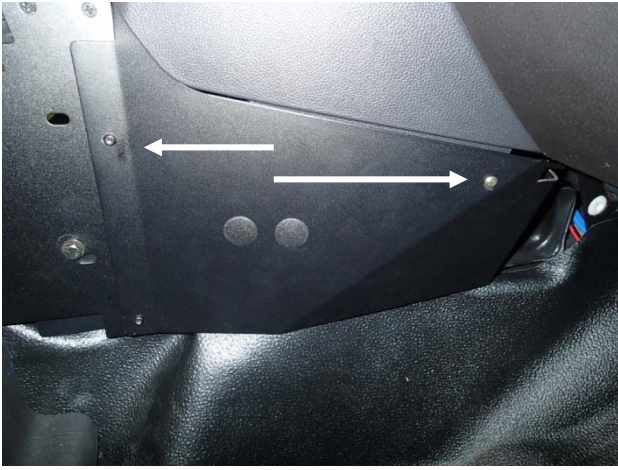

Attach side trim panel to console housing with two (2) 8 x 3/8" Torx screws and one (1) #10 x 3/4" sheet metal screw to lower dash. Install driver side filler panel the same way as the passenger side.

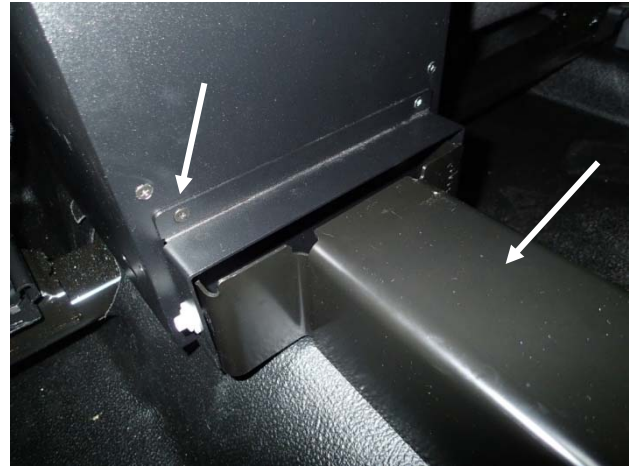

If vehicle includes optional OEM conduit, remove the rear knockout and attach the supplied rear adaptor to rear end of console with 8-18x1/4 PFHMS. Bolt adaptor to conduit with OEM conduit hardware.



Run wiring and install control heads and accessories.



Snap in OEM Aux panel
Note: This panel is reused from the OEM dash section previously removed.



Basic installation complete



C-VS-2400-INUT with C-CUP2-I and C-AP-0645-L.