

INSTALL INSTRUCTIONS C-VS-2500-CHGR-2

25" Vehicle Specific Console for 2021-2022 Dodge Charger (Police Package)

NOTE: WILL NOT WORK ON 12.1 INTEGRATED TOUCH SCREEN

TOOLS REQUIRED:


Phillips Screw Driver
7/16 wrench

Socket set (Standard & Metric)
T-20 Torx Bit

Wire Cutters / Crimping tool

PARTS and MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART#</u>
1	Driver Side Trim Panel	11654
1	Passenger Side Trim Panel	11655
1	Sensor Cover	11209
8	#8 x 1/4" Phillips Flat head screw	16425
3	1/4" x 3/4" Self Threading screw	16359
2	1/4" x 1" Fender washer	16130
2	6mm Hex nut	16104
4	1" x 1" Velcro Hook & Loop	15836
1	O-Ring	23537
1	7/8 plug	13401
4	1/4 Spade terminal	15899

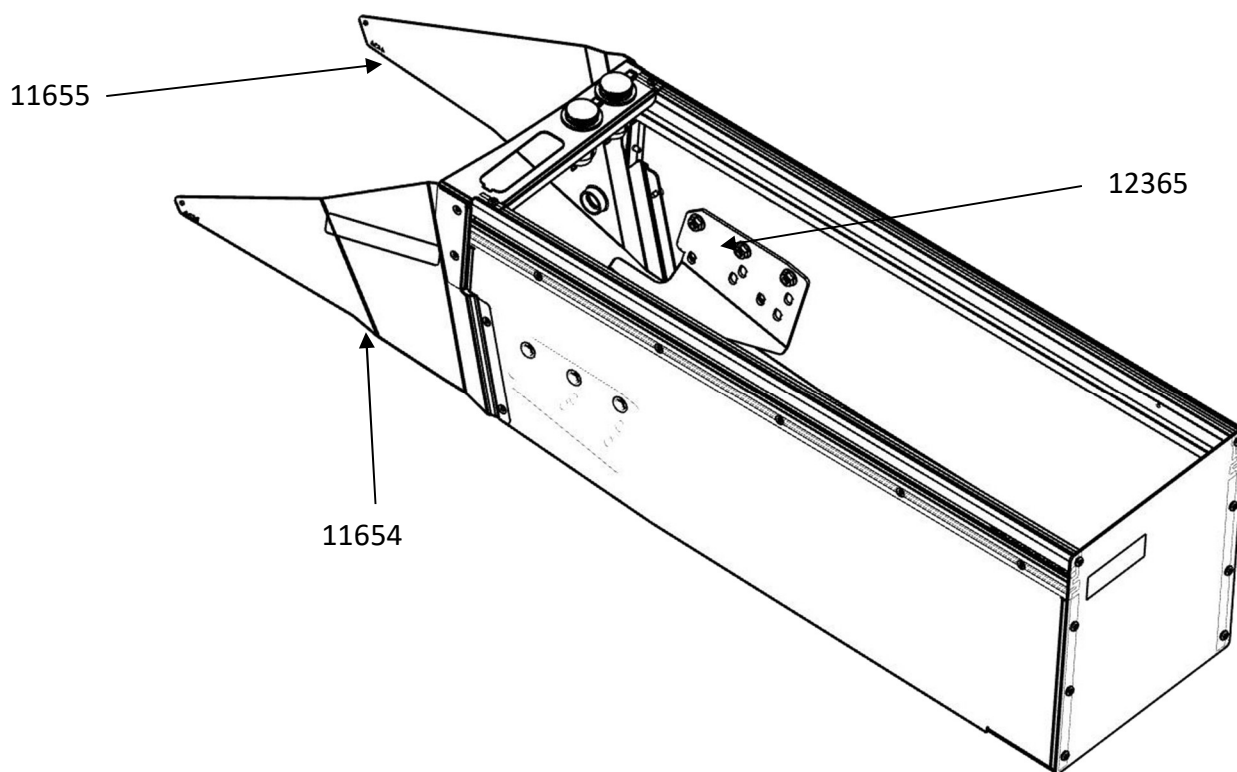



Remove forward O.E.M console plastic cover and remove two (2) nuts from front floor bracket. Nuts to be reused later. (10mm)




Remove bolts that hold underside of extrusion to rear floor bracket. (7/16 wrench) Remove rear floor bracket bolts and center console bolt. (10mm)



Remove O.E.M. plastic center console



Remove OEM lighter plugs and AUX panel from factory center console.

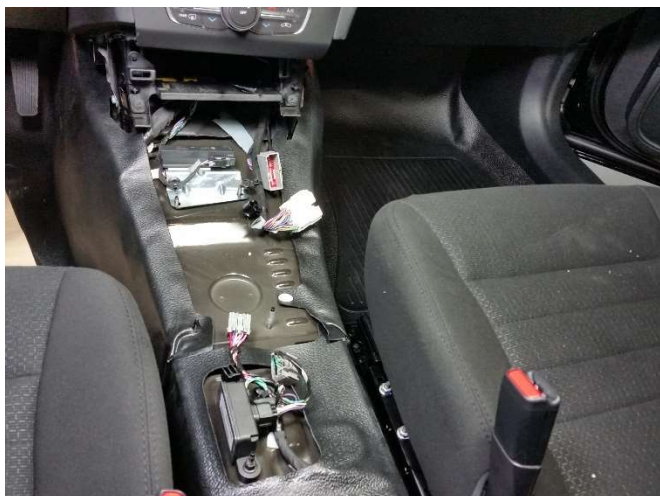

Plug O.E.M. wire harness back onto original connectors.



Place console housing into vehicle. Slide console up to the dash and loosely start previously removed nuts.



Use 1/4 x 3/4 self-threading screws (included in hardware kit) to loosely attach rear of console to existing floor inserts. Inserts located under rubber mat as shown.



Attach passenger side trim panel on with # 8 x 1/4" Phillips head screws.



Attach driver side trim panel on with # 8 x 1/4" Phillips head screws.



A cover is provided to guard the O.E.M. Sensor on transmission hump. Attach to existing stud and 6mm nut and washer provided.



Ensure OEM aux panel and 12v sockets are plugged in. Wire and mount equipment.



Installation is now complete.