


1. LOCATE AND REMOVE FOUR (4) SCREWS HOLDING ON EACH DOOR PANEL.
 1. SCREW AT BOTTOM OF DOOR PANEL.
 2. SCREW UNDER PLASTIC COVER AT LEVER HANDLE.
 3. TWO (2) SCREWS UNDER PLASTIC COVER AT ARMREST HANDLE. (7mm SOCKET)
2. REMOVE/UNSNAP ENTIRE DOOR PANEL FROM DOOR WITH A TRIM REMOVAL TOOL. DISCONNECT LATCH CABLE FROM DOOR HANDLE.
3. REMOVE BRACKET FOR DOOR PANEL ARMREST. (7mm SOCKET).
4. **NOTE: MAKE SURE TO REMOVE TOP RUBBER WIPER MOULDING FROM DOOR PANEL AND PLACE BACK ON THE DOOR.**
5. REMOVE DOOR SPEAKER (7MM SOCKET)
6. REMOVE WINDOW SWITCH FROM DOOR PANEL AND REATTACH IT TO ORIGINAL PLUG. NEATLY TIE THE SPEAKER WIRE, SWITCH WIRE WITH SWITCH INSIDE THE SPEAKER CAVITY SO IT DOES NOT INTERFEREE WITH THE WINDOW OPERATION. **NOTE: WRAPPING SWITCH IN A PLASTIC BAG WILL PROTECT AGAINST POSSIBLE EXPOSURE TO WATER.**
7. SIMPLY REMOVE THE SHORT DOOR LOCK ROD FROM OEM LOCK ASSEMBLY.
8. MAKE SURE OEM DOOR PARTS ARE SECURE AND LOCKS AND WINDOWS ARE OPERATIONAL BY USING FRONT DOOR CONTROLS. **NOTE: DOUBLE CHECK THE LOCK OPERATION SEVERAL TIMES BEFORE INSTALLING THE DOOR PANEL.**
9. PLACE DOOR PANEL ONTO DOOR. THE TOP WILL HOOK INTO THE RUBBER MOULDING.
10. DRILL MOUNTING HOLES FOR #10 SHEET METAL SCREWS WITH 5/32" DRILL BIT.
11. ATTACH DOOR PANELS USING NINE (9) GSM34170 SHEET METAL SCREWS #10 X 3/4" LG PHILLIPS PAN HEAD SHEET METAL SCREWS.

10-006588-XX
(PS PASSENGER SIDE SHOWN)

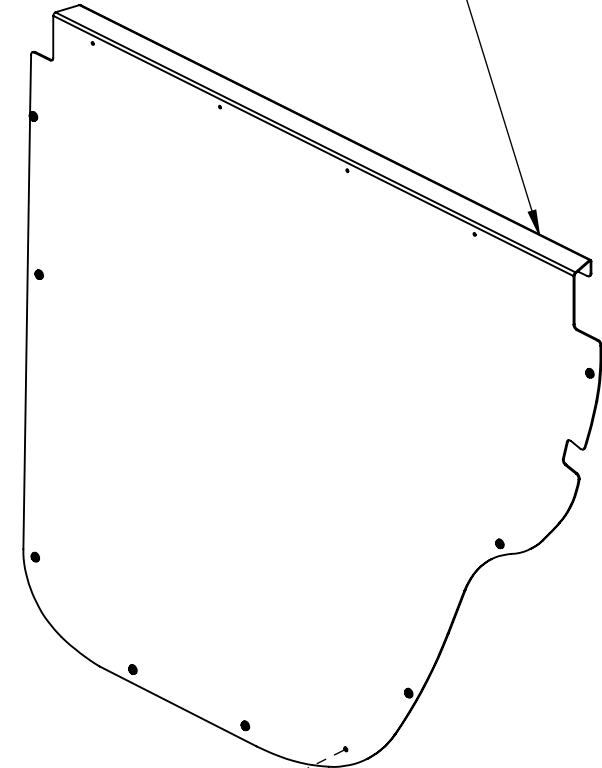

GSM34170
#10 X 3/4" LG PPHSMS

HAVIS HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: INSTALLATION INSTRUCTIONS DOOR PANELS CHEVY TAHOE 2015+		
DO NOT SCALE DRAWING		
SIZE A	DWG. NO. DP-C23-A-INST	REV 10-14
WEIGHT (LB): 5.26	SCALE: 1:8	SHEET 1 OF 1