Havis, Inc.
75 Jacksonville Road
Warminster, PA 18974
T 800-524-9900 F 215-957-0729
www.havis.com

INSTALLATION INSTRUCTIONS
K9-A-110
K9-F28, K9-F28-XL Headliner block off kit

TOOLS REQUIRED:

Standard socket set | 7/16” wrench | #3 Phillips head screwdriver

PARTS and MOUNTING HARDWARE:

QTY	DESCRIPTION	PART#
1	Driver side upper filler panel	KNM010338-DS
1	Passenger side upper filler panel	KNM010338-PS
2	Side filler panel	KNM010366

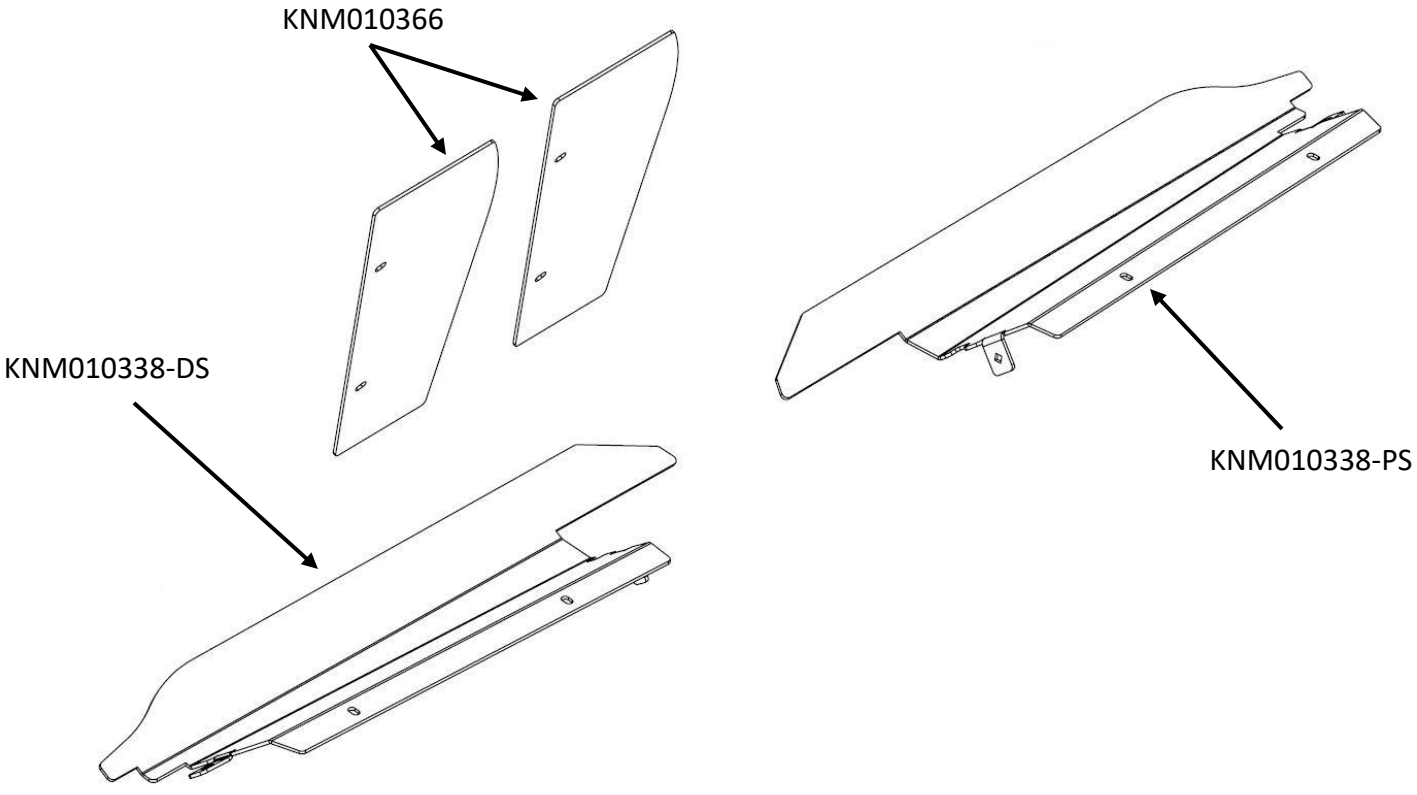

Always!

- Read all instructions before installing any Havis, Inc. products.
- Use hardware provided with install kit

Havis, Inc.
75 Jacksonville Road
Warminster, PA 18974
T 800-524-9900 F 215-957-0729
www.havis.com

Remove upper K9 trim panel

Repeat for other side

For ease of installation of the new filler panel.
Remove the upper fastener from the upper side filler.

Install new upper filler panel using previously removed hardware. Re-install side filler fastener.

Remove side carriage bolts and install side filler panel between bulkhead and support brackets.
Re-install hardware and tighten.
Repeat for other side

Installation is now complete