

## INSTALLATION INSTRUCTIONS K9-A-113 OPTIONAL DIVIDER FOR K9-C25-XL INSERT

### TOOLS REQUIRED:


Phillips screwdriver      7/16" open end wrench      Awl tool

### HARDWARE and PARTS:

| QTY | DESCRIPTION                             | PART#    |
|-----|---|----------|
| 1   | 1/4" Serrated flange nut                | GSM30170 |
| 3   | 1/4" Flat washer                        | GSM31048 |
| 1   | 1/4" X 3/4" Carriage bolt               | GSM32024 |
| 3   | 1/4" X 3/4" Phillips head machine screw | GSM34102 |

### INSTALLATION:

1. Install main K9 insert.
2. Place divider wall assembly inside K9 insert with swing door towards the front.
3. Use Awl or Phillips screwdriver to align four (4) mounting holes.
4. Attach divider to rear bulkhead with 1/4" X 3/4" Phillips screws and flat washers.
5. Attach divider to lower front bulkhead with 1/4" X 3/4" Carriage bolt and nut.
6. Attach divider to upper front bulkhead with 1/4" X 3/4" Phillips screws and flat washers.
7. Tighten hardware and check emergency exit door operation.
8. Cut rubber mat if desired, on either side of divider.

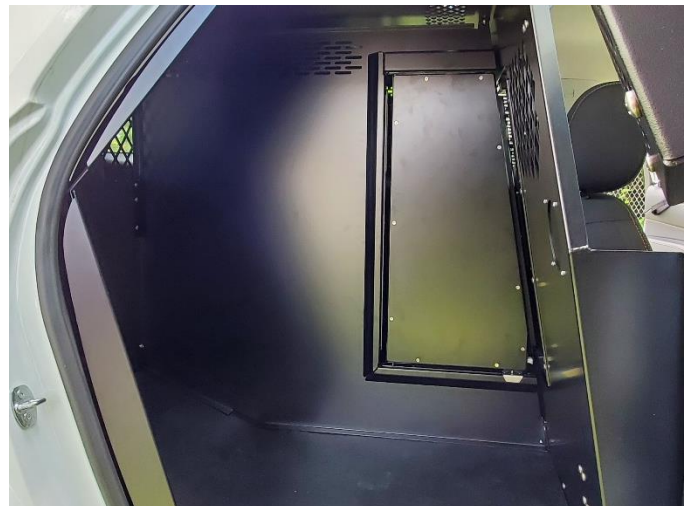

K9-A-113-B