

## INSTALLATION INSTRUCTIONS

### P-REAR-3 Rear Partition with P-MFK-16

For 2015-2020 FORD TRANSIT LOW ROOF VAN  
Eight (8) passenger regular 130" wheel base van

#### TOOLS REQUIRED:

Power Drill	Ratcheting Wrench
Drill Bit set	Phillips Screw Driver
Metric Socket Set	7/16" wrench

#### PARTS & HARDWARE:

QTY	DESCRIPTION	PART#
1	Rear partition assembly	P-REAR-3

#### **P-MFK-16 includes:**


2	Upper support bracket	HS-PA008546
2	Upper mounting bracket	HS-PA99012-1
2	Lower trim panel	HS-PA008551
2	Upper trim panel	HS-PA008552
20	1/4" Serrated nut	GSM30023
20	1/4 x 3/4" Carriage bolt	GSM32000
11	1/4" X 1" Lag screw	GSM33060



### **Always!**

- Read all instructions before installing any Havis, Inc. products.
- **Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!**
  - Use hardware provided with install kit

**P-REAR-3 with P-MFK-16**

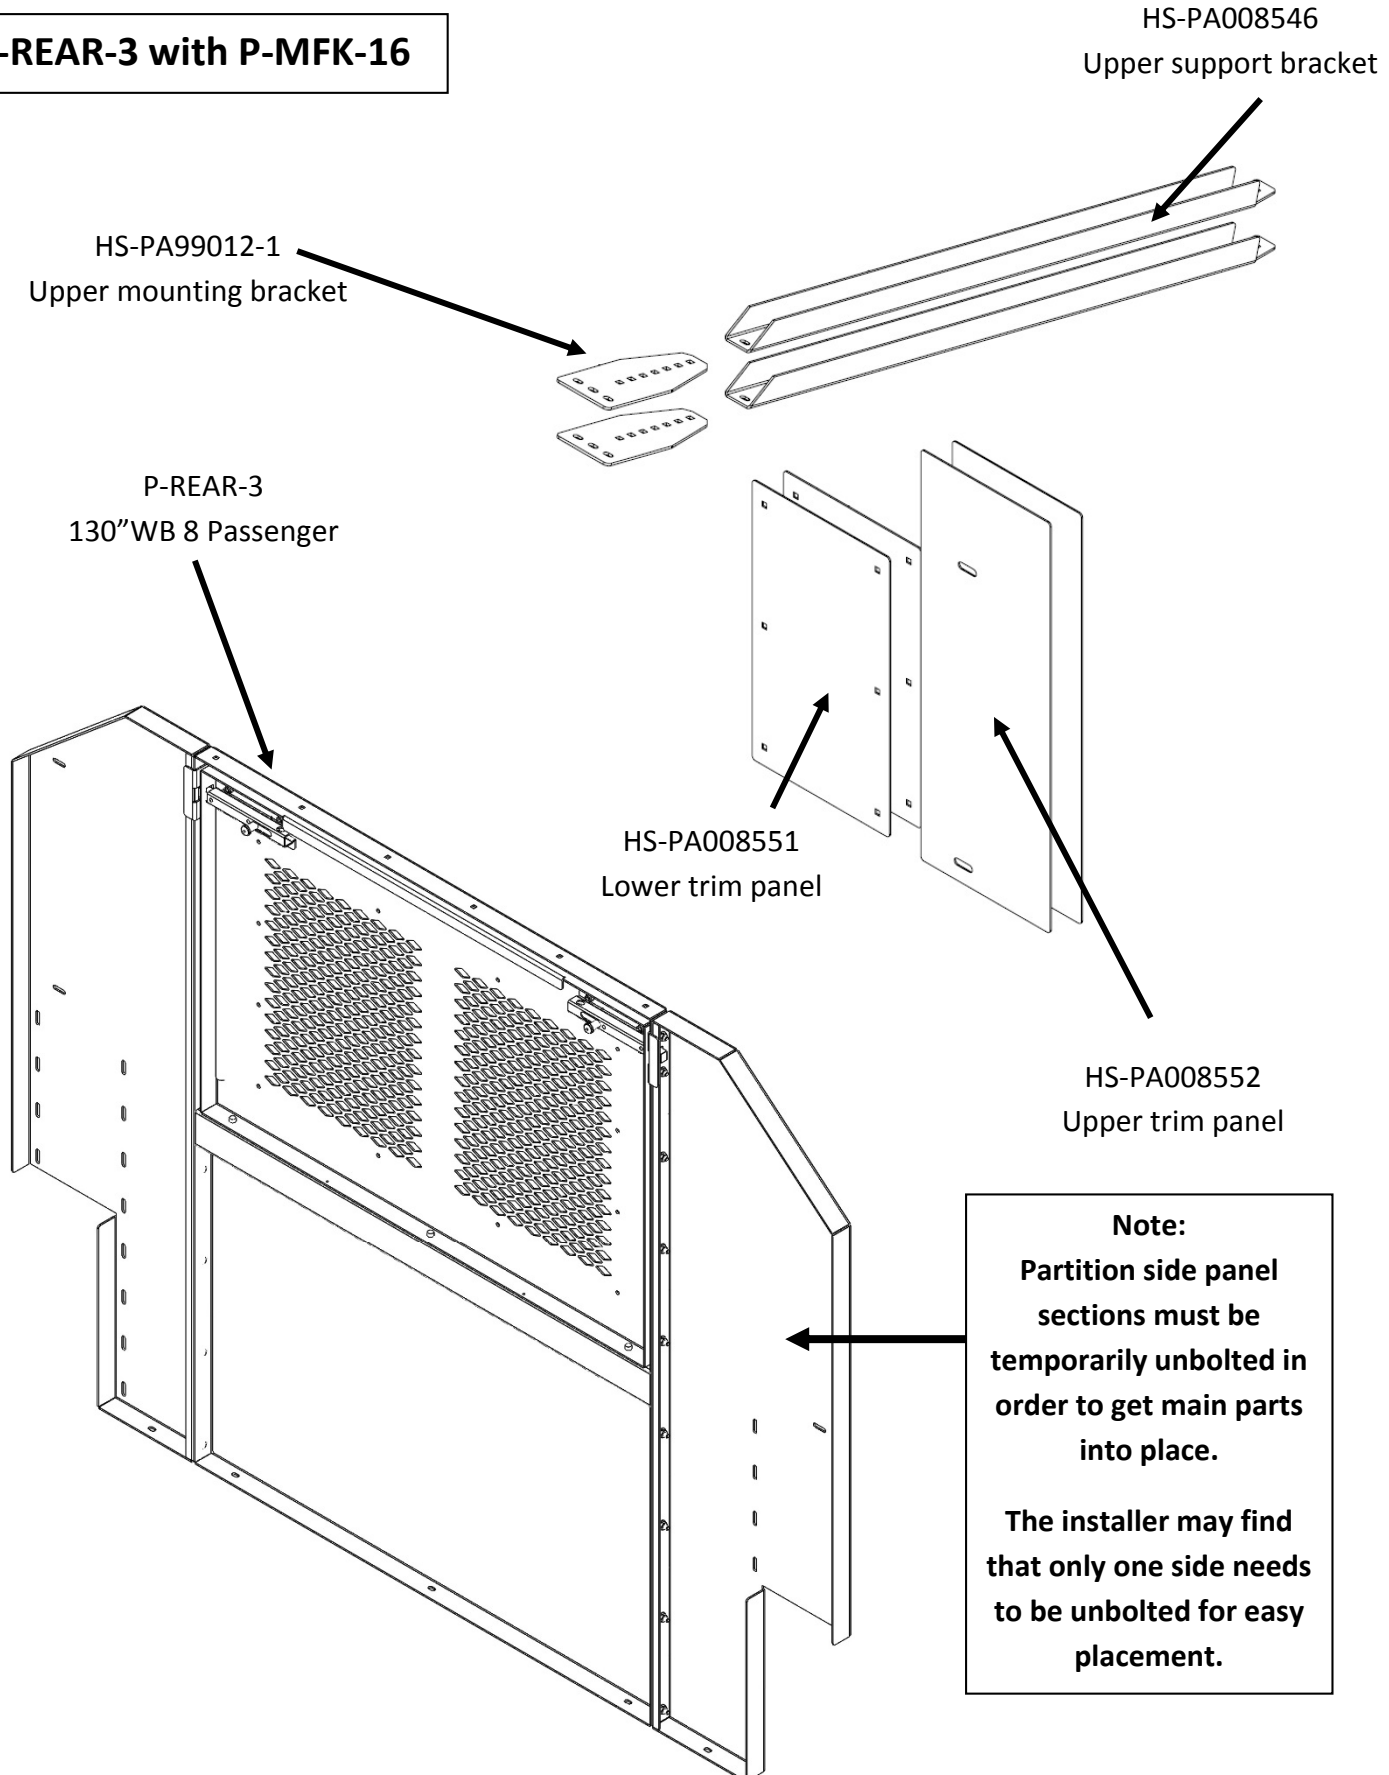

**Note:**  
Partition side panel sections must be temporarily unbolted in order to get main parts into place.  
The installer may find that only one side needs to be unbolted for easy placement.



View of 130" wb 8 passenger van prior to install



Install center of partition into the van.

**Note:** Side panel sections must be temporarily unbolted in order to get main parts into place.



Place upper mounting bracket on the top of partition frame and attach using 1/4" x 3/4" carriage bolt and nut. Repeat process for passenger side



Reattach side panels to center section with 1/4" x 3/4" carriage bolts and nuts. Be sure to also reattach slide bolt reinforcement brackets.



Verify sheet metal above headliner once bracket is lined up using a straight pick tool.



Attach upper mounting bracket to rear door header frame with 1/4" x 1" lag bolts.



Determine lower placement of the partition in relation to the wheel wells



Attach partition to floor with 1/4" x 1" lag bolts.



Attach lower side fillers to front of partition with 1/4" x 3/4" carriage bolts and nuts.



Attach upper and lower side filler panels with 1/4" x 3/4" carriage bolts and nuts. Tighten all hardware.



Completed P-REAR-3 with MFK-16 kit



There will be approximately 48" of storage space behind the partition.