

INSTALLATION INSTRUCTIONS - WBI-C23

2015-2020 Chevy Tahoe Interior Window Guards

(For use with OEM door panels only)

TOOLS REQUIRED:


Drill and drill Bits

Phillips Screwdriver

HARDWARE and PARTS:

QTY:	DESCRIPTION:
1	Driver Side interior Window Guard
1	Passenger Side interior Window Guard
2	Upper Guard Mount Bracket
10	# 10 x 1/2" Phillips flat head SMS

PART #:	
WBI-C23-1	(WBI006834-DS)
WBI-C23-6	(WBI006834-PS)
WGI-MB-20-00	
GSM34150	

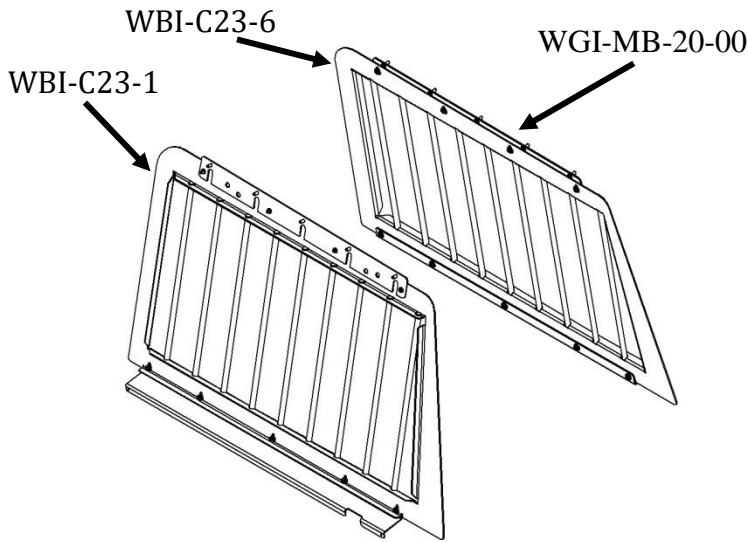

Upper and lower brackets should be attached when shipped.



With upper and lower brackets attached, place guard assembly onto door panel. Guard will hook between panel and rubber.



Mark and drill five (5) 5/32" holes in door / window frame for upper bracket.

Screw upper bracket to door frame with # 10 x 1/2" flat head sheet metal screws.
Tighten hardware



Installation Complete.

To clean windows, unscrew guard from upper bracket.