


PROJECT #	REV.	DESCRIPTION
1860	1-15	RELEASED TO PRODUCTION
2429	6-17	ADDED TWO WASHERS TO CENTER MOUNTING LOCATIONS

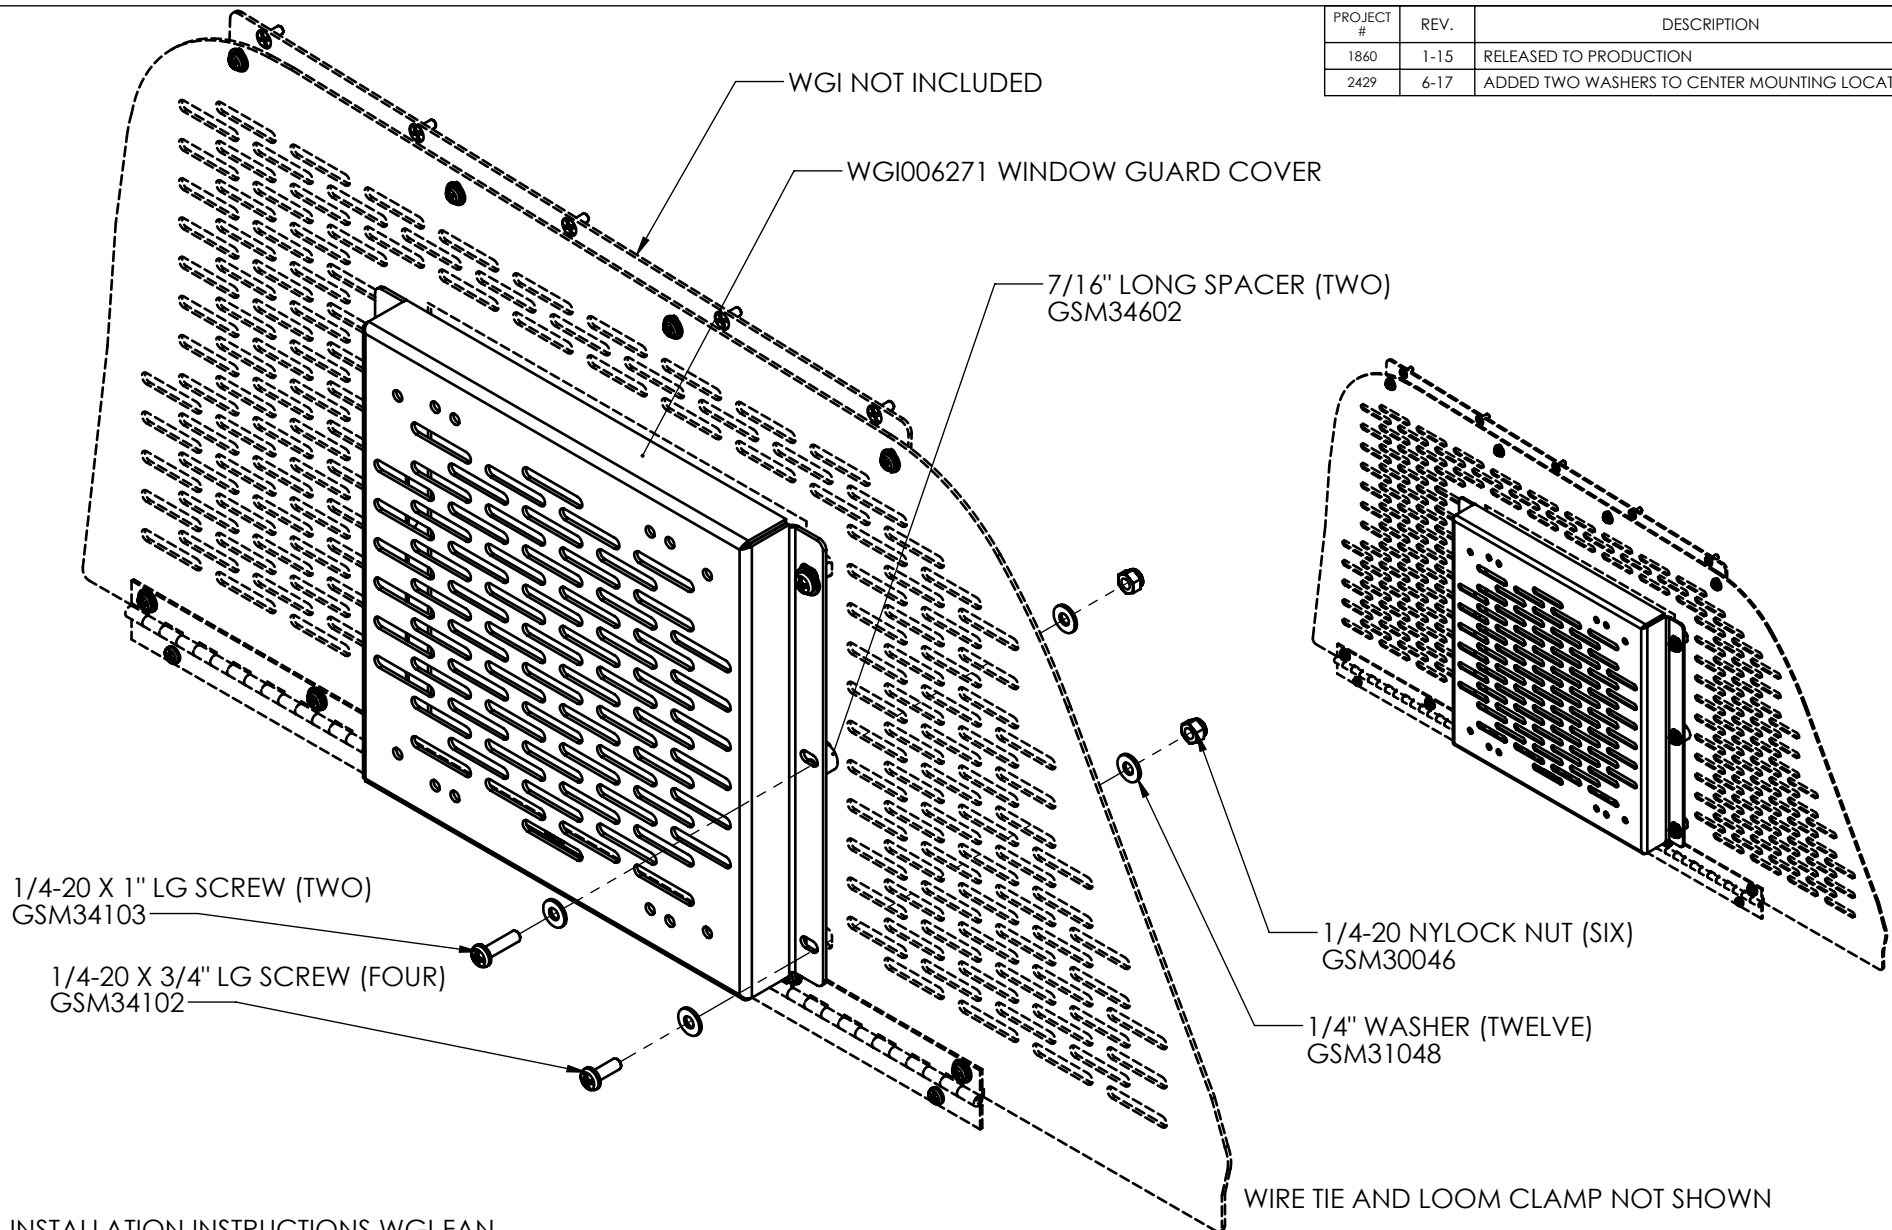

INSTALLATION INSTRUCTIONS WGI-FAN

NOTE: INSTALLER MUST CONTOUR/BEND THE GUARD AS SHOWN IN THE K9 KIT INSTRUCTIONS.

1. ATTACH THE INTERIOR WINDOW GUARD TO THE VEHICLE USING THE INSTRUCTIONS PROVIDED.
2. MOUNT THE FAN USING THE HARDWARE PROVIDED WITH THE FAN TO WGI006271 FAN BRACKET.
3. LOOSELY ATTACH WGI006271 TO THE WINDOW GUARD ON THE FOUR OUTSIDE CORNERS USING 1/4-20 X 3/4" LG PPHMS (FOUR), 1/4" WASHER (EIGHT), 1/4-20 NYLOCK NUT (FOUR).
4. FOR THE CENTER MOUNTING LOCATIONS USE 1/4-20 X 1" (TWO), 7/16" LG SPACER (TWO), 1/4" WASHER (FOUR), 1/4-20 NYLOCK NUT (TWO). THE SPACER GOES BETWEEN WGI006271 AND THE WINDOW GUARD.
5. NEATLY RUN FAN POWER WIRES INTO DOOR PANEL AND THROUGH DOOR JAMB BOOT. USE SUPPLIED LOOM TO COVER EXPOSED WIRE. CLAMP LOOM TO HINGE SCREW AND WIRE TIE TO OEM FAN GUARD.
6. TIGHTEN ALL HARDWARE.

HAVIS HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: WGI FAN INSTRUCTIONS		
DO NOT SCALE DRAWING		
SIZE A	DWG. NO. WGI-FAN-INST	REV 6-17
WEIGHT (LB): 4.36	SCALE: 1:12	SHEET 1 OF 1