

# INSTALLATION INSTRUCTIONS C-VS-0618-INUT

## 24" Console for 2020-2024 Ford Interceptor Utility

**TOOLS REQUIRED:**

Phillips Screw Driver  
 Metric Socket Set

Standard Socket Set  
 Wire Cutters

T-20 Torx Bit  
 Wire Crimping Tool


**PARTS and MOUNTING HARDWARE:**

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART#</u>
1	Rear floor mounting bracket	CM009301-1
1	Driver side front mounting bracket	CM009778-DS
1	Passenger side front mounting bracket	CM009778-PS
2	Lower front cross support	CM009779
1	Parking brake bracket	CM009841
1	Hardware kit	HK-361
<b><i>HK-361 includes the following:</i></b>		
17	1/4" Serrated flange nuts	GSM30023
4	1/4" x 1/2" Carriage bolts	GSM31999
13	1/4" x 3/4" Carriage bolts	GSM32000
3	10-32 x 3/4" Machine screws	GSM33119 (only used for C-VS-1012-INUT console)
3	10-32 x 3/8" Machine screws	GSM33117
3	10-32 Keps nuts	GSM30028
2	#10 Flat washer	GSM31003
4	#8 x 3/8" Phillips flat head screws	GSM33178

**Always!**

- Read all instructions before installing any Havis, Inc. products.
- **Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!**
  - Use hardware provided with install kit

## C-VS-0618-INUT Assembly

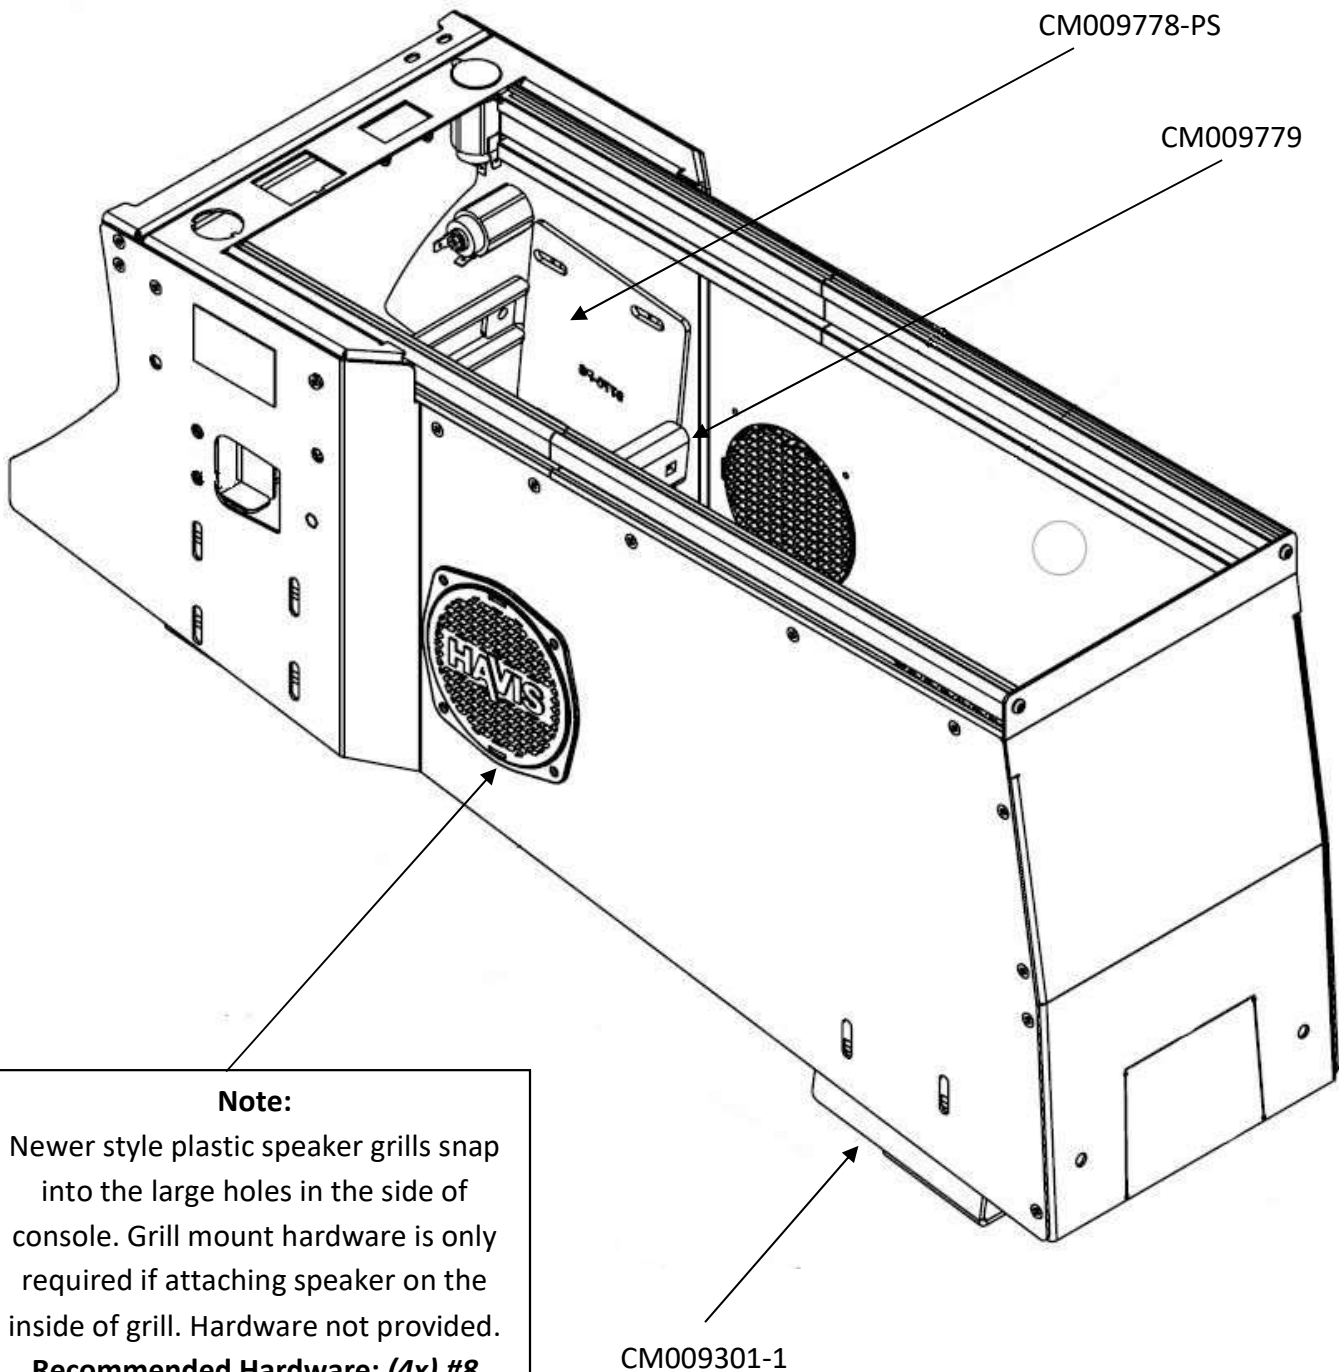

**Note:**

Newer style plastic speaker grills snap into the large holes in the side of console. Grill mount hardware is only required if attaching speaker on the inside of grill. Hardware not provided.

**Recommended Hardware: (4x) #8 Keps nuts, (4x) 8-32 x 3/4" screws**



View of Intercepter Utility before install



Remove OEM tunnel plate by removing rear nuts.

Front nuts only have to be loosened.


The OEM track is slotted at the front. (10mm socket)



Remove fasteners on sides of lower trim.  
(7mm)



Remove lower dash trim by carefully pulling it towards the rear of the vehicle.

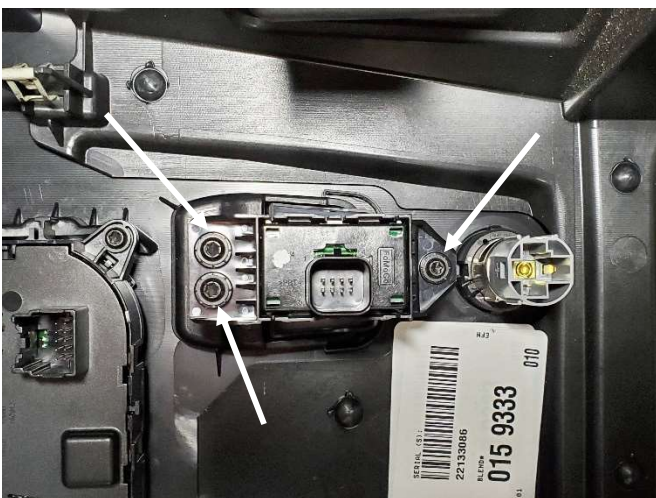

Remove electronic parking brake, 12 v socket and USB retaining bracket. (T-20 fasteners) If vehicle is equipped with rear HVAC the controller will be removed at this time.

*Re-install trim and OEM fasteners into dash.*



Install previously removed electronic emergency brake into side of console using supplied 10-32 x 3/8" machine screws. Add #10 flat washer for spacing between switch mount tab and threaded stud on console side panel.

Washer not used on small bracket stud.

**NOTE: Do not overtighten mount screws.**



Confirm smooth functionality of the emergency brake.




With cross supports detached, slide front mounting brackets under OEM studs from the sides.


**Note: Make sure brackets are below plastic vent and sitting on top of metal floor.**



Attach front and rear forward cross supports using (4) 1/4" x 1/2" carriage bolts and nuts.

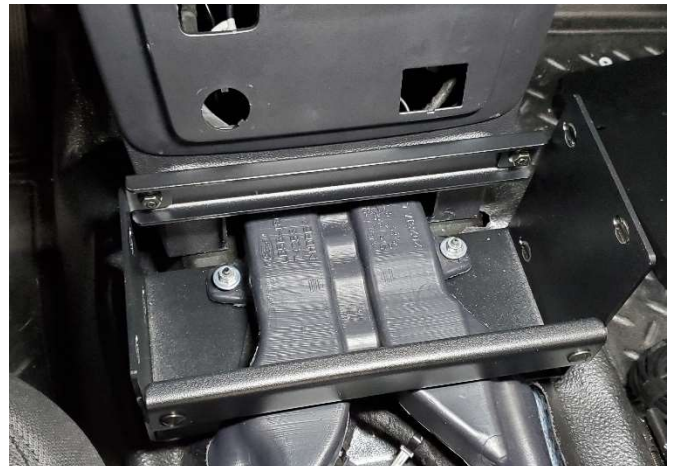

Tighten OEM nuts.  
(10 mm socket)

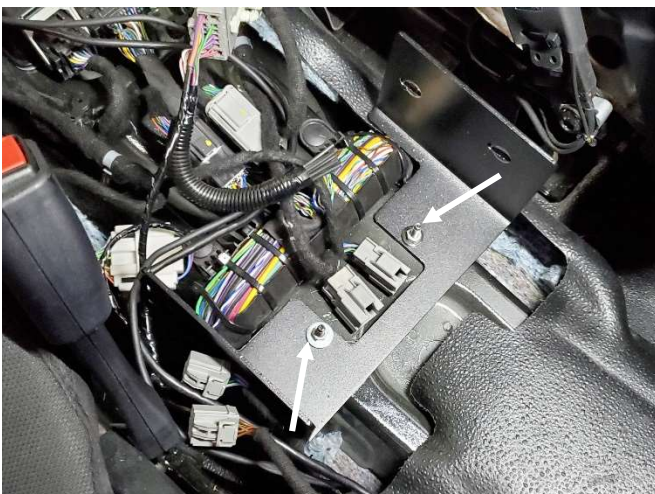

Attach rear mounting bracket to floor using previously removed OEM hardware. (10mm



Slide console housing over floor mounting brackets and push tight to dash.



Attach housing to **front** brackets with 1/4" x 3/4" carriage bolts and serrated nuts.



Repeat process for other side.



Attach housing to rear bracket with 1/4" x 3/4" carriage bolts and serrated nuts. Tighten all hardware.



Relocate OEM 12 volt socket and USB into console.  
Wire and install equipment as needed.  
Installation is now complete.



Views showing optional C-CUP-1001 cup holder,  
C-PM-124 printer mount and C-DMM-3015 dash  
mount with Tablet docking station.

