

INSTALLATION INSTRUCTIONS C-VS-1900-DUR-PM

19" Vehicle specific printer mount console for

2021-2024 Durango Pursuit (without center console)

Notes: Does not fit Pursuit vehicle with interior upgrade console or Retail and SSV Durango with console "T" shifter.

Brother Printer not included

TOOLS REQUIRED:


Metric Socket set
Standard Socket set

T20 Torx driver

Trim panel removal tool

PARTS and MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART#</u>
1	Front mounting bracket	25149
1	Rear mounting bracket	23700
8	1/4" x 3/4" Carriage bolt	16223
8	1/4" Serrated nut	16013

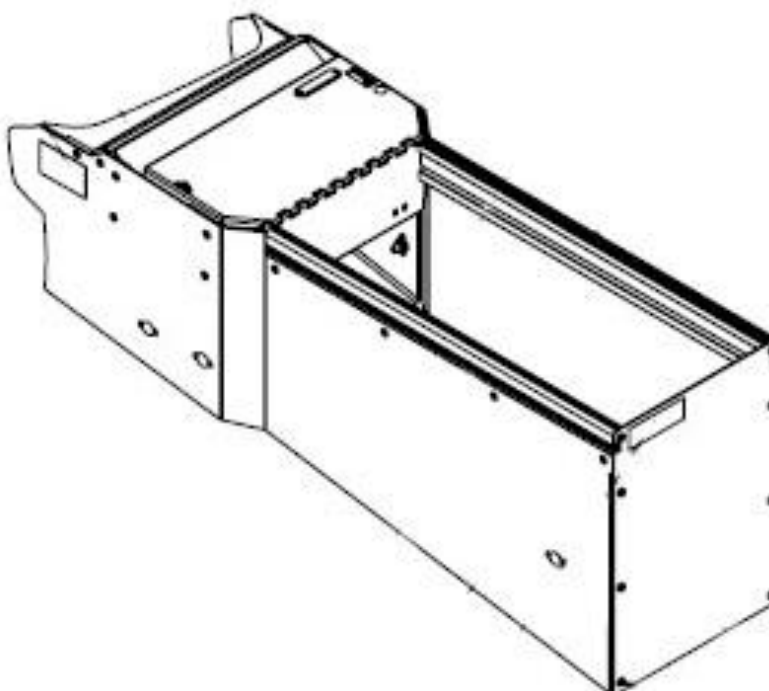

Always!

- Read all instructions before installing any Havis, Inc. products.
- Use hardware provided with install kit



Remove the OEM tunnel plate from the center.
Retain the (4) 10mm head bolts for later use.



Remove the nut for the factory ground wire and
unclip harness.



Slide forward mounting bracket under OEM
harness and ground stud.



Once the bracket has been slid under the harness,
reinstall ground wire back onto stud using previously
removed nut.



Line front of bracket up to center dash. Attach
using previously removed 10mm head fasteners.



Place rear mounting bracket over rear
mounting tabs.



Attach rear mounting bracket using previously removed 10mm head fasteners.



Place console housing over front and rear mounting brackets and slide towards dash.



Attach rear of console to rear mounting bracket with 1/4" x 3/4" carriage bolts and serrated nuts.



Attach passenger side of console to front mounting bracket with 1/4" x 3/4" carriage bolts and nuts.



Attach driver side of console to front mounting bracket with 1/4" x 3/4" carriage bolts and nuts.



Run wiring for printer through left side of printer bracket opening.



Install Brother PocketJet 7 and paper roll into printer holder.



Wire and install all equipment.



C-VS-1900-DUR-PM console shown with C-DMM-3024, TSD-201 and PKG-KB-208.



C-VS-1900-DUR-PM console shown with PKG-MD-ARM-0603 and PKG-KB-208.



C-VS-1900-DUR-PM console shown with C-MD-119 and C-HDM-204.



C-VS-1900-DUR-PM console shown with C-DMM-3024, PKG-MD-ARM-0603 and PKG-KB-208.