

## INSTALLATION INSTRUCTIONS Vehicle Specific Console C-VSW-3000-F150-3 (30" inches of Equipment mounting space)

OR

## C-VSW-2400-F150-1 (24" inches of Equipment mounting space)

\* Either console does not work with 4 X 4 floor shifter or higher trim level trucks with full length center console\*

**For 2021-2024 for Ford F-150 Responder and SSV Pickup  
 2023-2024 Ford F-250, 350, 450 XL and XLT Super Duty pickup,  
 F-450 & 550 cab chassis and F-600 Chassis Cab**

**TOOLS REQUIRED:**

Phillips Screw Driver  
 Metric Socket set

Standard Socket set  
 7/16" Wrench

T-20 Torx Bit

**INSTALLATION PARTS AND MOUNTING HARDWARE:**

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART#</u>
1	Ford small Aux panel adaptor	13071
1	Small Aux blank panel	13072
1	O-RING 1-9/16"ID X 1-3/4"OD X .093	16214
2	#8-18 X 3/8 PFHMS	16425
1	1/4" Hex nut kit	25520 (includes 12 nuts)
2	Speaker grill	23047

**Parts already attached to console housing**

1	Front floor mounting bracket	12884
1	Rear floor mounting bracket	12865 (C-VSW-3000-F150-3)
1	Rear floor mounting bracket	26086 (C-VSW-2400-F150-1)
1	Front console trim panel	38459
1	Forward corner pole knockout/AUX filler panel	12870
1	Electrical accessory mounting plate	12890

**Notes:**

- 1. Not all vehicles include an OEM 12 volt socket in front lower dash, but do include a Hook shaped plastic plug that can be relocated to new console instead.**


**Always!**

- Read all instructions before installing any Havis, Inc. products.
- Use hardware provided with install kit

**C-VSW-3000-F150-3**  
30" Assembly shown

Front console trim panel  
22995

(Includes cutouts for OEM 12 volt socket and media hub relocation) **See note 1 on page 1.**

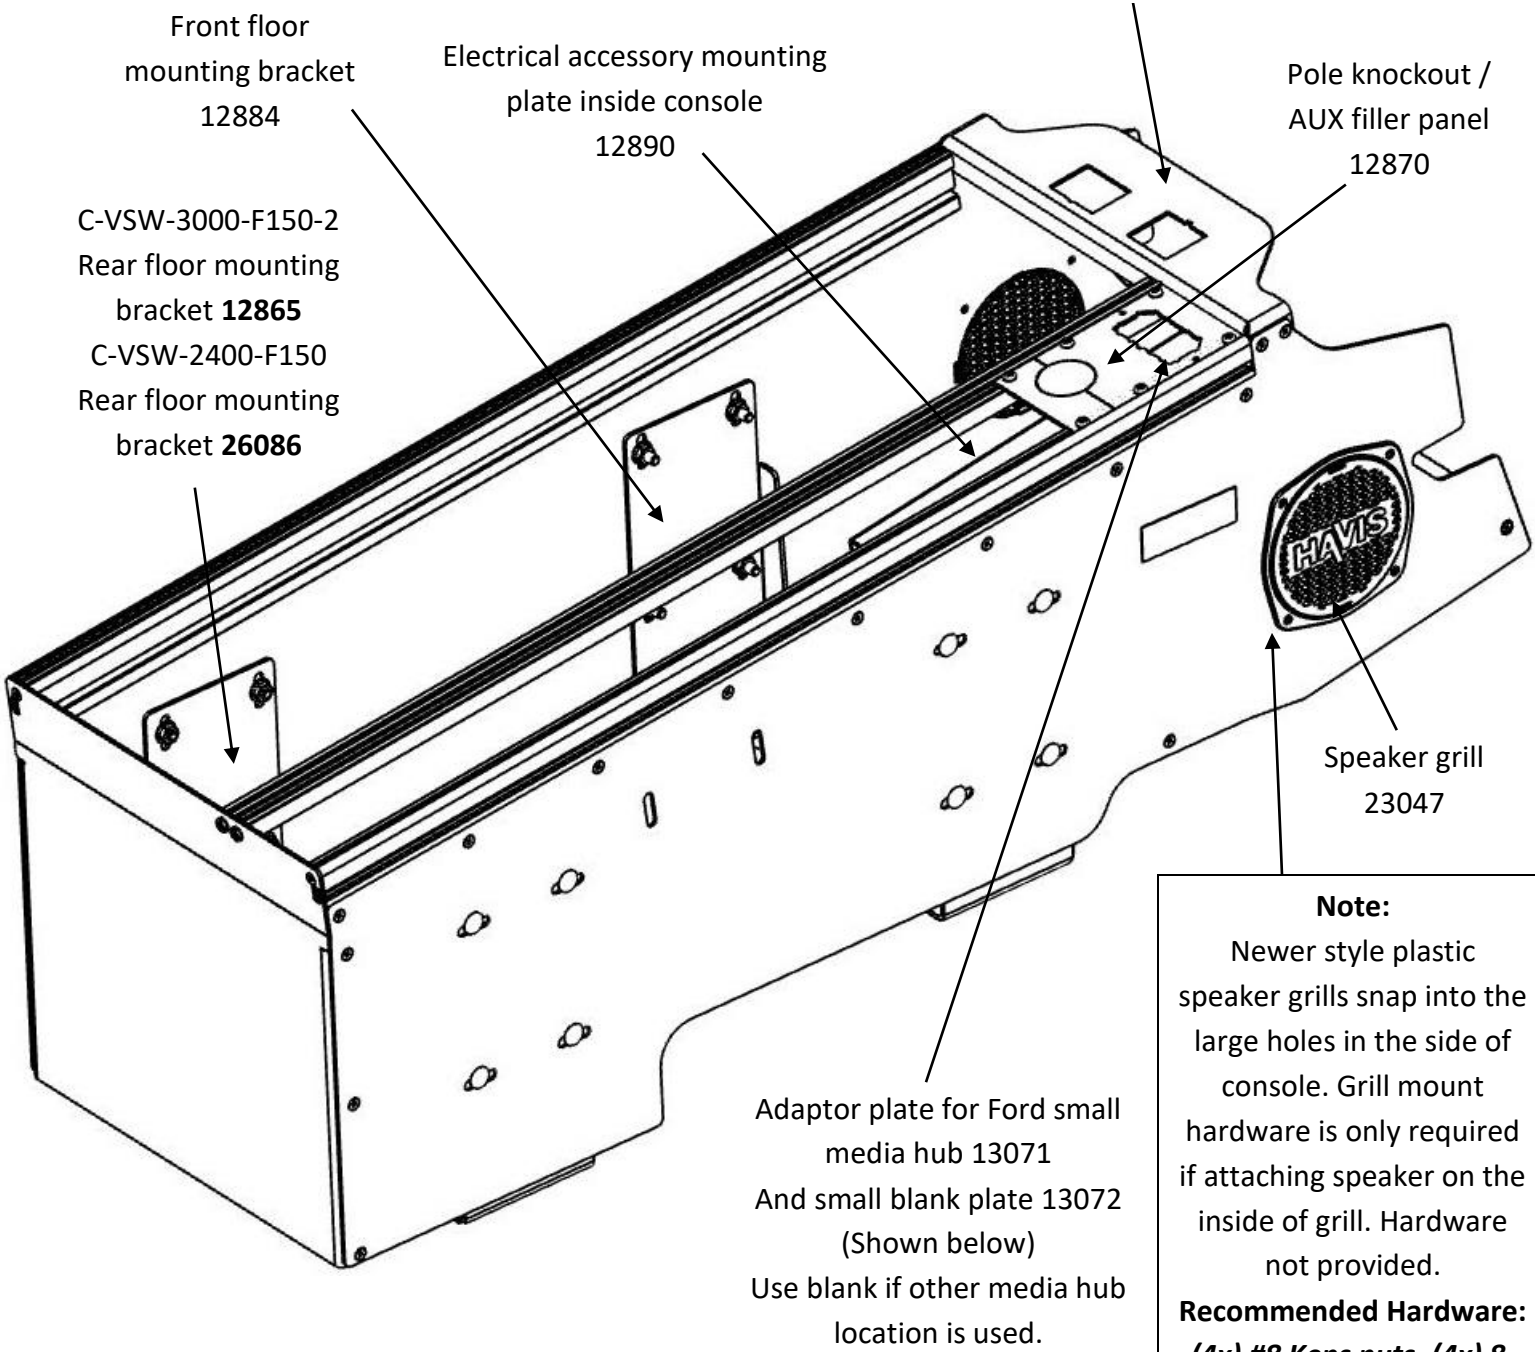

**Note:**  
Newer style plastic speaker grills snap into the large holes in the side of console. Grill mount hardware is only required if attaching speaker on the inside of grill. Hardware not provided.  
**Recommended Hardware:**  
**(4x) #8 Keps nuts, (4x) 8-32 x 3/4" screws**





Remove factory center seat or mini console.

**Note: Seat belts (for center seat) must be left in vehicle and plugged back into OEM harness. Wire tie seat belts out of the way as desired.**



Unbolt factory bolts and save for later.

18mm socket



**NOTE:** Some vehicles include an OEM SmartLink / Telematics module mounted to transmission hump using the same bolts needed for the rear console bracket.

The OEM module must be unbolted and simply relocated under console by installer as desired. Relocating OEM module will not affect OEM system.



Remove OEM AUX module and 12 volt socket from dash and save to be reused.

**See note 1 on page 1.**



Place console with floor mount brackets into the vehicle.  
Shown with optional 3.3 wide panels and pocket.



Slide console forward until the mounting brackets line up with the OEM mounting points in floor.




Loosely reinstall factory floor bolts through console floor brackets.



Install OEM AUX module into the console. Adaptor plate with #8 flat head screws provided for smaller Aux module. Blank plate provided if vehicle has no module for this location



Main Housing installation is now complete. Install and wire equipment as desired.

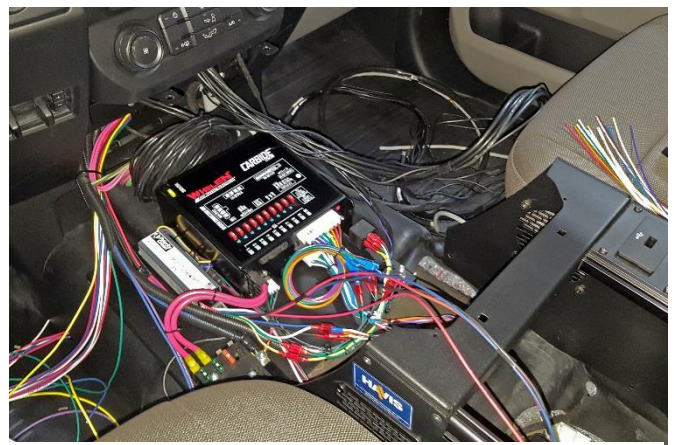

Electrical accessory mounting plate shown. Unbolting and sliding console back for component installation is recommended.



Console installation complete. C-VSW-3000-F150-3 shown.



Console with computer installation complete.