Havis, Inc.
75 Jacksonville Road
Warminster, PA 18974
T 800-524-9900 F 215-957-0729
www.havis.com

INSTALL INSTRUCTIONS C-TMW-ECO-01

1997 – 2014 FORD E-150, 250 & 350 VAN
1997 – 2020 FORD E-450 Cutaway Chassis
TUNNEL MOUNT KIT

TOOLS REQUIRED:

Ratcheting Wrench
Standard Socket Set
T-55 Torx Bit
7/16" wrench
Tape Measure and pencil

HARDWARE:

QTY	DESCRIPTION	PART #
20	¼" x ¾" Hex head bolt	GSM33001
8	¼" Serrated nut	GSM30023
12	¼" Flat washer	GSM31005
12	¼" Split lock washer	GSM31026
4	¼" Hex Nut	GSM30005

Always!

- Read all instructions before installing any Havis, Inc. products.
- Use only hardware provided with install kit.

NOTE: Additional ¼" hardware provided to mount C-HDM-200 Series Poles to C-TMW Series

TUNNEL MOUNT ASSEMBLY

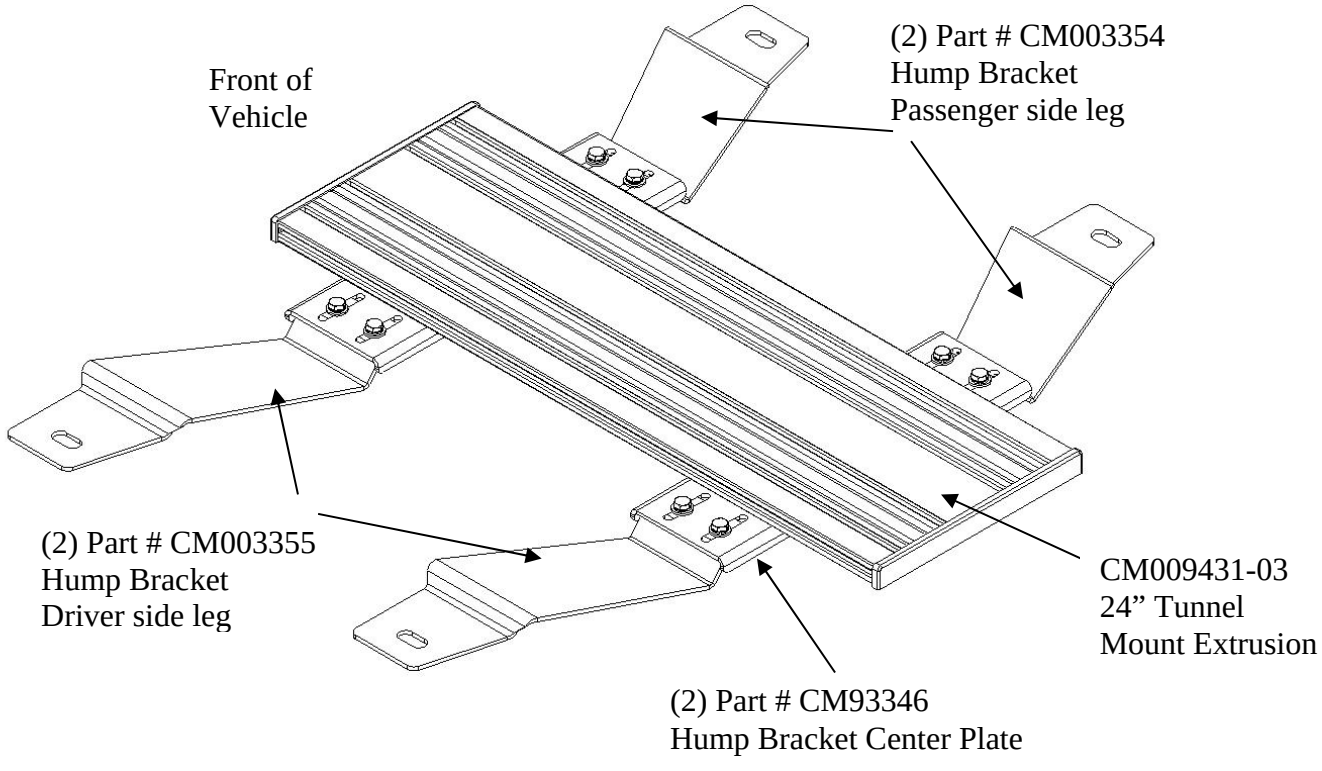

Remove the Front and Rear inboard seat bolts.
(Bolts closest to center of vehicle)
T-55 Torx bit needed.

Place passenger side forward leg in position between the floor and seat base.
Re-attach seat bolt. Do not tighten bolt yet.
Repeat on driver side forward leg.

Place passenger side rear leg in position between the floor and seat base.
Re-attach seat bolt. Do not tighten bolt yet.
Repeat on driver side rear leg.

Loosely attach center plates to legs with ¼” x ¾” hex head bolts and flat washers.
Note: You may want to remove these plates to attach the extrusion hardware in the next step.

Attach Tunnel Extrusion to center plates with ¼” x ¾” hex head bolts and serrated nuts.
Note: The head of the bolt slides into the bottom of extrusion.

Position extrusion as desired and tighten all hardware.
The C-TMW-ECO-01 is now ready to mount a console or other accessories.
The self adhesive plastic end caps go on after the top mounted hardware is inserted into extrusion slots.