CLIP DETAILS

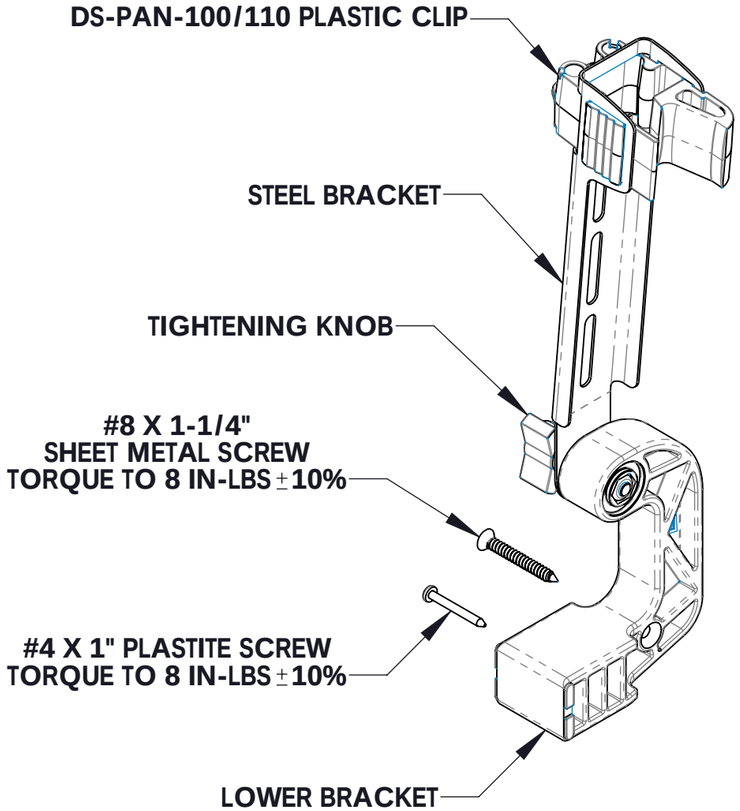

INSTALLATION INSTRUCTIONS:

DS-DA-409 MUST BE ATTACHED TO THE LEFT-HAND (DRIVER'S) SIDE OF THE DOCKING STATION:

STEP 1. - INSERTING YOUR CLIP
INSERT THE CLIP BY HAND INTO THE STEEL BRACKET AS SHOWN; CLIP WILL SNAP INTO WINDOWS OF THE STEEL BRACKET. *BE CAREFUL NOT TO OVERBEND EITHER PIECE. THIS COULD CAUSE BREAKAGE.* IF NECESSARY, USE A PAIR OF PLIERS WITH SOFT, PROTECTED JAWS AND APPLY PRESSURE IN THE LOCATIONS NOTED IN THE DIAGRAM TO ASSIST IN THE INSERTION.

STEP 2. - ATTACHING DS-DA-409 TO DOCK
REFER TO THE DIAGRAM TO AID IN THIS PROCESS.

CF-28, CF-29, AND CF-30 WITH "L" CLIP
ALIGN COUNTER-SUNK HOLE OF THE LOWER BRACKET WITH THE COUNTER-SUNK HOLE OF THE DOCK SIDEMEMBER AS SHOWN IN STEP 2; INSERT #8 X 1-1/4" SCREW INTO LOWER BRACKET. TIGHTEN THE #8 X 1-1/4" SCREW TO FASTEN THE LOWER BRACKET TO THE SIDEMEMBER. NEXT, SCREW THE #4 X 1" PLASTITE SCREW THRU THE SMALL HOLE AT THE FRONT OF THE LOWER BRACKET AND INTO THE SMALL HOLE IN THE SIDEMEMBER OF THE DOCK. TIGHTEN BOTH FASTENERS TO 8 INCH-LBS ±10%.

STEP 1. INSERTING YOUR CLIP

(FOR USE WITH NIGHT EYES LIGHT, REFER TO USB-POWERED NIGHT EYE INSTALLATION INSTRUCTIONS)

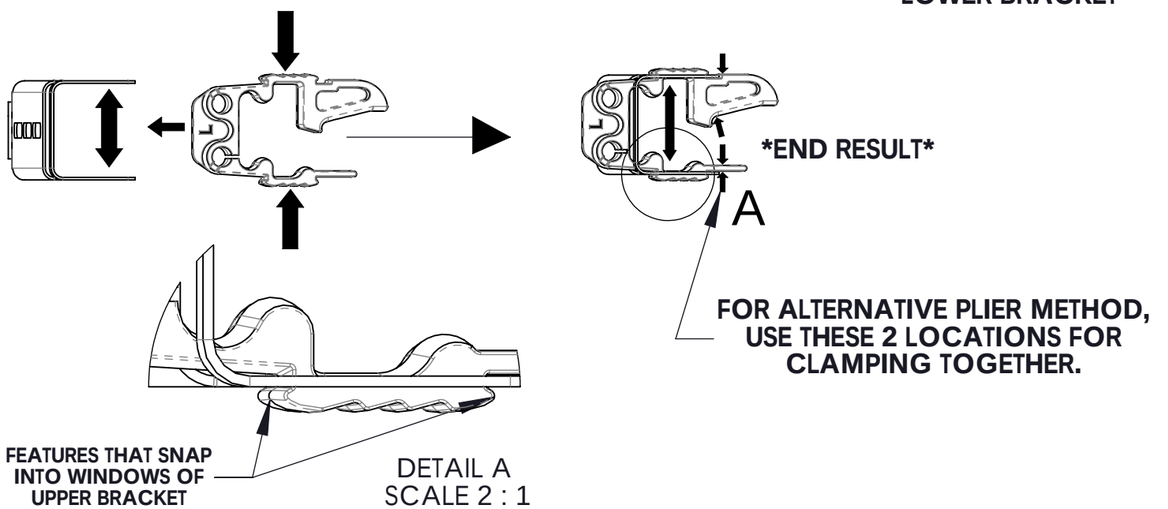

STEP 2. ATTACHING DS-DA-409 TO DOCK

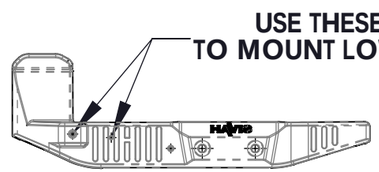

DS-PAN-100/110 SIDE MEMBER

HARDWARE KIT CONTENTS:

DESCRIPTION	QTY.
PLASTITE SCREW - #4 X 1" - PAN HEAD	1
SHEET METAL SCREW - #8 - 1-1/4" L - FLAT HEAD	1

DRAWING NUMBER:
DS-DA-409_INST (SHEET 1/2)

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

PRODUCT DESCRIPTION

TO BE USED IN CONJUNCTION WITH DS-PAN-100 AND 110 SERIES DOCKING STATIONS.

PRODUCT I.D.
DS-DA-409

DATE
12-14-10

PRODUCT NAME
SCREEN STIFFENER ASSEMBLY

HAVIS
1-800-524-9900
WWW.HAVIS.COM

WEIGHT: (LBS)
0.38

REV. DATE

F-730-019 REV A

SCREEN STIFFENER
INSTALLATION DO'S AND DON'TS

DO:

1) UNDERSTAND HOW YOUR VEHICLE'S AIRBAG DEPLOYS. CHECK WITH THE VEHICLE MANUFACTURER OR CALL **HAVIS** FOR ASSISTANCE.
2) INSTALL IN AN "AIR BAG SAFE" ZONE; TYPICALLY, THE LEFT-HAND (DRIVER'S) SIDE OF THE DOCK.
3) IF YOU PLAN TO USE THE STYLUS HOLDER IN THE SCREEN STIFFENER HEAD, CONNECT THE STYLUS TO A FIXED PORTION OF THE COMPUTING SYSTEM WITH A TETHER NO GREATER THAN FIVE INCHES LONG.

DON'T:

1) MOUNT YOUR SCREEN STIFFENER IN FRONT OF A ZONE WHERE AN AIR BAG COULD DEPLOY.
2) USE THE STYLUS HOLDER TO STORE ITEMS WHICH ARE NOT PROPERLY TETHERED TO A FIXED PORTION OF THE COMPUTING SYSTEM.

Ford Crown Victoria Example: Recommended Screen Stiffener Installation Zone

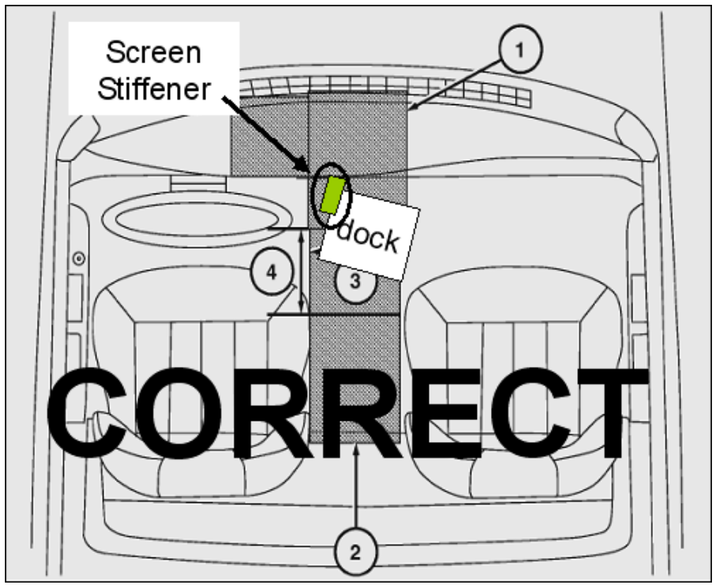

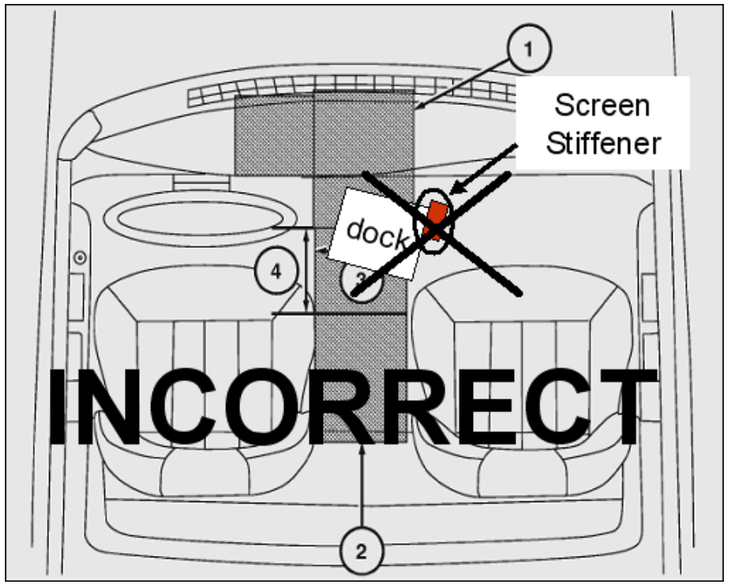

Dark gray area indicates region that is completely out of airbag deployment zone

(1) Area on top of instrument panel. **Equipment must not interfere with driver visibility.**
(2) Area on tunnel between seats
(3) 229 mm (9 in)
(4) 305 mm (12 in)

For illustration purposes

10.4.2007

SOURCE -
FORD MOTOR COMPANY / **HAVIS** STUDY

DRAWING NUMBER:
DS-DA-409_INST (SHEET 2/2)

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

PRODUCT DESCRIPTION

TO BE USED IN CONJUNCTION WITH DS-PAN-100 SERIES DOCKING STATIONS.

PRODUCT I.D.	DATE
DS-DA-409	**12-14-10**

PRODUCT NAME
SCREEN STIFFENER ASSEMBLY

HAVIS
1-800-524-9900
WWW.HAVIS.COM

WEIGHT: (LBS) **0.38**

REV. DATE

F-730-019 REV A