# INSTALLATION INSTRUCTIONS MH-3002, PKG-MH-3002
# Universal Barcode scanner mount

**TOOLS REQUIRED:**

7/16" wrench          Phillips screwdriver          Standard socket set
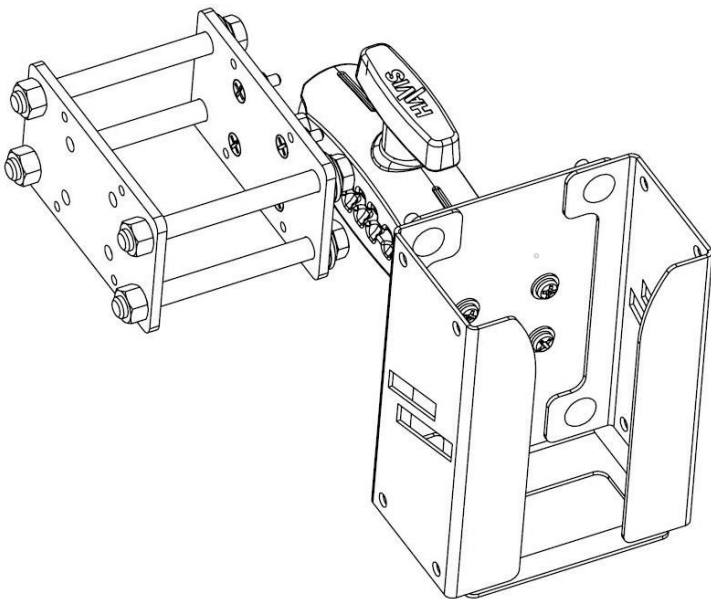
### MH-3002 - HARDWARE

| QTY | DESCRIPTION | PART# |
|---|---|---|
| 8 | 1/4" serrated nut | GSM30170 |
| 4 | 1/4" x 2.5" Carriage bolt | GSM32005 |
| 4 | 1/4" x 4" Carriage bolt | GSM32023 |
| 4 | 1/4" x 1/2" Carriage bolt | GSM32040 |

### PKG-MH-3002 - HARDWARE

| QTY | DESCRIPTION | PART# |
|---|---|---|
| 4 | 3/8" Hex nut | GSM30008 |
| 4 | 3/8" Flat washer | GSM31010 |
| 4 | 3/8" Lock washer | GSM31028 |
| 4 | 3/8" x 4" Bolt | GSM33037 |

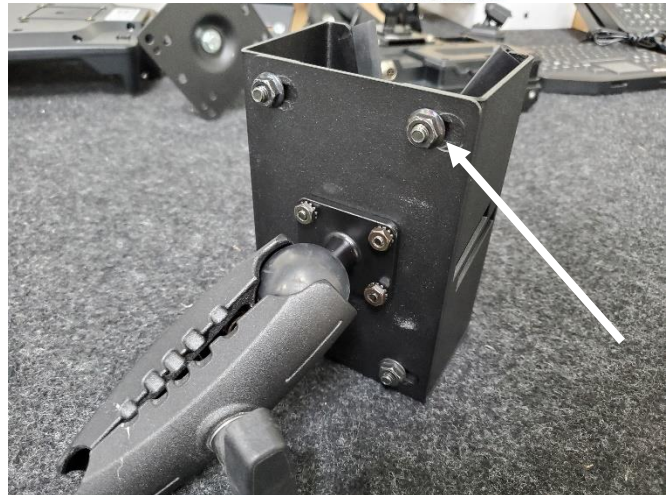PKG-MH-3002                                 MH-3002
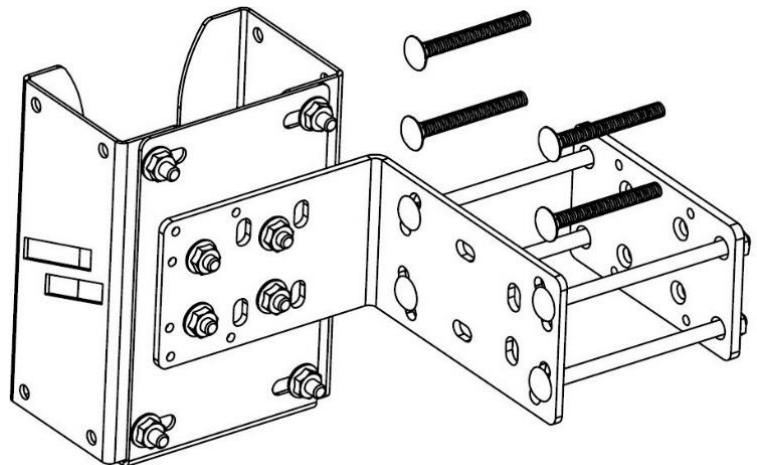


## Always!

➤ Read all instructions before installing any Havis, Inc. products.

➤ **Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!**

➤ Use hardware provided with install kit

Determine orientation of mount on forklift and attach rear "L" bracket accordingly using (4) 1/4" x 1/2" carriage bolts and serrated nuts.



Determine width of scanner and adjust cradle by loosening serrated nuts at corners of mount.



Clamp cradle to forklift with backing plate and supplied bolts and nuts.



Excess bolt threads can be removed if desired by using a cut off wheel.



Determine the best location for ease of use and tighten handle.



Installation is now complete.