

# INSTALLATION INSTRUCTIONS PT-A-910

## Prisoner Transport Thermometer

### TOOLS REQUIRED:


Power drill                      Wrench set                      Safety goggles  
5/16" drill bit                  Phillips screwdriver

### PARTS and HARDWARE SUPPLIED:

1	Dual Display Thermometer	PRM97500
1	Temp probe cover / guard	KKM99043
1	2" x 2" Velcro Hook	AB-15-0405
1	2" x 2" Velcro Loop	AB-15-0406
4	#10 x 3/4" Phillips pan head sheet metal screw	GSM33195

### INSTALLATION INSTRUCTIONS:

1. Install one (1) CR2025 battery into Digital read out display.
2. Use buttons on back of display and adjust settings as desired.
3. Mount digital read out display with 2" x 2" Velcro. The temperature probe wire length will limit display location. Front upper side of bulkhead is recommended.
4. Drill small hole in desired location of prisoner compartment ceiling to fit probe through. (5/16" diameter recommended).
5. Drill four (4) holes to mount 2" x 3" temperature probe cover / guard.
6. Run rear probe wire from digital read out display to rear mount / vented guard location.
7. Attach probe on the protected side of guard with a wire tie.
8. Digital read out display has probe built in for drivers compartment temperature sensing.
9. Display will show front and rear temperature.

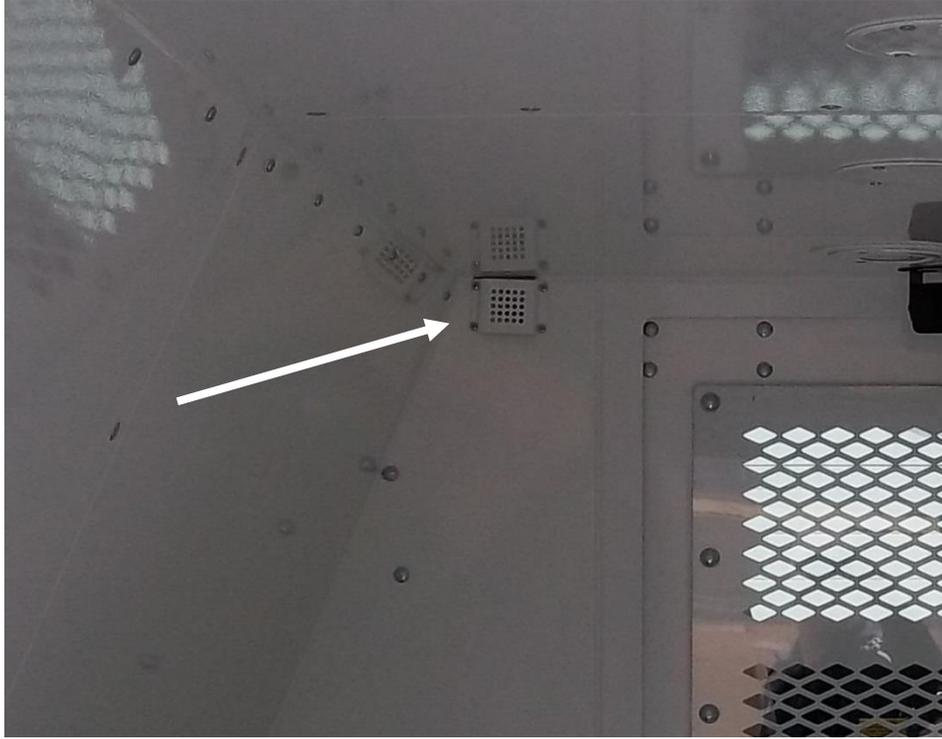

Rear temperature probe cover / guard



Digital read out display mounted to PT insert front bulkhead